

# **EXPLORER 510**

**User manual**



**Document number:** 98-143082-J

**Release date:** 31 October 2025

## **Disclaimer**

Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by Thrane & Thrane A/S. The information in this manual is provided for information purposes only, is subject to change without notice and may contain errors or inaccuracies. Manuals issued by Thrane & Thrane A/S are periodically revised and updated. Anyone relying on this information should acquire the most current version e.g. from the partner portal at <https://partnerportal.cobhamsatcom.com/eshop/downloads>, or from the distributor. Thrane & Thrane A/S is not responsible for the content or accuracy of any translations or reproductions, in whole or in part, of this manual from any other source. In the event of any discrepancies, the English version shall be the governing text.

Thrane & Thrane A/S is trading as Cobham Satcom.

## **Copyright**

© 2025 Thrane & Thrane A/S. All rights reserved.

## **Manufacturer address**

Thrane & Thrane A/S, Lundtoftevej 160, DK-2800, Kgs. Lyngby, Denmark

## **Trademark acknowledgments**

- **Inmarsat** is a registered trademark of the International Maritime Satellite Organisation (IMSO) and is licensed by IMSO to Inmarsat Limited and Inmarsat Ventures plc.
- Other product and company names mentioned in this manual may be trademarks or trade names of their respective owners.

## Safety summary

The following general safety precautions must be observed during all phases of operation, service and repair of this equipment. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture and intended use of the equipment. Cobham Satcom assumes no liability for the customer's failure to comply with these requirements.



**WARNING!** This equipment is not suitable for use in locations where children are likely to be present.

### **Do not operate in an explosive atmosphere**

Do not operate the equipment in the presence of flammable gases or fumes. Operation of any electrical equipment in such an environment constitutes a definite safety hazard.

### **Keep away from live circuits**

Operating personnel must not remove equipment covers. Component replacement and internal adjustment must be made by qualified maintenance personnel. Do not replace components with the power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

### **Do not service alone**

Do not attempt internal service or adjustments unless another person, capable of rendering first aid resuscitation, is present.

### **Do not substitute parts or modify equipment**

Because of the danger of introducing additional hazards, do not substitute parts or perform any unauthorized modification to the equipment.

### **Keep away from antenna front**

This device emits radio frequency energy when switched on. To avoid injury, keep a minimum safety distance of 1 m from the antenna front when the EXPLORER 510 is on.



### **Garder à l'écart de l'avant de l'antenne**

Le présent appareil émet des radiofréquences lors de son utilisation. Afin d'éviter tout risque pour la santé, une distance minimale de 1m est nécessaire entre l'utilisateur et l'avant de l'EXPLORER 510.

### **Only use approved batteries from Cobham Satcom**

Use of non approved batteries may result in explosion, fire, electrical shock or injury.

### **Observe marked areas**

Under extreme heat conditions do not touch areas of the EXPLORER 510 that are marked with this symbol, as it may result in injury.



### **Cyber security**

For security reasons, ensure that you are using the latest version of the manual and have the latest software version installed on your device. Both can be found in the Cobham Satcom Partner Portal <https://partnerportal.cobhamsatcom.com/eshop/downloads>.

**Do not** connect the terminal directly to **unsecured devices**. Route all traffic through a firewall or similar

## Antenna safety instructions

**Use only manufacturer supplied antennas.**

**Antenna minimum safe distance:** 1 m

### Antenna gain

Directional, with maximum gain of 11 dBi (with reference to isotropic).

The Federal Communications Commission has adopted a safety standard for human exposure to RF (Radio Frequency) energy which is below the OSHA (Occupational Safety and Health Act) limits.

### Antenna mounting

The antenna supplied by the manufacturer must be located such that during radio transmission, no person or persons can come closer than the above indicated minimum safe distance to the front face of the antenna, i.e. 1 m.

L'antenne fournie par le fabricant doit être placée de telle sorte que, durant les transmissions radio, personne ni aucun groupe de personnes ne puisse s'approcher à une distance inférieure à la distance de sécurité minimal indiquée ci-dessus, c.-à-d., 1 m.

To comply with current FCC RF Exposure limits, the antenna must be installed at or exceeding the minimum safe distance shown above, and in accordance with the requirements of the antenna manufacturer or supplier.

### Radiation warning



**WARNING!** Maintain a separation distance of at least 1 m from the front face of the antenna to a person.

You, as the qualified end-user of this radio device, must control the exposure conditions of bystanders to ensure the minimum separation distance (above) is maintained between the antenna and nearby persons, for satisfying RF Exposure compliance. The operation of this transmitter must satisfy the requirements of General Population/ Uncontrolled Environment. Only use the terminal when persons are at least the minimum distance from the front face of the antenna.

## Safety note from battery supplier

### Battery



**WARNING!** Hazards such as high temperature, fire or explosion can happen. To avoid such hazards, observe the following directions and recommendations

- Keep away from fire
- Do not drop, crush, puncture or disassemble the battery.
- Do not touch the terminals of the battery with conductive materials such as coins, keys, watches etc.
- Do not expose the battery to temperatures above 60°C / 140°F.
- Do not replace by a battery other than specified by the manufacturer.

# About this manual

## Intended readers

This manual is a user manual for the EXPLORER 510. The manual is intended for anyone who is using or intends to use the EXPLORER 510. No specific skills are required to operate the EXPLORER 510. However, it is important that you observe all safety requirements listed in the **Safety summary** in the beginning of this manual, and operate the EXPLORER 510 according to the guidelines in this manual.

## Related documents

The following documents are related to this manual and to the EXPLORER 510 system.

Title and description	Document number
EXPLORER 510 Getting Started, English	98-143071
EXPLORER 510 Getting Started, Deutsch (German)	98-143073
EXPLORER 510 Getting Started, Français (French)	98-143074
EXPLORER 510 Getting Started, Español (Spanish)	98-143075
EXPLORER 510 Getting Started, Русский (Russian)	98-143076
EXPLORER 510 Getting Started, 中文 (Chinese)	98-143077
EXPLORER 510 Getting Started, 日本語 (Japanese)	98-143078

## Typography

In this manual, typography is used as indicated below:

**Bold** is used for the following purposes:

- To emphasize words.  
Example: “Do **not** touch the antenna front during pointing”.
- To indicate what the user should select in the user interface.  
Example: “Select **Control panel** > **WLAN** and click **Enable**”.

**Italic** is used to emphasize the paragraph title in cross-references.

Example: “For further information, see *Connecting Cables* on page...”.

# Contents

---

<b>Chapter 1</b>	<b>Introduction to EXPLORER 510</b>	
	1.1 General description .....	1-1
	1.2 Features and interfaces of the EXPLORER 510 .....	1-2
	1.3 Your EXPLORER 510 terminal .....	1-3
<b>Chapter 2</b>	<b>To get started</b>	
	2.1 To unpack and assemble the EXPLORER 510 .....	2-1
	2.2 The EXPLORER Connect app .....	2-3
	2.3 To switch the EXPLORER 510 on or off .....	2-6
	2.4 To connect your WLAN-enabled device .....	2-6
	2.5 To connect to LAN .....	2-7
	2.6 To access the web interface .....	2-7
	2.7 To access the external network .....	2-8
	2.8 To start and stop data connections .....	2-11
	2.9 To enable phone calls over BGAN .....	2-13
	2.10 External power .....	2-15
	2.11 Semi-fixed installation .....	2-16
<b>Chapter 3</b>	<b>Operation</b>	
	3.1 BGAN or cellular network .....	3-1
	3.2 Connection to the EXPLORER 510 .....	3-1
	3.3 Data connection .....	3-2
	3.4 To access the terminal from a remote location (BGAN only) .....	3-5
	3.5 Phone calls .....	3-9
	3.6 Alerts .....	3-11
	3.7 Status of the EXPLORER 510 .....	3-11
	3.8 Tracking and location reporting .....	3-11
	3.9 To charge your smartphone .....	3-11
<b>Chapter 4</b>	<b>Configuration</b>	
	4.1 Configuration with EXPLORER Connect app .....	4-2
	4.2 The web interface .....	4-3
	4.3 To point the antenna (BGAN) .....	4-6
	4.4 To enter the SIM PIN in the web interface .....	4-7
	4.5 To control data connections from web interface (BGAN) .....	4-8
	4.6 Status information .....	4-10
	4.7 The Control panel .....	4-12
	4.8 To use the logs .....	4-13

4.9	Battery status information .....	4-14
4.10	To set up the interfaces .....	4-15
4.11	To manage connected devices (Traffic control) .....	4-17
4.12	To manage smartphones (IP handsets) .....	4-20
4.13	Support features .....	4-21
4.14	Terminal settings .....	4-24
4.15	To set up your data connection packages .....	4-29
4.16	To set up tracking and location reporting .....	4-33
4.17	Advanced LAN .....	4-34
4.18	Advanced settings .....	4-36
4.19	Optional: To set up cellular network for data .....	4-48
<b>Chapter 5</b>	<b>Maintenance and troubleshooting</b>	
5.1	Support .....	5-1
5.2	Software update .....	5-2
5.3	Restore the settings of the EXPLORER 510 .....	5-5
5.4	Maintenance .....	5-6
5.5	Troubleshooting .....	5-7
5.6	Log files .....	5-17
5.7	List of reserved IP subnets .....	5-18
<b>Appendix A</b>	<b>Technical specifications</b>	
A.1	General specifications .....	A-1
A.2	Battery specifications (internal battery) .....	A-2
A.3	Interfaces specifications .....	A-2
A.4	Built-in BGAN antenna .....	A-4
A.5	AC/DC adapter .....	A-4
A.6	Outline drawing .....	A-5
A.7	Satellite coverage .....	A-7
<b>Appendix B</b>	<b>Command reference</b>	
B.1	Overview of M2M AT and SMS commands .....	B-2
B.2	SMS remote commands .....	B-3
B.3	AT commands .....	B-8
<b>Appendix C</b>	<b>Conformity</b>	
C.1	CE .....	C-1
C.2	IC .....	C-1
C.3	FCC .....	C-1
C.4	Japanese Radio Law and Japanese Telecommunications Business Law Compliance. ....	C-2

<b>Glossary</b>	.....	Glossary-1
<b>Index</b>	.....	Index-1

## Introduction to EXPLORER 510

### 1.1 General description

The EXPLORER 510 is a very small EXPLORER BGAN terminal and is the ideal combination of performance and portability. It provides simultaneous high quality voice and broadband access at speeds up to 464 kbps.

The durable magnesium casing and a dust and water resistant design makes the EXPLORER 510 the perfect choice when working off the beaten track but still dependent on a reliable connection.



Your equipment connects to the EXPLORER 510 with wireless LAN (WLAN).

WLAN is the primary connection between your equipment and the EXPLORER 510. However, a USB interface is also available, with possible connection of LAN using a USB to LAN Converter Cable (included).

The EXPLORER 510 provides access to up to 464 kbps Standard data and 32, 64 and 128 kbps Streaming data and may be used for:

- Broadcasting
- Internet browsing
- E-mail
- Phone services (using WLAN or LAN with Voice over IP)
- File transfers
- Video conference and Streaming
- VPN (Virtual Private Network) access to corporate servers

The EXPLORER 510 can withstand severe environmental conditions such as humidity, dust, extreme weather and changing temperatures. It is small in size and fits easily into a backpack or similar.

## 1.2 Features and interfaces of the EXPLORER 510

### 1.2.1 Features

- Full duplex, single or multi-user, standard data up to 464 kbps
- Support for streaming data at 32, 64 and 128 kbps
- Standard WLAN and USB Host interface
- LAN connection using USB to LAN Converter Cable
- Support for EXPLORER Cellular Modem for connection to cellular network
- Built-in battery
- Built-in DHCP/NAT wireless router
- Solar panel direct interface
- 10.5-32 VDC input
- 100-240 VAC power adapter
- IP66 protection
- Support for GPS, GLONASS and BeiDou navigation systems
- Support for the EXPLORER Connect app, which makes it easy to use your smart device to make calls over BGAN, and to set up the EXPLORER 510.
- Built-in web interface allowing you to manage your calls and customize the terminal to your specific needs, using a smartphone, computer or tablet.
- Point-to-Point Protocol over Ethernet (PPPoE)
- Built-in PBX and SIP server managing voice communication
- Multilingual user interface (English, French, German, Russian, Spanish, Chinese, Japanese)
- CE, FCC, GMPCS and IC certified

## 1.3 Your EXPLORER 510 terminal

### 1.3.1 EXPLORER 510 overview

The EXPLORER 510 is a compact unit comprising transceiver and antenna in one unit.



## 1.3.2 User interfaces

The **web interface** is a built-in web interface for easy configuration and daily use. The web interface is accessed from a computer, smartphone or tablet connected to the EXPLORER 510, using an Internet browser. No installation of software is needed. For further information on the web interface, see *The web interface* on page 4-3.

A **smartphone app, EXPLORER Connect**, is also available for iPhone and for Android phones. The app includes a **Phone** function that enables you to make calls to and from your smartphone over the satellite network using the EXPLORER 510 terminal. It also includes the complete feature set from the built-in web interface of the terminal, allowing you to set up and use the terminal with your smartphone. For more information, see *The EXPLORER Connect app* on page 2-3.

With **AT commands** you can configure and control the EXPLORER 510 from a computer using a Telnet session. For further details see *To access the terminal using AT commands* on page 3-5.

With **SMS commands** you can configure and control the EXPLORER 510 remotely. For details, see *Remote access with SMS* on page 3-5.

## 1.3.3 Antenna

The light-colored part of the EXPLORER 510 is the antenna part comprising:

- GNSS (Global Navigation Satellite System) antenna supporting GPS, GLONASS and BeiDou.
- BGAN antenna.
- Wireless LAN antenna.

## 1.3.4 Battery

The EXPLORER 510 comes with a built-in rechargeable battery. The battery is automatically recharged when power is applied to the EXPLORER 510. The Status indicator shows that the battery is charging. See *Light indicators* on page 5-11.

Time between recharging depends on the use. The web interface shows estimated time left for the battery. Recharge the battery regularly.

For battery specifications, see *Battery specifications (internal battery)* on page A-2.

## 1.3.5 SIM card

The EXPLORER 510 requires a SIM card to go online. Without a SIM card you can still configure the terminal and you may be able to make emergency calls if the network allows it, but you cannot make normal calls nor access the Internet.

**SIM lock:** The supplier may have locked the SIM card to a specific provider. For further information, contact your supplier.

## To get started

This chapter describes:

- *To unpack and assemble the EXPLORER 510*
- *The EXPLORER Connect app*
- *To switch the EXPLORER 510 on or off*
- *To connect your WLAN-enabled device*
- *To connect to LAN*
- *To access the web interface*
- *To access the external network*
- *To start and stop data connections*
- *To enable phone calls over BGAN*
- *External power*

### 2.1 To unpack and assemble the EXPLORER 510

#### 2.1.1 Initial inspection

Inspect the shipping carton immediately upon receipt for evidence of damage during transport. If the shipping carton is severely damaged or water stained, request that the carrier's agent be present when opening the carton. Save the carton packing material for future use.



**WARNING!**

To avoid electric shock, do not apply power to the system if there is any sign of shipping damage to any part of the front or rear panel or the outer cover. Read the safety summary at the front of this manual before installing or operating the system.

After unpacking the system, inspect it thoroughly for hidden damage and loose components or fittings. If the contents are incomplete, if there is mechanical damage or defect, or if the system does not work properly, notify your dealer.

#### 2.1.2 What's in the delivery

The following items are included in the delivery:

- EXPLORER 510 terminal
- AC/DC adapter and power cable
- USB to LAN Converter Cable
- EXPLORER softbag
- Getting started booklet

### 2.1.3 To insert the SIM card

The SIM card is provided by your Airtime Provider. Insert the SIM card as follows:

1. Loosen the two screws holding the SIM cover.
2. Lift the cover.
3. Insert the SIM card in the SIM slot with the chip side facing down.
4. Press gently until it clicks.
5. Close the cover and tighten the two screws gently.



### 2.1.4 To remove the SIM card

**Note**

When the SIM card is removed you cannot make calls or data sessions, but you can still use the built-in web interface to set up the terminal.

To remove the SIM card, do as follows:

1. Loosen the two screws holding the SIM cover.
2. Lift the cover.
3. Push the SIM card gently and let it pop out.
4. Remove the SIM card.
5. Close the cover and tighten the two screws gently.



## 2.2 The EXPLORER Connect app

The EXPLORER Connect app allows for configuration of supported EXPLORER satellite terminals and enables satellite calls via Android or iOS smartphones. The app is available for Android phones at the Google Play store and for iPhones at the App Store. The EXPLORER Connect app provides the following functions:

Function	Description
Phone	Use your smartphone as a satellite phone when connected to the EXPLORER 510. For details, see <i>To set up the EXPLORER Connect app for making calls</i> on page 2-5 and <i>To enable phone calls over BGAN</i> on page 2-13.
Settings	Start/stop data connections and access all settings of the EXPLORER 510. See <i>Configuration</i> on page 4-1, and Activate the pointing process for the EXPLORER 510 towards the BGAN satellite. For details, see <i>To point the antenna</i> on page 2-9.
Dashboard	See terminal and connection status. For details, see <i>Status of the EXPLORER 510</i> on page 3-11.

### 2.2.1 First time app use

#### Permissions

When you start the app, some of these permissions may be required for optimal functionality (depending on your phone OS and version).

<b>Android:</b>	
Phone	Enables native phone controls while in a call and integration with top bar and background calls
Calling account	Uses the EXPLORER Connect app to make calls via the native phone application
Microphone	Enables microphone for use in phone calls
Contacts	Enables access to phone contacts
<b>iOS:</b>	
Microphone	Enables microphone for use in phone calls
Contacts	Enables access to phone contacts
Local network	Enables access to the terminal which is required for using and configuring the terminal (Wi-Fi)


**Note** | iOS does not support background calls. To receive a call on an iPhone, the app must be open and visible on the screen.

## Menu overview of EXPLORER Connect app

There are 3 main screens in the EXPLORER Connect app: Dashboard, Phone and Settings, selectable from the icons at the bottom of the screen.

- Dashboard: shows status of the terminal and connections.
- Phone: Is used for making calls.
- Settings: Has a submenu with the following options:
  - Terminal Settings: Holds the IP address of the terminal and the SIP settings for connecting the SIP client in the phone to the SIP server in the terminal.
  - Terminal Access: Gives access to all configuration settings and status in the terminal (same as in the terminal’s web interface).
  - Pointing: Gives access to start the pointing process in the terminal (same as the Pointing page in the web interface).
  - About: Shows the App version of the EXPLORER Connect app the Helpdesk information entered in the terminal’s web interface (Advanced > Help desk).
  - Terminal Manual: Accesses the user manual for the EXPLORER 510 (this manual).

### EXPLORER Connect app screens (example):

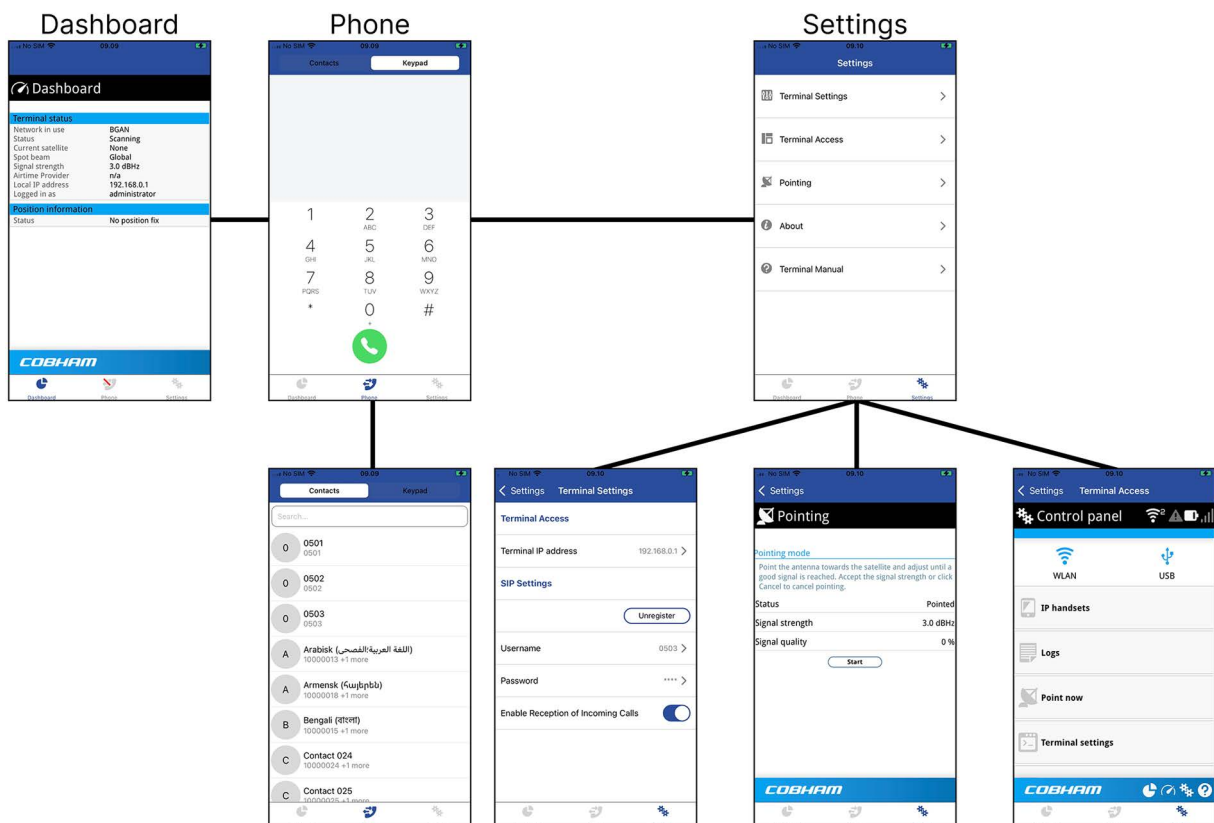

## To set up the EXPLORER Connect app for making calls

To set up the system to make calls through the terminal using WLAN, follow these steps:

1. Start up the terminal.
2. Connect to the terminal WLAN (see *To connect your WLAN-enabled device* on page 2-6 for details).
3. Open the EXPLORER Connect app and grant required permissions, if any (see *First time app use* on page 2-3).
4. Log in to the terminal<sup>1</sup>:
  - Default for administrator: user id= **administrator**, password= **admin**
5. Go to **Settings > Terminal settings** and enter:
  - **Terminal IP Address** (SIP server address and port): Default address: 192.168.0.1, Port: 5060.
  - **Username** (handset user name): Default range 0501 to 0516 .
  - **Password** (handset password): Default same as username.

### Note

The handset username and password must match the IP handset settings in the web interface of the terminal, see *To manage smartphones in your EXPLORER 510* on page 4-20.

6. Make sure **Enable Reception of Incoming Calls** is selected.  
This is to prevent your smartphone from closing the WLAN connection when not in use. This is necessary in order to be able to receive calls on your smartphone.
7. Tap **Register** to complete the SIP registration.

With the EXPLORER Connect app open and visible on the screen, your smartphone should now be ready for making a call over satellite using the EXPLORER 510.

## To configure the EXPLORER 510 using the EXPLORER Connect app

The EXPLORER Connect app provides access to all terminal settings that are available in the web interface. To configure the terminal from the app, navigate to **Settings > Terminal Access**. For details on configuration, see *Configuration* on page 4-1.


---

1. To log out of the terminal select **Dashboard** and tap **log out**.

## 2.3 To switch the EXPLORER 510 on or off

Do as follows:

1. Push and hold the power button until the **Status** indicator lights up. This may take some seconds.
2. When the **Status** indicator blinks slowly or is constant green, the terminal is ready for use.

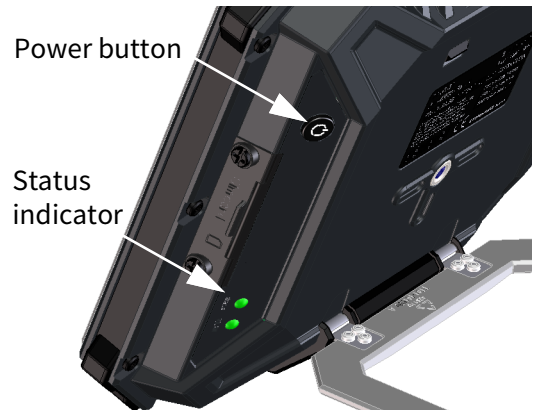

**Note**

At this point you may hear a sound from the EXPLORER 510, indicating that it is ready to be pointed towards the satellite (see *To access the external network* on page 2-8). If you do not want to point the antenna now, just push the power button briefly to accept the current signal strength.

3. To switch off, hold the power button until the **Status** indicator blinks yellow. This may take some seconds.

To recharge the battery of the EXPLORER 510, connect external power to the DC input, see *External power* on page 2-15.

## 2.4 To connect your WLAN-enabled device


Do as follows:

1. Check that the WLAN LED is on (green or yellow), meaning that WLAN is ready in your EXPLORER 510.
2. Place your WLAN-enabled device (computer, tablet or smartphone) close to the EXPLORER 510, but **not** in front of the BGAN antenna.
3. On your device, search for available WLAN networks.
4. Select the EXPLORER 510 WLAN access point when it appears in your list of available wireless networks. The default name is **EXPLORER510**.
5. Enter the password (encryption key).  
By default, the password is the **serial number**<sup>1</sup> of your EXPLORER 510 and the encoding type is **WPA2**.



**Important**

You are required to change the Encryption key immediately after first connection. See *WLAN interface setup* on page 4-15.

Your device is now connected to the EXPLORER 510. In the web interface, the WLAN icon shows the number of devices connected to the EXPLORER 510 via WLAN. Example: 

**Note**

You can have maximum 10 clients connected to the WLAN.

1. You find the serial number on the label on the EXPLORER 510

For information on how to configure the WLAN interface in the EXPLORER 510, see *WLAN interface setup* on page 4-15.

For information on how to set up the LAN network, see *Terminal settings* on page 4-24.

## 2.5 To connect to LAN

The EXPLORER 510 does not have a LAN connector, but you can use the USB to LAN Converter Cable supplied with your EXPLORER 510 to connect your computer.

### Note

The USB charge current must be set to 1.0 A. This is the default setting. See *USB interface setup* on page 4-16.

Do as follows:

1. Connect the USB to LAN Converter Cable to the USB interface.
  2. Connect your LAN cable between the USB to LAN Converter Cable and your computer.
- Your computer should now be connected to the EXPLORER 510 and you should be able to access the web interface as described in the next section.

## 2.6 To access the web interface

If you are not using the EXPLORER Connect app, you can use the built-in web interface for configuration and operation of the EXPLORER 510. To access the web interface, do as follows:

1. Start up the terminal.  
For details, see *To switch the EXPLORER 510 on or off* on page 2-6.
2. Connect your computer or smartphone to the terminal, e.g. using WLAN as described in the previous section.
3. Open your browser and enter the IP address of the terminal in the address bar. The default IP address of the terminal is **192.168.0.1**
4. Enter the user ID and password for the terminal. You can log in as user or administrator. Note that for **first time use** you must log in as administrator with **user id: administrator** and **password: admin**.

### Important

If you logged in with the default administrator password you are immediately prompted to change the password. The new passwords must be secure passwords with min. 8 characters consisting of lowercase and uppercase, numbers and special characters.

Login as normal **user** is only possible if set up first by the administrator. See *To change the user password* on page 4-36.

If the terminal is in pointing mode or waiting for a PIN, the web interface will start up on the relevant page. Otherwise it will start up on the dashboard. For more information on the web interface, see *The web interface* on page 4-3.

## 2.7 To access the external network

### 2.7.1 BGAN or cellular network

The EXPLORER 510 is a BGAN terminal. However, you have the option of connecting an EXPLORER Cellular Modem to the USB interface of the EXPLORER 510, making it possible to use the cellular network when it is available. See *Optional: To set up cellular network for data* on page 4-48.

If you are going to use the BGAN network, you must first point the antenna in the direction of the satellite and find the best possible signal strength. See the next sections for details.

### 2.7.2 To point the antenna (BGAN)


**Note**

You can choose to cancel pointing from the pointing page in the EXPLORER Connect app or the web interface. In this case you cannot communicate on the BGAN network, but you can access all terminal settings.

#### Before pointing

Before pointing the antenna you can use the coverage map below to find your approximate location in relation to the satellites.

The Inmarsat BGAN services are based on the BGAN I-4 and I-6 geostationary satellites, all positioned above the equator, at the center of each “footprint”.

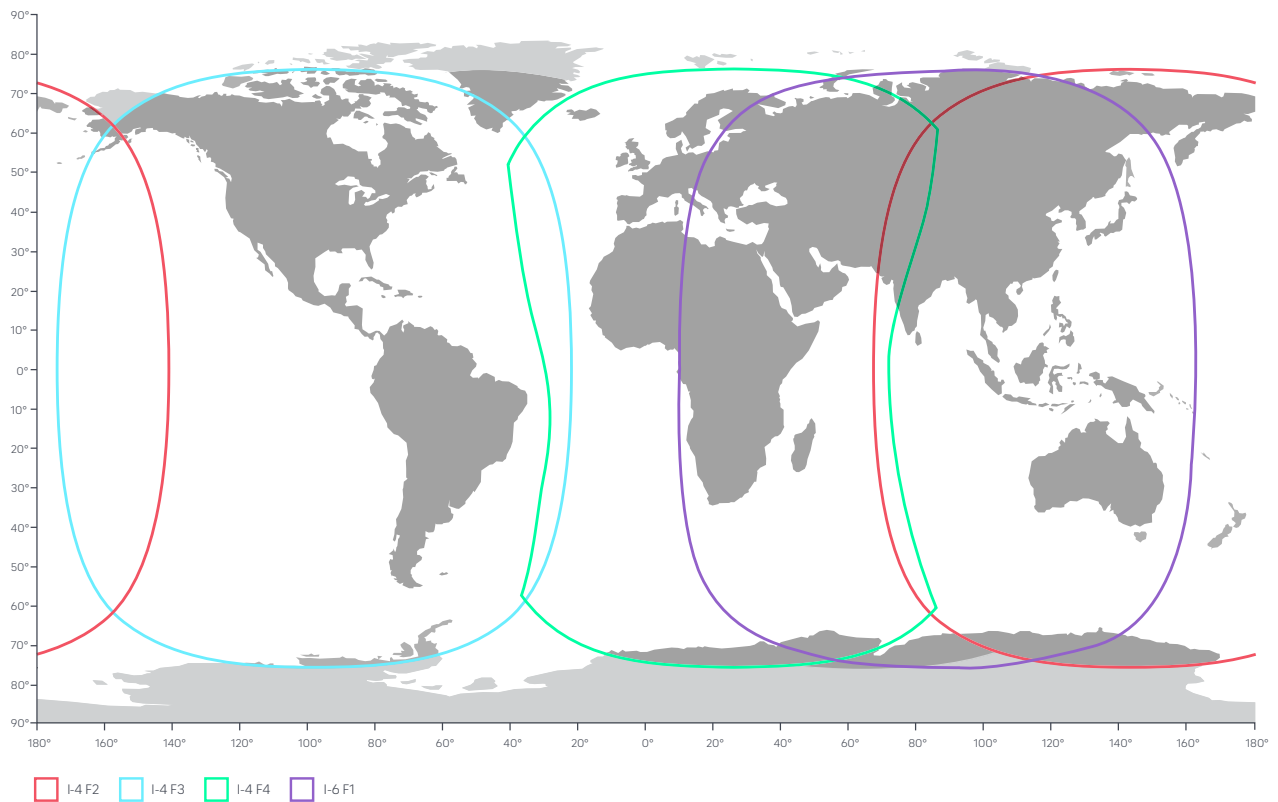


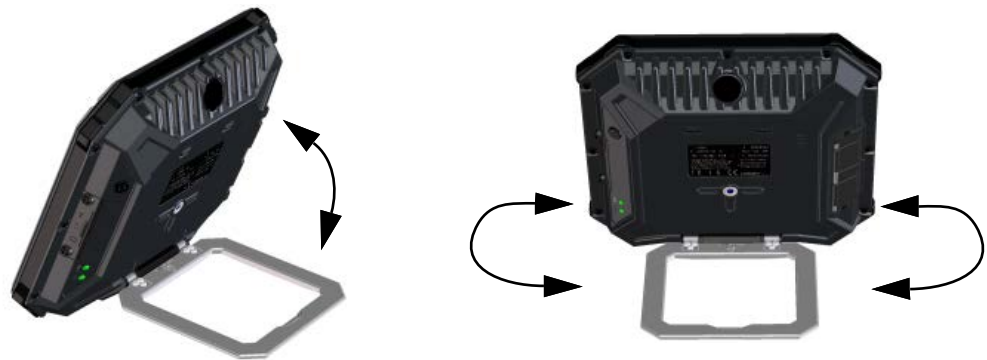
This map is for general information purposes only and no guarantee is given of accuracy or fitness for a particular use. Coverage is subject to change at any time.

## To point the antenna

To obtain optimum bandwidth and operating time on the BGAN network, adjust the position of the EXPLORER 510 with great precision.

Do as follows:

1. Find the approximate direction of the satellite. See *Before pointing* on page 2-8 for a map with the location of the satellites.
2. If the EXPLORER 510 is not already in pointing mode, start the EXPLORER Connect app and select **Settings > Pointing**, or access the web interface as described in *To access the web interface* on page 2-7 and select  (Control panel) > **Point now**.  
Alternatively you can switch the EXPLORER 510 off and on again.
3. Use the pointing sound and/or the **Pointing** page to find the highest possible signal strength, while slowly rotating and tilting the EXPLORER 510 in the direction of the satellite.



4. Push the power button briefly to accept when you have obtained the highest possible signal strength (or, if you are using the web interface, click **Accept**).

The EXPLORER 510 now starts to establish a connection to the BGAN network.




### CAUTION!

After accepting the signal strength, keep the minimum safety distance of **1 m from the antenna front face**. The antenna may radiate microwave power as soon as the signal strength is accepted.

## Audio assisted pointing

You can set up whether or not you want a sound to indicate the signal level during pointing (Audio assisted pointing). The sound pattern is as follows:

- Poor signal strength: . . . .
- Good signal strength: .....
- Optimum signal strength:  (continuous sound instead of single “beeps”)

For details on how to enable or disable the pointing sound, see *To enable or disable the pointing sound* on page 4-28.

## To repoint the antenna

You may need to point the antenna again later, e.g. if the terminal has been moved or the signal is blocked.

To start the pointing process again, do as follows:

1. From the EXPLORER Connect app, select **Settings > Pointing**.
2. Go through the pointing process as described in the previous section *To point the antenna (BGAN)* on page 2-8.

### 2.7.3 The registration procedure (BGAN)

If you have connected a computer and accessed the web interface, you can see the progress in the status field as follows:

- **Searching:**  
The EXPLORER 510 searches for the network operator. Note that the search procedure can be very short, so you may not see this text.
- **Registering:**  
The EXPLORER 510 is registering itself on the network.  
If the position has not yet been acquired at this point, the status field may show **No position**.
- **Ready** (or other status information):  
Ready means the EXPLORER 510 is registered on the network and is ready to go online. If there is any other status information to show, e.g. if a call or data session is active or there is a warning, the status field will show that instead.

#### Note

To be able to make a data connection you must first activate the connection. See *To start and stop data connections* on page 2-11.

### 2.7.4 Do you need a PIN?

#### Note

You may need a SIM PIN for your terminal to access the network. If you are asked for a PIN and you select **Cancel**, you cannot communicate on the network, but you can access all settings.



To be able to enter a SIM PIN, select **Settings > Terminal Access** in the **EXPLORER Connect** app, or access the built-in web interface. For details, see *To enter the SIM PIN in the web interface* on page 4-7.


## 2.8 To start and stop data connections

By default, you must activate your data connection from the EXPLORER Connect app or from the web interface before you can access the Internet. However, you can set up the terminal for automatic activation of data connections. See *Internet and LAN connection modes* on page 4-26.

To start and stop data connections on your EXPLORER 510, do as follows:

1. On your smartphone, start the **EXPLORER Connect** app and select **Settings > Terminal access**, or on the connected device, open your browser and type the IP address of the terminal (default IP address: **192.168.0.1**) in the address bar to access the web interface.
2. Locate the connection package you want to start.


**Note** The icons for starting  and stopping  connections are only active if the terminal is ready and registered on the network. Otherwise you cannot start data connections.

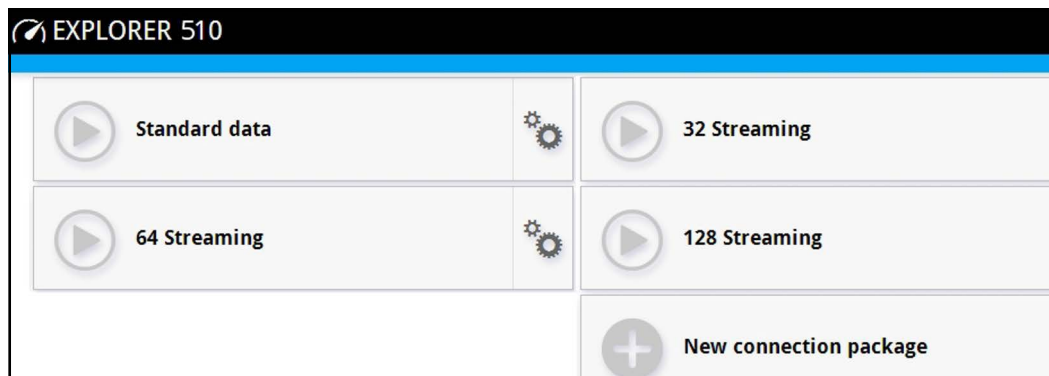


3. Click  to start the connection.

**Note** Once a Streaming connection is started, the connection will run until you stop it. You will be charged for the time you are connected.

4. Click  to stop the connection.

If there is an error with the connection, the connection tile shows an exclamation mark  and an error message. You can see details in the data log, see *Data log* on page 4-13.

When a connection is active, the icon changes to  and the tile for the active connection shows:

- IP address: The IP address that has been assigned by the service provider to this session.
- Transferred data: For Standard data, the tile shows the total amount of transmitted and received data since the connection was established.
- Connection duration: For Streaming data, the tile shows the total time the connection has been active.
- Bit rate: For Streaming connections, the tile shows the fixed bit rate for the connection.

## 2.8.1 Default data connection types

By default, the following connections are available:

Name	Type of connection
<b>Standard data</b>	Several users can share the data connection. This type of connection is ideal for TCP/IP traffic such as e-mail, file transfer, and Internet/intranet access.  The user pays for the amount of data sent and received.
<b>Streaming data</b> The following Streaming classes are available: 32, 64 or 128 kbps Streaming	An exclusive, high-priority connection, ensuring seamless transfer of data. This type of connection is ideal for time critical applications like live video over IP.  The user pays for the duration of the connection.

You can use these connections as they are or build your own connection packages. For set up of the connection packages, see the section *To set up your data connection packages* on page 4-29.

## 2.9 To enable phone calls over BGAN

Your smartphone or IP handset can be set up to make and receive calls over the BGAN network, using the terminal's phone number.

### Note

Make sure your phone has an integrated SIP client. The EXPLORER 510 has an integrated SIP server.

By default, one SIP client is enabled in the EXPLORER 510 with the user name 0501. Additional phones (SIP clients) must first be set up in the web interface and enabled before you can use them.

### 2.9.1 To connect your smartphone for making calls

Cobham Satcom offers the **EXPLORER Connect** app with a built-in SIP client that is ready to use with the EXPLORER 510. Alternatively, you can find other SIP clients on the Internet.

1. Start up the EXPLORER 510 terminal.
2. Connect to the WLAN interface of the EXPLORER 510. See *To connect your WLAN-enabled device* on page 2-6.
3. Open your EXPLORER Connect app or start another SIP client.
4. Set up your smartphone for use with the EXPLORER 510.
  - **EXPLORER Connect** app: See *To set up the EXPLORER Connect app for making calls* on page 2-5.
  - If you have a 3rd party SIP client, see *First time SIP setup* below and the documentation for your SIP client.
  - To set up the EXPLORER 510 for use with your smartphone, see *To manage smartphones (IP handsets)* on page 4-20.
5. In the **EXPLORER Connect** app select **Phone**, or start your 3rd party SIP client.

You should now be ready to make and receive calls over BGAN with your smartphone.

**For details on calls, see *Phone calls* on page 3-9.**

### 2.9.2 To connect a wired IP handset for making calls

Cobham Satcom offers two IP handsets with a built-in SIP client ready for use with the EXPLORER 510: the Thrane IP Handset and the EXPLORER IP+ Handset.

### Note

The EXPLORER 510 does not have a physical LAN interface, so if you want to connect a wired IP handset, you must use the included USB to LAN converter and connect to the USB interface.

Also, if your IP handset is PoE powered, you must add a PoE injector to supply power to the handset.

### Note

If you are using an IP handset from Cobham Satcom and have enabled support for it, no initial configuration is necessary.

1. Start up the EXPLORER 510 terminal.
2. Connect the USB to LAN converter to the USB interface on the EXPLORER 510.
3. Connect a LAN cable between the IP handset and the USB to LAN converter at the EXPLORER 510.
  - If PoE is required to power the IP handset, connect a PoE injector or other equipment that can supply Power over Ethernet between the IP handset and the EXPLORER 510.
4. Set up your IP handset for use with the EXPLORER 510.

- IP handset from Cobham Satcom: Is ready for use with the EXPLORER 510.
- If you have a 3rd party IP handset: See *First time SIP setup* below and the documentation for your handset.
- To set up the EXPLORER 510 for use with your IP handset, see *To manage smartphones (IP handsets)* on page 4-20.

You should now be able to make and receive calls over BGAN.

**For details on calls, see *Phone calls* on page 3-9.**

### 2.9.3 First time SIP setup

If it is the first time you connect your phone to the EXPLORER 510 for making calls, you must first set up the SIP server details in your phone. For information how, see the user documentation for your phone.

You may be asked to enter some of the following details (The EXPLORER Connect app and the IP handsets from Cobham Satcom are preconfigured with the below default SIP settings):

- SIP server address and port: Default address: 192.168.0.1, Port: 5060
- User name: Local number in EXPLORER 510 (0501 to 0516)
- Password: Default same as user name
- Codec priority: Highest priority codec type: G.711

**Note**

The user name and password must match the IP handset settings in the EXPLORER 510. See *To manage smartphones (IP handsets)* on page 4-20.

## 2.10 External power

When you connect external power to the DC input, the internal battery is charged while maintaining normal operation.

Refer to *Power input* on page A-2 for specifications and pin-out for the DC Power input.

To power the terminal or to charge the battery, connect one of the following external power sources to the DC input:

- 10.5-32 VDC
- The supplied AC/DC adapter connected to 100-240 V Mains
- A solar panel (min. 65 W, 10.5-32 VDC)



DC input

### Automatic power up

The default behavior of the EXPLORER 510 is to power up automatically when you connect external power. If you wish, you can change this power up mode, so that the EXPLORER 510 is only powered if the Power button is pressed.

For further information on power up mode, see *Power-up mode with external power* on page 4-25.

## 2.11 Semi-fixed installation

You can mount the EXPLORER 510 on a standard camera tripod. For this purpose, the EXPLORER 510 has a 1/4 - 20 UNC thread that should fit most standard camera tripods.



Do as follows:

1. Mount the EXPLORER 510 on a tripod using a 1/4 - 20 UNC bolt or thumb screw.

**Note** The bolt or thumb screw must penetrate **maximum 7 mm** into the thread in the EXPLORER 510.

2. Start up the EXPLORER 510 and point the antenna as described in *To point the antenna (BGAN)* on page 2-8.
3. When you have accepted the signal strength, fasten the EXPLORER 510 in the pointed position.

**Note** Once the EXPLORER 510 is pointed, you can set it up to automatically register on the BGAN network at power-up. This way you can avoid going through the pointing procedure every time you start up. See *Pointing at start-up* on page 4-25.

## Operation

This chapter describes daily use and basic setup. For information on configuration, see *Configuration* on page 4-1.

This chapter describes:

- *BGAN or cellular network*
- *Connection to the EXPLORER 510*
- *Data connection*
- *To access the terminal from a remote location (BGAN only)*
- *Phone calls*
- *Alerts*
- *Status of the EXPLORER 510*
- *Tracking and location reporting*
- *To charge your smartphone*

### 3.1 BGAN or cellular network

The EXPLORER 510 is a BGAN terminal. However, you have the option of connecting an EXPLORER Cellular Modem to the USB interface of the EXPLORER 510, making it possible to use the cellular network when it is available. See *Optional: To set up cellular network for data* on page 4-48.

### 3.2 Connection to the EXPLORER 510

**WLAN** is the primary interface on the EXPLORER 510 for connecting computers, smartphones or tablets: For information on how to connect, see *To connect your WLAN-enabled device* on page 2-6.

If you need to connect your device with a LAN cable, you can use the USB to LAN Converter Cable delivered with the EXPLORER 510 and connect that to the USB interface of the EXPLORER 510.

## 3.3 Data connection

### 3.3.1 Router function

The terminal has a router function which routes traffic between the local network connected to the terminal and the BGAN network connection.

The router contains NAT (Network Address Translation) which allows sharing of a public IP address between a number of local network users.

### 3.3.2 Standard or Streaming data


The BGAN network supports different classes of data connection to the Internet. The main classes are **Standard data** and **Streaming data**.

- Using a **Standard data** connection, several users can share the data connection simultaneously. This type of connection is ideal for TCP/IP traffic such as e-mail, file transfer, and Internet and intranet access.  
The user pays for the amount of data sent and received.
- Using a **Streaming data** connection, you get an exclusive, high-priority connection, ensuring seamless transfer of data. This type of connection is ideal for time critical applications like live video over IP.  
The user pays for the duration of the connection (per minute charge).

### 3.3.3 To start and stop data connections (BGAN)

By default, you must activate your data connection from the EXPLORER Connect app or from the web interface before you can access the Internet. However, you can enable automatic activation of a data connection. See *To set up the connection mode* on page 4-25.

To start and stop data connections on your EXPLORER 510, do as follows:

1. On your smartphone, start the **EXPLORER Connect** app and select **Settings > Terminal access**, or  
on the connected device, open your browser and type the IP address of the terminal (default IP address: **192.168.0.1**) in the address bar to access the web interface.
2. Click  on the connection you want to start. For details, see *To control data connections from web interface (BGAN)* on page 4-8.

**Cellular connection:** If you are using the optional cellular connection with the EXPLORER Cellular Modem, the data connection is started automatically when the cellular connection is established. For details, see *Optional: To set up cellular network for data* on page 4-48.

### 3.3.4 PPPoE (Point-to-Point Protocol over Ethernet)


#### Overview

You can establish a PPPoE connection to the BGAN network using the EXPLORER 510 system. Use PPPoE if you want to control your connection independently of the web interface.

Possible applications are:

- Connecting a router
- Connecting broadcast equipment, optionally through a PC
- Establishing a Pico cell for the use of cell phones

The following drawing shows connections managed through PPPoE and web interface respectively.

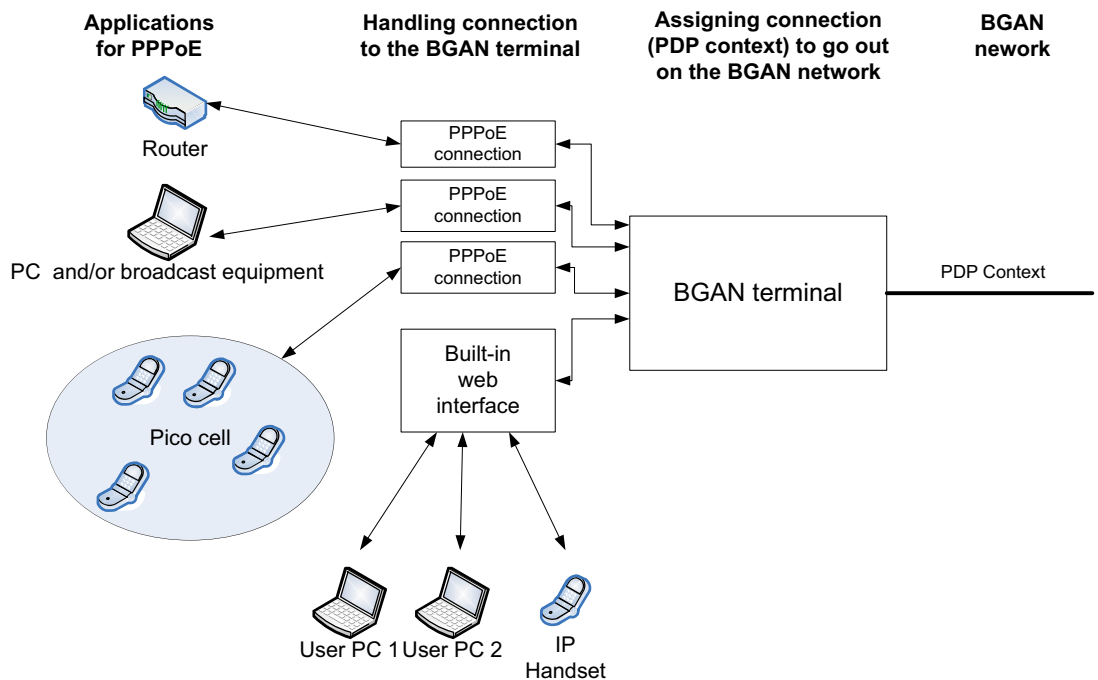

## To configure the connected equipment for PPPoE

How to configure your equipment depends on the type of equipment. Refer to the user documentation of the equipment. As a minimum, you need to configure the following parameters in your equipment in order to make PPPoE work with the terminal:

- User name and password.

The user name and password can be left blank (or insert user name: void and password: void). Then the registration on the Access Point is most commonly done in such a way that the data connection is established with a dynamic IP address from the airtime provider.

To request a static IP (if subscribed to) from the Access Point you must type in the user name and password from your airtime subscription.

Note for MAC OS: User name and password are required. Use user name void and password void. This works for some ISPs. Contact your airtime provider for further information.

- For setups that have a check box for “Enable LCP extensions”, deselect this.

No further configuration is needed to make a Standard IP data connection to the Internet.

See the table below for information on how to configure specific services for your PPPoE connection.

If you need a certain service, for example a Streaming class, you must type in a specified text string when asked for a service name. The following table shows the service names supported by the terminal.

<b>Text to type in the Service Name field</b>	<b>Function</b>
(Blank)	Initiates a Primary Standard Data connection (default)
XBB:BACKGROUND	Initiates a Primary Standard Data connection (same as blank)
XBB:STREAM32K	Initiates a Primary Streaming 32 kbps connection
XBB:STREAM64K	Initiates a Primary Streaming 64 kbps connection
XBB:STREAM128K	Initiates a Primary Streaming 128 kbps connection

### 3.3.5 To access the terminal using AT commands

**Note** | Make sure that AT commands are allowed on the WLAN interface of your terminal. See *To allow or block the use of AT commands on WLAN interface* on page 4-47.

1. Connect your computer to the EXPLORER 510 terminal.  
You may connect directly to the terminal or use a remote connection as described in the next sections.
2. On the connected computer, start a Telnet session.
3. Select TCP/IP and type in the IP address and port number.
  - For **local connection**, use the local IP address of the EXPLORER 510 (default 192.168.0.1) and port number 5454.
  - For **remote connection**, use the external IP address of the terminal (step 4 in the section *To get remote access from a trusted IP address (preconfigured)* on page 3-7). The port number for AT commands is normally 5454 but is defined in the Remote management page under AT commands (see *Prepare the terminal for remote management* on page 4-43).

**Note** | You can also use SMS to obtain a remote connection, see the next sections.

4. When the connection is established, type in your AT commands.

## 3.4 To access the terminal from a remote location (BGAN only)

### 3.4.1 Remote access with SMS

You can perform a number of actions and some configuration on the EXPLORER 510 using SMS commands.

**Note** | The SMS commands require a BGAN connection. They cannot use a cellular connection.

1. Prepare the terminal for SMS commands as described in *Prepare the terminal for remote access with SMS* on page 4-45.
2. **Send an SMS** from a trusted phone number to the mobile number of the terminal. The text in the SMS must start with the SMS command and follow the syntax for the SMS commands. Note that the remote SMS password (default: **remote**) must be included with every command.

The following SMS commands are supported.

**For explanation of syntax and parameters, see *SMS remote commands* on page B-3.**

SMS command	Function
ACTIVATE	Activates BGAN data connections for the device(s) connected to the EXPLORER 510.
DEACTIVATE	Deactivates some or all the BGAN data connections for devices connected to the EXPLORER 510.
CLEAR	Deletes SMS messages in the EXPLORER 510.
GETINFO	Gets current information from the EXPLORER 510 such as call time, data usage, GPS position and global IP address.
RESTART	Restarts the EXPLORER 510.
WATCHDOG	Gets or allows you to set the current Connection watchdog parameters (Link monitoring).
ADVWATCHDOG	Gets or allows you to set the current Terminal watchdog parameters.
ATCO	Allows you to send AT commands in an SMS to the EXPLORER 510 which returns the response in an SMS. <b>Note:</b> The ATCO command only supports a subset of the AT commands, see <i>ATCO commands</i> on page B-9.
ADPWRST	Resets the EXPLORER 510 administrator password to <b>admin</b> .
WANMODE	Gets or allows you to set the WAN connection mode (BGAN or Cellular)

### 3.4.2 Remote access with the web interface

**Note** When using remote access, the web interface may take a long time to load the pages, because the Internet connection may be slow.

There are two methods of getting remote access to the web interface:

- Using the AT command `_IREMWEB`, e.g. sent in an SMS (ATCO command).
- Accessing an EXPLORER 510 that is preconfigured with trusted IP addresses.

The following sections describe these two methods.

**Note** Only one PDP context at a time can be used for remote web interface access.

#### To use AT commands to get remote access to the web interface

You can send the AT commands encapsulated in an SMS (ATCO commands). For details, see *Prepare the terminal for remote access with SMS* on page 4-45.

**Note** If remote SMS command access has been disabled, you can enable it either using the web interface (*Prepare the terminal for remote access with SMS* on page 4-45) or using the AT command `_ISMSRMT` (see *Other M2M related AT commands* on page B-12). Note that you must have configured **at least one trusted phone number** that can send and receive SMS to and from the terminal.

Relevant command:

### **\_IREMWEB**

See *ATCO commands* on page B-9 for syntax and parameters.

1. To use an SMS to allow access to the web interface for specific IP addresses, send the following command:

ATCO <resp\_mode> <rsmc\_pwd> \_IREMWEB=1,<ip address>[,<ip address>]

**Example:** ATCO 2 remote \_IREMWEB=1, 214.123.189.119

In this example the command specifies no immediate response, only when the global IP address is sent along (2). The remote SMS password is **remote** and the IP address 214.123.189.119 can get remote access to the web interface (if two IP addresses are listed, it is interpreted as a range of IP addresses).

2. The EXPLORER 510 should now return an SMS response with the external IP address of the terminal.

**Example:** \_IREMWEB:81, GlobalIP:161.30.181.31

**81** is the response code for a remote web connection that was set up successfully. It is followed by the global IP address, which is the IP address to enter in your browser to access the web interface from the remote device with the IP address you specified in the command.

3. On the remote computer, open your web browser.
4. In the address bar of your browser, enter the global IP address of the EXPLORER 510 (received in the response above).

You should now be connected to the built-in web interface of the terminal.

## To get remote access from a trusted IP address (preconfigured)

### Note

This method requires that you initially have local access to the EXPLORER 510. If not, use the **\_IREMWEB** command described in the previous section.

### Initial local configuration:

1. Connect a computer to the EXPLORER 510 and access the web interface locally.
2. Prepare the terminal as described in *Prepare the terminal for remote access with IP* on page 4-44.
3. Activate a data connection in one of the following ways:
  - Automatic activation of a Standard data connection, see *Automatic Context Activation (ACA)* on page 4-30.
  - Manual activation of a data connection, see *To start and stop data connections (BGAN)* on page 3-2.
4. Note the terminal's external IP address as follows:  
Connect a computer locally to the terminal and start the web interface. The external IP address of the terminal is shown in the startup page in the tile with the connection you started in the previous step.  
This is the IP address you must use afterwards to access the terminal from your remote computer.

### Note

If Static IP is included in your airtime subscription, we recommend using this static public IP address for the terminal in order to provide easy access to the terminal. To use the static IP address, you must set the APN source to SIM default. For details, see *To change the APN for a connection package* on page 4-29.

### Remote access to web interface:

1. Make sure your remote computer has access to the Internet.
2. On the remote computer, open your web browser.
3. In the address bar of your browser, enter the IP address of the terminal followed by a colon and the port number

**http://<ip address>:<incoming port>.**

- <ip address> is the external IP address of the EXPLORER 510. The external IP address can only be obtained when a data connection (PDP context) is established. If a data connection is started, you can get the external IP address with the GETINFO SMS command, see *Remote access with SMS* on page 3-5.
- <incoming port> is the port you defined in *Prepare the terminal for remote management* on page 4-43 (Incoming port for web application, default port 80).

**Example:** If the IP address of the terminal is 161.30.180.12 and the incoming port number defined in the Remote management page in the web interface is 80, enter **http://161.30.180.12:80.**

You should now be connected to the built-in web interface of the terminal.

### Remote access with AT commands

1. Prepare the terminal for remote management as described in the previous section *Initial local configuration*.
2. Prepare and access the terminal as described in *To access the terminal using AT commands* on page 3-5.

## 3.5 Phone calls

### 3.5.1 Call types

#### Definition

The phone connection can be either a **Standard voice** connection or a **3.1 kHz audio** connection.

- For **outgoing calls**, the call type is **Standard voice** by default. To change the call type for your call to 3.1 kHz audio, dial **2\*** before the number.

**Example:** 2\*004539558800

- For incoming calls, you can set up in the web interface (IP handset page) which call types you want to receive on your smartphone or IP handset. Only the call types selected are received. By default all, call types are accepted.

When receiving calls, the mobile number determines which call type is used. In your airtime subscription you have one number for 3.1 kHz audio and one number for Standard voice. Remember that the call is only received on your phone if the call type used is selected for that phone (called IP handset in the web interface).

For information on how to set up the call types in the web interface, see *To manage smartphones in your EXPLORER 510* on page 4-20.

### 3.5.2 To make or receive a phone call with EXPLORER 510

Your IP handset or smartphone can be set up to make and receive calls over the BGAN network, using the terminal's phone number.

Connect and configure your phone and the EXPLORER 510 as described in *To enable phone calls over BGAN* on page 2-13.

When the phone and EXPLORER 510 are powered and ready, you are able to make and receive calls over BGAN.

#### To make a call from the EXPLORER 510

If you are using a smartphone with the EXPLORER Connect app, first start the app and select **Phone** from the main menu.

To make a call, dial

**00 <country code> <phone number>** followed by off-hook key.

**Example:** To call Cobham Satcom in Denmark (+45 39558800), dial **00 45 39558800**


If you are calling with the EXPLORER Connect app, you may also select a number from the **Contacts** list (icon in bottom right corner from the dial page). Note that the contacts found here are the contacts of your smartphone, **not** of the EXPLORER 510.

If there was an error establishing the connection, the web interface of the EXPLORER 510 shows an error message.

## To receive a call

By default, all phones connected to the EXPLORER 510 will ring when one of the mobile numbers is called. Note however, that this depends on the call type settings. See *Call types* on page 3-9.

**Note** | If you are using **EXPLORER Connect** app: iOS does not support background calls. To receive a call on an iPhone, **the app must be open and visible on the screen.**

Information on missed calls is stored in the call log of the EXPLORER 510. You can see the call log in the **Settings > Terminal Access** part of the EXPLORER Connect app or in the web interface (**Control panel  > Logs > Call log**).

## To make a call to the EXPLORER 510

To make a call to a phone connected to the EXPLORER 510, dial + **<Mobile number>**

- + is the prefix used in front of the country code for international calls. This is **00** when calling from countries in Europe and from many other countries.
- **Mobile number.** The first part of the mobile number is always 870, which is the “country code” for the BGAN system. For information on the mobile numbers, refer to your airtime subscription.

**Note** | There are two mobile numbers, one for **3.1 kHz audio** and one for **Standard voice.**

### 3.5.3 Local numbers and special functions

#### Overview

There are a number of local numbers and dialing functions available in the EXPLORER 510. The following list shows the allocated local numbers and special-purpose numbers for the EXPLORER 510.

Number	Function
0 followed by one of the numbers 501-516 and off-hook key	Local call to one smartphone or IP handset.
0900 followed by off-hook key	Local call broadcast to all connected phones.

Apart from the numbers above, the EXPLORER 510 uses the following dialing prefixes:


- **1\*** before the phone number will force the connection to use **Standard voice.**
- **2\*** before the phone number will force the connection to use **3.1 kHz audio.**
- **#31#** before the phone number will hide the callers phone number to the recipient.
- **\*31#** before the phone number will show the callers phone number to the recipient where it would otherwise be hidden, e.g. because the number is an ex-directory number.


## To make local phone calls

You can make local calls between phones connected to the EXPLORER 510. For an overview of the available numbers, see the table in the previous section.

To make a local call, dial **<local number>** followed by **#** or **off-hook key.**



## 3.6 Alerts

When an alert is registered, the **Settings > Terminal Access** part of the EXPLORER Connect app and the web interface show a warning icon  in the icon bar as long as the alert is active. The **Alerts** list only shows alerts that are currently active.

To view the Alerts list, click  from the icon bar at the top of the page, or select **Alerts** from the **Support** page.

For more information on the event messages, refer to *List of messages* on page 5-12.

## 3.7 Status of the EXPLORER 510

- **EXPLORER Connect app:** Select **Dashboard** to see status information
- **Web interface:** If the screen for the web interface is large enough, it shows a status field at the bottom of the page or in the right side of the page. If not, click  to show the status page. Click  again to return to the previous page.

The Status page shows information such as terminal status, network status, position status and ongoing communication.

## 3.8 Tracking and location reporting

The EXPLORER 510 can be used for tracking purposes. You can set up the terminal to report its position to a server at certain time intervals.

To use the tracking feature you must either set up a tracking server or get a tracking solution from your service provider. The EXPLORER 510 must be set up to match this server. For information how to set up the EXPLORER 510, see *To set up tracking and location reporting* on page 4-33. Once set up on both sides, the EXPLORER 510 will send position reports to the server as specified.

## 3.9 To charge your smartphone

To charge your smartphone, connect it to the USB interface on the EXPLORER 510. The connector is a standard USB A connector.



### Note

There are two levels of charge current, 0.5 A or 1.0 A. Use the EXPLORER Connect app or the web interface to select the charge current for your device. See *USB interface setup*. The default charge current is 1.0 A.

## Configuration

This chapter describes how to use the **web interface** to operate, set up and configure your system. It has the following sections:

- *Configuration with EXPLORER Connect app*
- *The web interface*
- *To point the antenna (BGAN)*
- *To enter the SIM PIN in the web interface*
- *To control data connections from web interface (BGAN)*
- *Status information*
- *The Control panel*
- *To use the logs*
- *Battery status information*
- *To set up the interfaces*
- *To manage connected devices (Traffic control)*
- *To manage smartphones (IP handsets)*
- *Support features*
- *Terminal settings*
- *To set up your data connection packages*
- *To set up tracking and location reporting*
- *Advanced LAN*
- *Advanced settings*
- *Optional: To set up cellular network for data*

## 4.1 Configuration with EXPLORER Connect app

If you want to use your smartphone to configure your EXPLORER 510, get the EXPLORER Connect app, which is available for iPhone or iPad (from the Apple Store) and for Android phones (from Google Play).

For an overview of the functions of the EXPLORER Connect app, see *The EXPLORER Connect app* on page 2-3.

To access the configuration settings, connect to the WLAN of the EXPLORER 510, start the **EXPLORER Connect** app and select **Settings > Terminal Access**. From this point you have access to the same settings as from the web interface.

**Note**

If you get a message saying **Network Unavailable** or **Connection error** it means you are not connected to the WLAN of the EXPLORER 510. For how to connect, see *To connect your WLAN-enabled device* on page 2-6.

## 4.2 The web interface

### 4.2.1 What is the web interface?

The web interface is built into the terminal and is used for operating, setting up and configuring the system.

You can access the web interface from a computer with a standard Internet browser, or from a smartphone with the EXPLORER Connect app.

### 4.2.2 To access and navigate the web interface

#### To access the web interface

To access the web interface, do as follows:

1. Start up the terminal.  
For details, see *To switch the EXPLORER 510 on or off* on page 2-6.
2. Connect your computer to the terminal.
3. Open your browser and enter the IP address of the terminal in the address bar.  
The default IP address of the terminal is **192.168.0.1**.
4. Enter the user ID and password for the terminal. You can log in as user or administrator.  
Note that for **first time use** you must log in as administrator with **user id: administrator** and **password: admin**.

#### Important

If you logged in with the default administrator password you are immediately prompted to change the password. The new password must be a secure password with min. 8 characters consisting of lowercase and uppercase, numbers and special characters.


Login as normal **user** is only possible if set up first by the administrator. See *To change the user password* on page 4-36.

#### Note

Some parts of the web interface may not be accessible if the user permissions are limited. For information on how to set up user permissions, see *To set up user permissions* on page 4-37.

#### To change the language


When you have access to the web interface, if you want to display a different language than English, do as follows:

1. Select the Control panel  in the bottom right corner.
2. Select **Terminal settings**.
3. At **Language**, select a language from the drop-down list and click **Save**.


You can change the language to **French, German, Russian, Spanish, Chinese, Japanese** or **Portuguese**.

## Overview of the web interface

When the web interface opens, the title bar shows the name of the product. The example below shows the **Support** page.

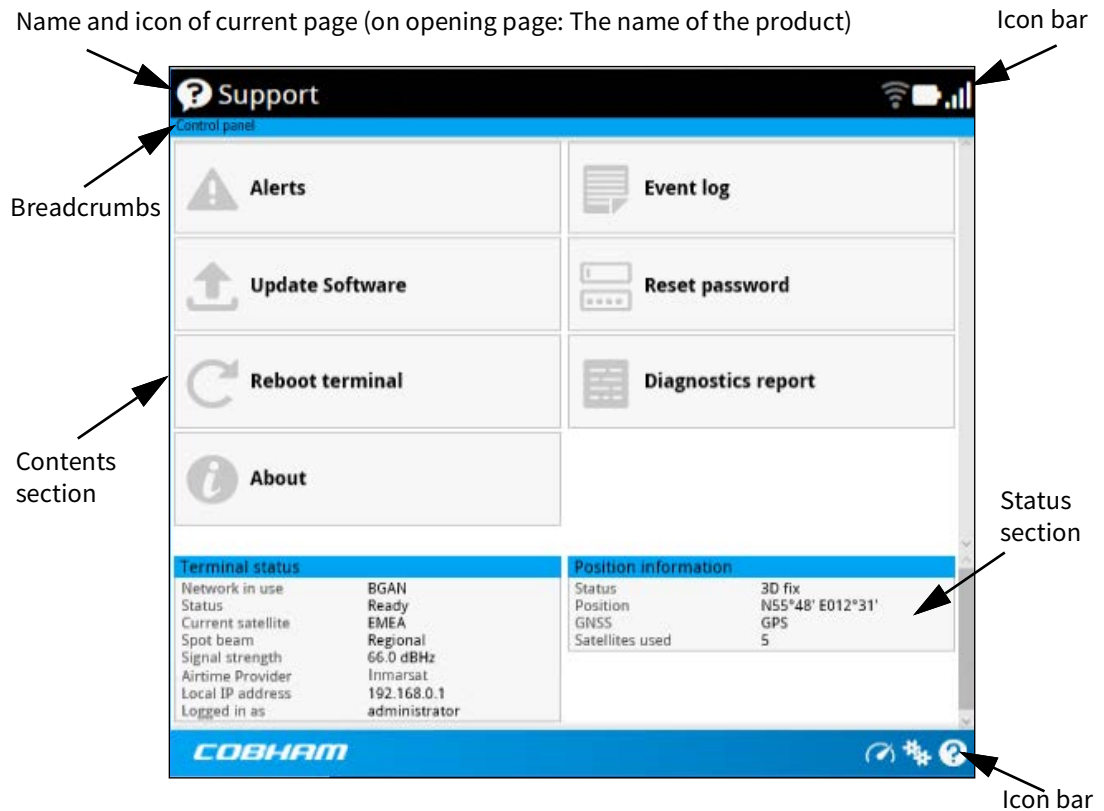













The web interface consists of the following sections.


- **Name** of current page. Tap or click to refresh the page.
- **Icon bars** at the top and bottom are present on all pages and hold icons that give access to status such as battery level and signal level as well as active alerts when relevant. It also holds the icon for the Control panel. For explanations of the icons, see the next section, *Icons in the icon bars*.
- **Breadcrumbs** right below the icon bar show the current location in the menu system and gives access to the higher levels in the menu.
- **Contents section** shows the contents of the selected page. This section is used for viewing or changing settings, or for performing actions. On the opening page, this section is used to start and stop data connections.
- **Status section** shows the status of the terminal and the network connection, position information, ongoing calls and data sessions etc. The Status section is not shown on small screens. If the screen is small (e.g. on a smartphone), you can show/hide the status by clicking  at the bottom of the page.

## Icons in the icon bars

The icon bars are always available at the top and bottom of the web interface. Some of the icons are permanent while others are temporary.

Icon	Explanation
 	<p>Power status. The icon changes according to status. Click to see detailed battery status.</p> <p>Battery level</p> <p>Battery charging</p>
 	<p>Signal level of the external network (BGAN or cellular).</p> <p>If <b>Connection Mode</b> is set to <b>User selection</b> in the terminal settings, click to select the network to use (BGAN or EXPLORER Cellular Modem).</p> <p><b>M</b> at the signal bars shows that cellular network is active with the shown signal level.</p>
 	<p>WLAN interface. Bright when WLAN is enabled, grayed when it is disabled. Click to access WLAN settings.</p> <p>The WLAN icon shows the number of connected devices.</p>
	<p>Help. Click to get context-sensitive help for the current page.</p>
	<p>Control panel. Click to access the settings.</p>
 	<p>Startup page where you can start and stop data connections. Click to go to the startup page.</p> <p>The “1” at the icon shows that a BGAN data connection package is running.</p>
	<p>Status. If the screen is not large enough to show the status field, this icon appears at the bottom of the page. Click the icon to see status of the terminal and satellite connection. Click again to exit the status page.</p>
	<p>An alert is active.</p> <p>Click the icon to see a list of active alerts.</p> <p>Note that this icon will remain in the icon bar as long as the alert is still active.</p>

## To navigate the web interface

- **To access status and settings**, tap or click the relevant icon in the icon bar or select  to access the **Control panel**. The status or settings are displayed in the contents section.
- **To see your current location and to move back through the Control Panel menu**, use the breadcrumbs just below the icon bar.
- **To scroll through longer pages**, use the scroll bar or swipe.
- **To refresh the current page**, press Ctrl+F5 (PC) or Apple+R (Apple) or Cmd+R (Apple).


## 4.3 To point the antenna (BGAN)

Before you can use the BGAN network, you must point the antenna in the direction of the satellite and find the best possible signal strength. For detailed information on the pointing procedure, see *To point the antenna (BGAN)* on page 2-8.

You can use the EXPLORER Connect app or the web interface to help you with the pointing process.

### 4.3.1 Pointing in web interface

To start the pointing process from the web interface, do as follows:

1. If the pointing process is not automatically started, select  (Control panel) and then **Point now**.  
The signal strength is shown on the screen.
2. Turn and tilt the antenna slowly until you have obtained the highest possible signal strength.
3. Click **OK**.

The terminal will now try to register on the BGAN network.

### 4.3.2 Pointing in EXPLORER Connect app

To start the pointing procedure from the EXPLORER Connect app, do as follows:

1. Select **Settings > Pointing** from the EXPLORER Connect app.
2. If the pointing process is not already started, tap **Start**.  
The signal strength is shown on the screen.
3. Turn and tilt the antenna slowly until you have obtained the highest possible signal strength.
4. Tap **Accept**.

The terminal will now try to register on the BGAN network.

If your SIM card uses a PIN you will now be prompted to enter the PIN. See the next section for details.

## 4.4 To enter the SIM PIN in the web interface

### Note

Whether you are using the BGAN network or a cellular network, you need a SIM card to access the network. If you are using BGAN, the SIM is inserted in the terminal and if you are using the EXPLORER Cellular Modem the SIM card is inserted in the modem.

The method for entering the PIN is the same for both types of network.

### 4.4.1 Do you need a SIM PIN?

### Note

You may not have to enter a SIM PIN to access the terminal. This depends on whether or not the use of a SIM PIN is enabled on your SIM card.

The administrator can enable and disable the use of a SIM PIN. For details, see *To enable or disable the use of a SIM PIN* on page 4-38.

If a smartphone or computer is connected when you start up the terminal, you can access the web interface and enter the SIM PIN here.

### 4.4.2 To enter the SIM PIN

If your SIM card requires a PIN and the PIN has not yet been entered, you must enter it before you can make calls or access the Internet. Until you have entered the PIN you cannot access the network, but you can still configure your terminal.

To enter the PIN, do as follows:


1. Access the web interface.  
If the terminal needs a PIN, a popup window tells you to enter PIN.
2. Type in your PIN and click **OK**.

When pointing is completed and the correct PIN is entered, you are ready to make calls or access the Internet.

### 4.4.3 To cancel the SIM PIN

If you select **Cancel** when you are asked for a PIN, you can use the web interface as normal, but you will not be able to access the network to make calls or data sessions. Only emergency calls will be possible, and only if the network allows it.

**To enter the PIN later**, after canceling the first time, do as follows:

1. From the icon bar at the top, click .  
The **Alerts** list opens.
2. Click **Resolve** next to **Enter PIN for BGAN** or **Enter PIN for cellular modem**.
3. Type in your PIN and click **OK**.

## 4.5 To control data connections from web interface (BGAN)

The startup page of the web interface is used to start and stop data connections and to set up the data connections.



**Note** | If you are using the EXPLORER Cellular Modem instead of the BGAN network, see *Optional: To set up cellular network for data* on page 4-48.


### 4.5.1 To start and stop data connections



**Note** | By default, if you want to use a data connection, you must manually start it from the EXPLORER Connect app or from the web interface. However, you can set up the EXPLORER 510 to automatically connect to the Internet when you connect equipment to the WLAN interface. See *Automatic Context Activation (ACA)*.

To start and stop data connections on your EXPLORER 510, do as follows:

1. In the opening page, locate the connection package you want to start.

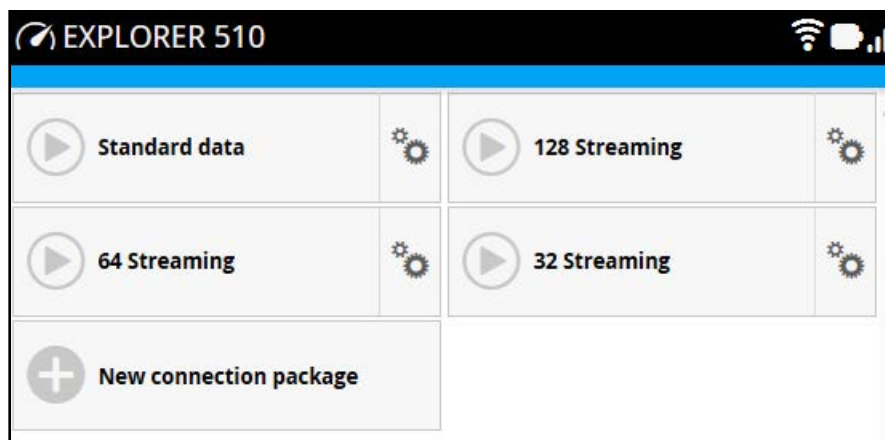**Note** | The icons for starting  and stopping  connections are only active if the terminal is ready and registered on the BGAN network. Otherwise you cannot start data connections.





2. Click  to start the connection. The connections icon at the bottom of the page shows  when a BGAN data connection package is running.

**Note** | Once a Streaming connection is started, the connection will run until you stop it. You will be charged for the time you are connected.

3. Click  to stop the connection.

If data is temporarily suspended, e.g. due to a blockage, the icon on the active connection turns yellow instead of green, and the Status field shows Data suspended.

If the connection fails, the connection tile shows an exclamation mark  and an error message. The error message is also shown in the data log, see *Data log* on page 4-13.

When a connection is active, the icon changes to  and the tile for the active connection shows:

- IP address: The IP address that has been assigned by the service provider to this session.

- Transferred data: For Standard data, the tile shows the total amount of transmitted and received data since the connection was established.
- Connection duration: For Streaming data, the tile shows the total time the connection has been active.
- Bit rate: For Streaming connections, the tile shows the fixed bit rate.



## 4.5.2 Default data connection types


By default, the following connections are available:

Name	Type of connection
<b>Standard data</b>	Several users can share the data connection. This type of connection is ideal for TCP/IP traffic such as e-mail, file transfer, and Internet/intranet access.  The user pays for the amount of data sent and received.
<b>Streaming data</b> The following Streaming classes are available: 32, 64 or 128 Streaming	An exclusive, high-priority connection, ensuring seamless transfer of data. This type of connection is ideal for time critical applications like live video over IP. The user pays for the duration of the connection.

You can use these connections as they are or build your own connection packages. For set up of the connection packages, see the section *To set up your data connection packages* on page 4-29.

## 4.6 Status information

If the window is large enough, it shows a status field at the bottom of the page or in the right side of the page. If not, click  at the bottom of the page to show the status page. Click  again to return to the previous page.

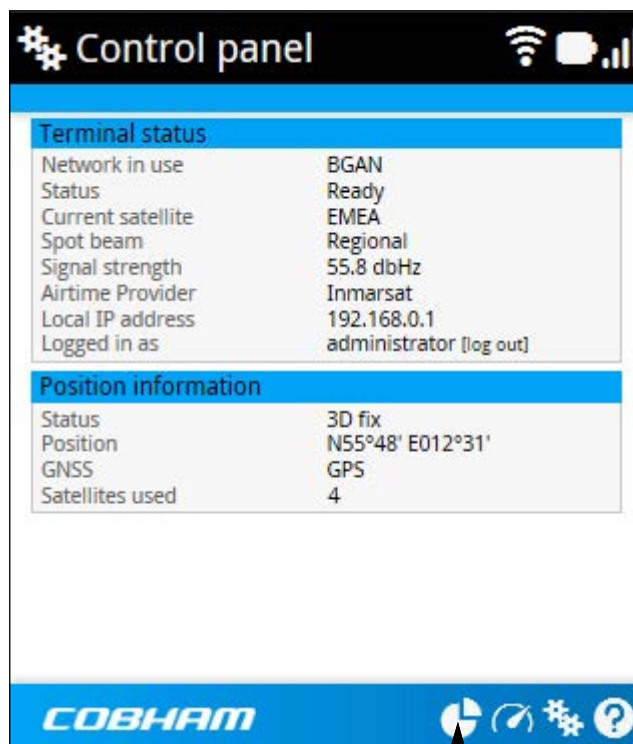

Toggle between status and contents page

The following status is available:

**Note** | Shown fields depend on the mode of the terminal (BGAN or Cellular)

Terminal status:

- Network in use: The network currently used (BGAN or Cellular).
- Status: The status of the BGAN network (or cellular network, if used). “Data” means a data connection is running. The status could also be e.g. “Registering” or “Ready”.
- Current satellite: The BGAN satellite to which the EXPLORER 510 is currently registered.
- Spot beam: The type of BGAN spot beam currently used, e.g. “Regional” or “Narrow”.
- Signal strength: The signal strength of the BGAN connection.
- Airtime Provider: The provider of the BGAN services.
- Network operator: The operator (or provider) of the Cellular network, if used.
- Local IP address: The local IP address of the EXPLORER 510. E.g. used to connect to the web interface.
- Logged in as: You can log in as Administrator. This field shows if you have administrator rights.

Position information:

- Status: Shows the status of the GNSS connection, e.g. if there is 2D fix, 3D fix or no fix.
- Position: The geographic position of the EXPLORER 510.
- GNSS: Shows which GNSS system is currently used to obtain the position.
- Satellites used: Shows how many GNSS satellites are used to obtain the position.


## Data information (only shown if a data connection is running)


- EXPLORER Cellular Modem: Shows which type of data is running on the cellular connection.
- Standard data (or other connection package name): Shows which type of data is running within the connection package. For details on connection packages, see *To set up your data connection packages* on page 4-29.

## Call information (only shown if a voice call is ongoing)

- Status: The status of the call, e.g. “Connected” or “Ringing...”.
- Call type: Shows whether the call type is Standard voice or Premium voice (3.1 kHz Audio).
- Call duration: The duration of the call.
- Originator: The phone number from which the call was made.
- Receiver: The phone number that receives the call.

## 4.7 The Control panel

The **Control panel** is used for accessing the settings and functions of your EXPLORER 510. To open the **Control panel**, click  from the bottom right corner of the web interface.

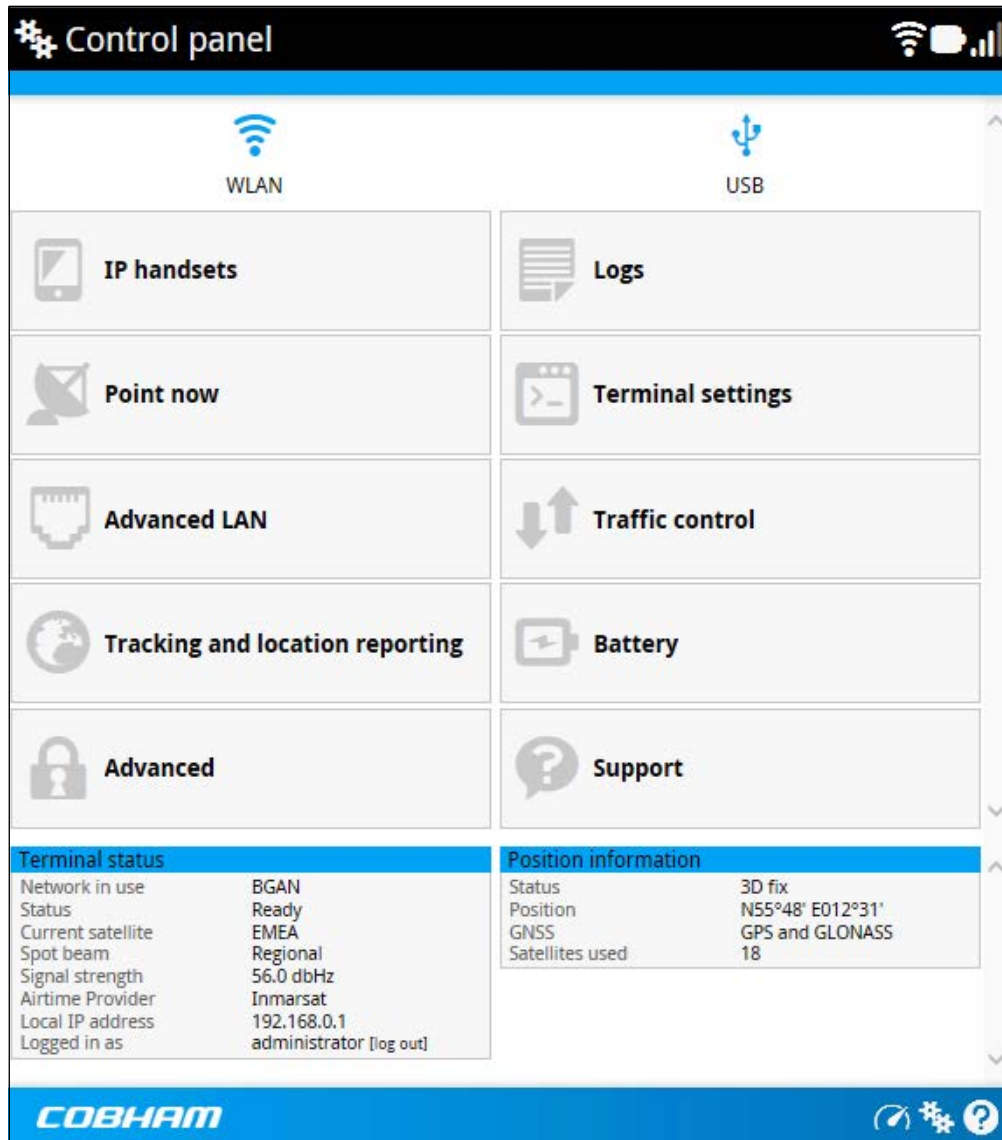

The screenshot shows the 'Control panel' interface with a blue header and a grid of settings tiles. At the top, there are icons for WLAN and USB. The main grid contains tiles for IP handsets, Logs, Point now, Terminal settings, Advanced LAN, Traffic control, Tracking and location reporting, Battery, and Advanced. Below these is a 'Support' tile. At the bottom, there are two summary tables: 'Terminal status' and 'Position information'. The COBHAM logo and navigation icons are at the very bottom.

Terminal status	
Network in use	BGAN
Status	Ready
Current satellite	EMEA
Spot beam	Regional
Signal strength	56.0 dbHz
Airtime Provider	Inmarsat
Local IP address	192.168.0.1
Logged in as	administrator [log out]

Position information	
Status	3D fix
Position	N55°48' E012°31'
GNSS	GPS and GLONASS
Satellites used	18

## 4.8 To use the logs

### 4.8.1 To access the logs

To access the Logs, select  and select **Logs** from the menu. The Logs page contains:

- **Call log:** A list of all incoming, outgoing and missed calls since the log was last cleared.
- **Data log:** A list of all data sessions since the log was last cleared.
- **Total counters:** Totals for each type of service since the log was last cleared.

Date and time is the international UTC time, received from the satellite.

### 4.8.2 Call log

The Call log shows:

- **Outgoing calls** shows the start time, receiving end phone number, duration, type (Standard voice or 3.1 kHz audio) and, if Call charges have been entered, estimated charge of each outgoing call.
- **Received calls** shows the start time, calling phone number, duration and type (Standard voice or 3.1 kHz audio) of each incoming call.
- **Missed calls** shows the start time, calling phone number and type (Standard voice or 3.1 kHz audio) of each incoming call that was not received.

The Call log also shows the termination cause of each call.

To clear the Call log, click the **Clear call log** button at the top.

### 4.8.3 Data log

The Data log shows:

- Data usage (bytes), date and time and estimated charge of each Standard data session (if Call charges have been entered).
- Duration and type (such as 64 kbps, 128 kbps), date and time and estimated charge of each Streaming data session (if Call charges have been entered).
- Data usage, date and time of each cellular data connection.

The Data log also shows the termination cause of each data session.

To clear the Data log, click the **Clear data log** button at the top.

### 4.8.4 Total counters


The total counters show:

- **Call session totals** shows the total duration (hh:mm:ss) for each call type since the log was last cleared. It also shows the estimated call charge for each call type (if Call charges have been entered).
- **Data session totals** shows totals for each data connection type since the log was last cleared. For Standard data the totals are shown as amount of data transferred (kB) and for Streaming connections the totals are shown in duration (hh:mm:ss). It also shows the estimated charge for each data type (if Call charges have been entered).
- **Cellular session totals** (only present if the optional cellular modem is used) shows totals for each cellular data connection since the log was last cleared.

To reset the Total counters, click the **Reset total counters** button at the top.

## 4.9 Battery status information

To view the status of the battery, do one of the following:

- Click the battery symbol from the icon bar at the top of the page, or
- from the **Control panel** , select **Battery**.

The Battery page shows the **Status** (E.g. Charging, Discharging, Fully charged or Idle<sup>1</sup>), the **Charge level** in percent, the **Estimated remaining usage time** (not shown when external power is connected) and the **Temperature**.

**Note**

The estimated remaining usage time can vary significantly, depending on usage. The remaining time will be shorter if the terminal is used heavily (more interfaces in use and more calls and data sessions active).

The estimated remaining usage time stated while the battery is Idle is the time that the terminal will run when the battery is active (discharging).

For more information on the EXPLORER 510 batteries, see

- *Normal use of the battery* on page 5-6
- *To recharge the battery* on page 5-6
- *Accurate display of the battery capacity* on page 5-6
- *Battery specifications (internal battery)* on page A-2

---



1. “Idle” in this case means the battery is not in use, e.g. because external power is applied while the battery is full.

## 4.10 To set up the interfaces

### 4.10.1 WLAN interface setup

**Note** The Internet settings entered in the Terminal settings page also apply for the WLAN interface. See *Internet and LAN connection modes* on page 4-26.

To configure the WLAN interface, do as follows:

1. In the **Control panel** , click the **WLAN** icon  at the top of the page.
2. To enable the WLAN interface, select **Enable**.

**Note** In the web interface, if you are using one of the WPA or WPA2 encryption standards, you **cannot enable WLAN without setting a new, valid encryption key**.

**Important** If you disable WLAN you may not be able to access the EXPLORER 510. Before disabling the WLAN interface, make sure you have a working LAN connection with the USB to LAN Converter Cable.  
You can restore the WLAN settings with the Reset button, see *Restore the settings of the EXPLORER 510* on page 5-5.

**Note** It may take some seconds to enable the interface.

3. Next to **Region**, select the region you are located in.

**Note** In some countries, the use of WLAN is not allowed. Before continuing, make sure WLAN is allowed and licensed in the country where you intend to use it.



4. Select the **Channel** number used for communication on the WLAN interface.
5. Select **Broadcast SSID** to show your WLAN access point to other users.  
If you **clear** the box, your WLAN access point is hidden.
6. Type in the **SSID**.  
The SSID is a max. 32 character text identifying the wireless local area network. All wireless devices on a WLAN must use the same SSID in order to communicate with each other. The default SSID is **EXPLORER510**.
7. Select the **Security** standard. You may select one of the following encryption standards:
  - None (no encryption is applied)
  - WEP-40/64
  - WEP-104/128
  - WPA-TKIP
  - WPA-2-AES (selected by default)
8. Next to **Key type**, select **Hexadecimal** or **Text**.  
The encryption key must normally be a hexadecimal code. However, if you are using WPA-TKIP or WPA2-AES encryption (default) you can choose to use a text string, which may be easier to memorize.
9. Type in the **Encryption key** for the selected Security standard (not applicable if security mode = None). The default encryption key is the **serial number** of the EXPLORER 510. You

can find the serial number under **Control panel > Support > About** or on the label on the EXPLORER 510.

**Important**

You **cannot enable the WLAN interface** in the web interface until you **change the encryption key** to a personal code. The new code must have minimum 8 characters and consist of uppercase and lowercase letters, numbers and special characters.

10. Click **Save**.

-  A line through a grayed-out **WLAN** icon means the interface is **disabled**.
-  A blue **WLAN** icon means the interface is **enabled**.

For a description of how to set up the **local network parameters**, see *Internet and LAN connection modes* on page 4-26 and *Advanced LAN* on page 4-34.

## 4.10.2 USB interface setup

Note that the USB interface is a Host interface, primarily used for charging smartphones, for recovery software upload or for connecting an EXPLORER cellular modem.

To configure the USB interface, do as follows:

1. In the **Control panel** , click the **USB** icon  at the top of the page.
2. To enable the USB interface, select **Enable** (USB is enabled by default from the factory).

**Note**

It may take some seconds to enable and disable the interface.

3. Select the **Charge current**.

Select **0.5 A** or **1.0 A**, depending on the specifications for the device you are going to connect.

4. Click **Save**.

-  A line through a grayed-out **USB** icon means the interface is **disabled**.
-  A blue **USB** icon means the interface is **enabled**.

## 4.11 To manage connected devices (Traffic control)


By default, traffic control is disabled, which means that all traffic is allowed.

With the Traffic control function you can get an overview of devices connected to your EXPLORER 510 and control which devices you want to connect. You can also select whether or not they should be allowed to use BGAN or cellular network. Note that the available settings depend on whether or not you are logged in as administrator.

**Note** | The cellular modem setting is only available if an EXPLORER Cellular Modem is inserted in the EXPLORER 510.

### 4.11.1 Traffic control (Non-administrator user)

To set up traffic control, do as follows:

1. In the **Control panel** , click **Traffic control**.  
A list of connected and added devices appears.



2. Click your connected device to see MAC address and IP address and to change the name or block/allow the use of BGAN or Cellular network. See the next section.

### To block BGAN or cellular traffic or edit the name for your device

**Note** | You can only change these settings if traffic control is enabled. If the administrator has disabled traffic control, all traffic is allowed.


1. In the **Traffic control** page, click your connected device.  
The page shows the name, MAC address, IP address and traffic rule for the device.
2. Select **Block BGAN traffic** or **Block Cellular traffic** (if available), if you want to deny access to BGAN or cellular network for your device.

**Note** | If it is already blocked by the administrator, this setting is not editable.


3. At **Name**, type in the name you want for your device.
4. Click **Save**.

## 4.11.2 Traffic control (Administrator)

When you are logged in as administrator, the Traffic control setup offers more options. To set up traffic control as administrator, do as follows:

1. Log in as administrator.
2. In the **Control panel** , click **Traffic control**.  
A list of connected and added devices appears.
3. Click the **Enable** button to enable Traffic control.  
By default Traffic control is disabled, which means all devices are allowed access.

**Note** | When you enable traffic control, BGAN is blocked by default for all new devices. To change the default settings, see the next section.

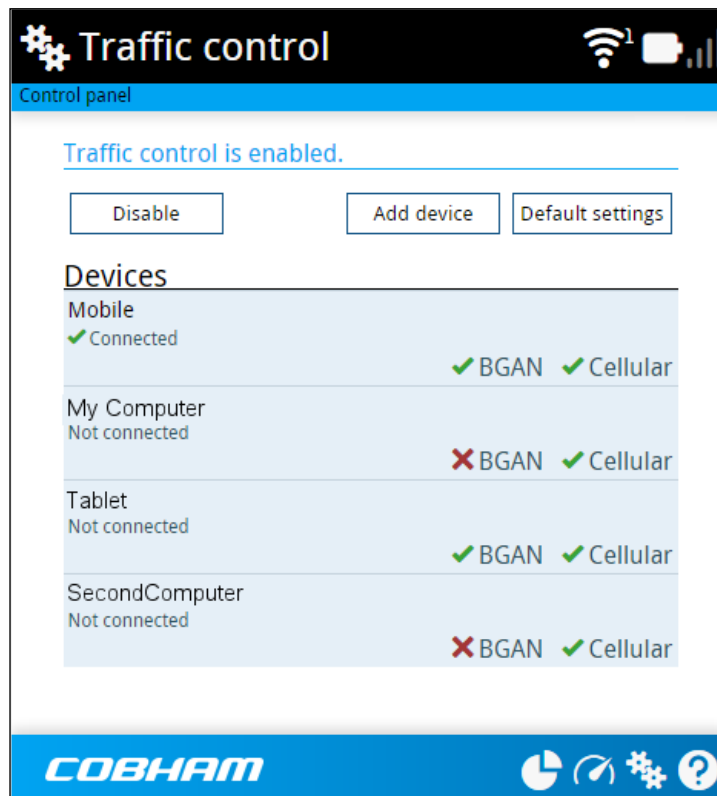

To change the default settings for all devices

**Important** | All devices in the list are updated with the default settings when you click Save.

1. Click the button **Default settings**.
2. Select **Block BGAN traffic** or **Block Cellular traffic** (if available) if you want to deny access to BGAN or cellular network for all devices. With this option selected, only the administrator will be able to allow access for selected or all devices.
3. Click **Save**.  
All devices in the list will now have the new default settings.

## To block or allow BGAN or cellular traffic or edit the name for a device

1. In the **Traffic control** page, click the device you want to set up.  
The page shows the name, MAC address, IP address and traffic rule for the device.
2. Select **Block BGAN traffic** or **Block Cellular traffic**, if you want to deny access to BGAN or cellular network for the selected device.  
If you want to **allow** access, clear the box. The selected device will then be able to access the network, even if it is blocked in the default settings (see previous section).
3. At **Name**, type in the name you want for your device.
4. Click **Save**.

**Reset to default:** You can reset the settings for the device to the default settings (see previous section).

- If the device is connected and you click the button **Reset to default**, the traffic rules will be reset to the default values set in *To change the default settings for all devices* on page 4-18, but the name remains the same.
- If the device is not connected and you click the button **Reset to default**, the device is removed from the list.

## To Add a device

When you connect a device, it is automatically added to the list using the default settings. If you want to add a device for later use, do as follows:

1. In the **Devices** page, click the **Add device** button.
2. Type in the **Name** and the **MAC address** for the device.
3. Select **Block BGAN traffic** or **Block Cellular traffic**, if you want to deny access to BGAN or cellular network for the selected device.  
If you want to allow access, clear the box. The selected device will then be able to access the network, even if it is blocked in the default settings (see previous section).
4. Click **Save**.

When the device with this MAC address is connected, it will appear with the entered name in the list, and access will be allowed or denied depending on the setting in this page.

## 4.12 To manage smartphones (IP handsets)

### 4.12.1 Overview


This section describes how to manage smartphones connected to the EXPLORER 510.

The WLAN interface supports connection of up to 10 units. Each phone must have a local number in the range 0501 to 0516 as well as a unique password. For details, see the next section.



For details on SIP settings and how to connect your phone to the WLAN interface, see *To enable phone calls over BGAN* on page 2-13.

### 4.12.2 To manage smartphones in your EXPLORER 510

Do as follows:

1. Connect your smartphone to the WLAN interface of the terminal. For details, see *To enable phone calls over BGAN* on page 2-13.
2. In the web interface, select  (Control panel) > **IP handsets**.
3. Click the tile for the handset number you want to manage.
4. Select **Enable** to enable the handset.

**Note** | It may take some seconds to enable the handset.

-  on the tile for your handset means the handset is **disabled**.
  -  on the tile for your handset means the handset is **enabled**.
5. To change the **Password**, simply type in the new number.
  6. Set the call type for incoming calls.  
You can select **Standard voice** or **3.1 kHz audio** or both.
    - If you select both, the handset will react (ring) on incoming calls.
    - If you select e.g. Standard voice, the handset will only react on calls made to the Standard voice phone number of your EXPLORER 510.
  7. Select the **Preferred outgoing call type**.  
The selected type will be used by default, if possible, for any outgoing call from this handset.
  8. Click **Save**.
  9. In the smartphone, enter the local number and the password you just entered in the EXPLORER 510. See the documentation for your handset for details.

**Note** | The user name is also the local number for the handset.


The handset remains in the list after disconnecting. When the handset is connected again, it is automatically recognized and ready for use, if enabled.

### Cobham Satcom IP Handset and access to BGAN profile and menu


If you want the terminal to support BGAN profile and menu in Cobham Satcom IP handsets, you must set this in the **Advanced** > **Security** page. Refer to *Security* on page 4-46.


## 4.13 Support features

To open the Support page, select  (Control panel) > **Support**.

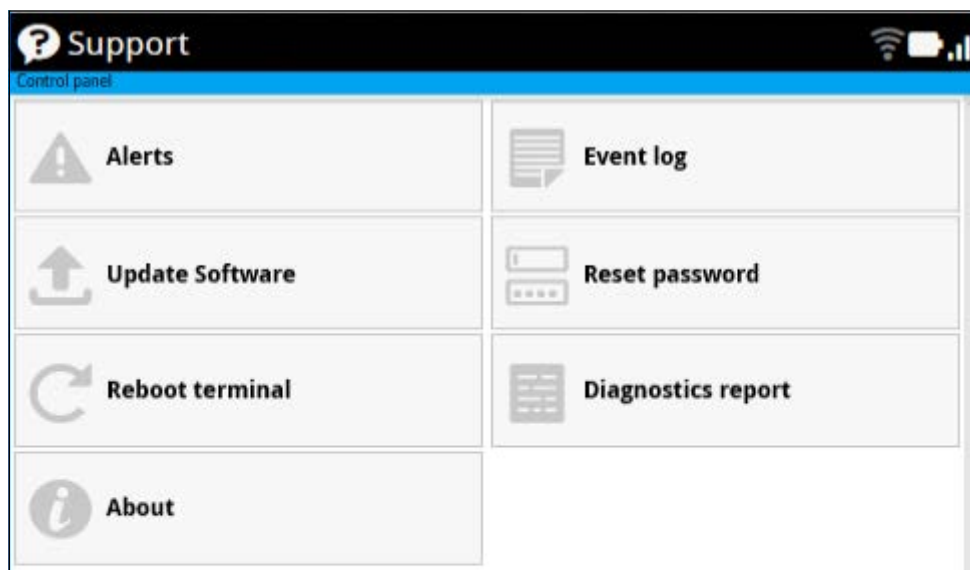

### 4.13.1 To view the Alerts

When an alert is registered, the web interface shows a warning icon  in the icon bar as long as the alert is active. The **Alerts** list only shows alerts that are currently active.

1. To view the alerts, click  from the icon bar at the top of the web interface, or select **Alerts** from the **Support** page.

The **Alerts** page shows a detailed list of active events including the time of the first occurrence, ID and severity of the event message, and a short text describing the error. For more information on the event messages, refer to *List of messages* on page 5-12.

### 4.13.2 To view the Event log

The Event log shows events that occurred in the past and are no longer active. It includes events of informational character describing normal phases of operation for the terminal, and also alerts that have appeared in the Alerts list.

To view the event log, select **Event log** from the **Support** page.

### 4.13.3 To create a diagnostics report

The diagnostic report contains relevant information for troubleshooting. When contacting your supplier for support, please enclose this file. To generate a diagnostic report, do as follows:

1. From the **Support** page, click **Diagnostics report**.
2. Click **Generate report**.


**Note** | It may take a few minutes to generate the report.

3. Select **Download report**.
4. Choose a location for the file and save it.

## 4.13.4 To update software

**Important** | If the battery power is 25% or less you must connect DC power to the terminal before starting the software update. Once connected, do not remove DC power until the software update is completed.

To update the software in the EXPLORER 510, do as follows:

1. Download the new software<sup>1</sup> or acquire the software from Cobham Satcom and save it on your computer.
2. Open the web interface, log in and enter the Control panel .
3. Click **Support > Update software**.
4. Click **Update software...**
5. Browse to the new software version and click **Open**. The software file has the extension “.tiff”.
6. The terminal restarts and completes the software update.

**Note** | The update procedure takes some minutes to complete. During the software update, the Status LED is blinking blue.

You can check the software version under **Control panel > Support > About**.

If, for some reason, you cannot upload software using the web interface, you can also use the USB interface. For details, see *To update software with USB* on page 5-3.

---

1. You can download the software from the Cobham Satcom Partner Portal at [partnerportal.cobhamsatcom.com](https://partnerportal.cobhamsatcom.com). Search for EXPLORER 510, select **Downloads** and locate the EXPLORER 510 software.

### 4.13.5 To reset the administrator password

If you have forgotten the administrator password, do as follows:

1. Contact your supplier for a reset code.  
Report the serial number and IMEI number of the terminal.  
You can find the serial number and IMEI number under **Control panel > Support > About**.
2. After receiving the reset code from your supplier, select **Reset password** from the **Support** page.
3. Type in the reset code obtained from your supplier and click **Reset**.
4. The password is reset to **admin**. Note that you are required to change the administrator password immediately after login.

### 4.13.6 To restart the terminal

If you want to restart the terminal, do as follows:

1. From the **Support** page, select **Reboot terminal**.
2. Click to confirm the reboot.

The terminal restarts. Note that this is the equivalent to switching the terminal off and on again.


### 4.13.7 About

The **About** page shows the **Serial number, IMSI number, IMEI number** and **software version** of your EXPLORER 510. It also shows your **Help desk** information, if it has been entered under **Advanced > Help desk**.

To access the About page, select **Support > About**.

## 4.14 Terminal settings

To configure the terminal settings, select  (Control panel) > **Terminal settings**.

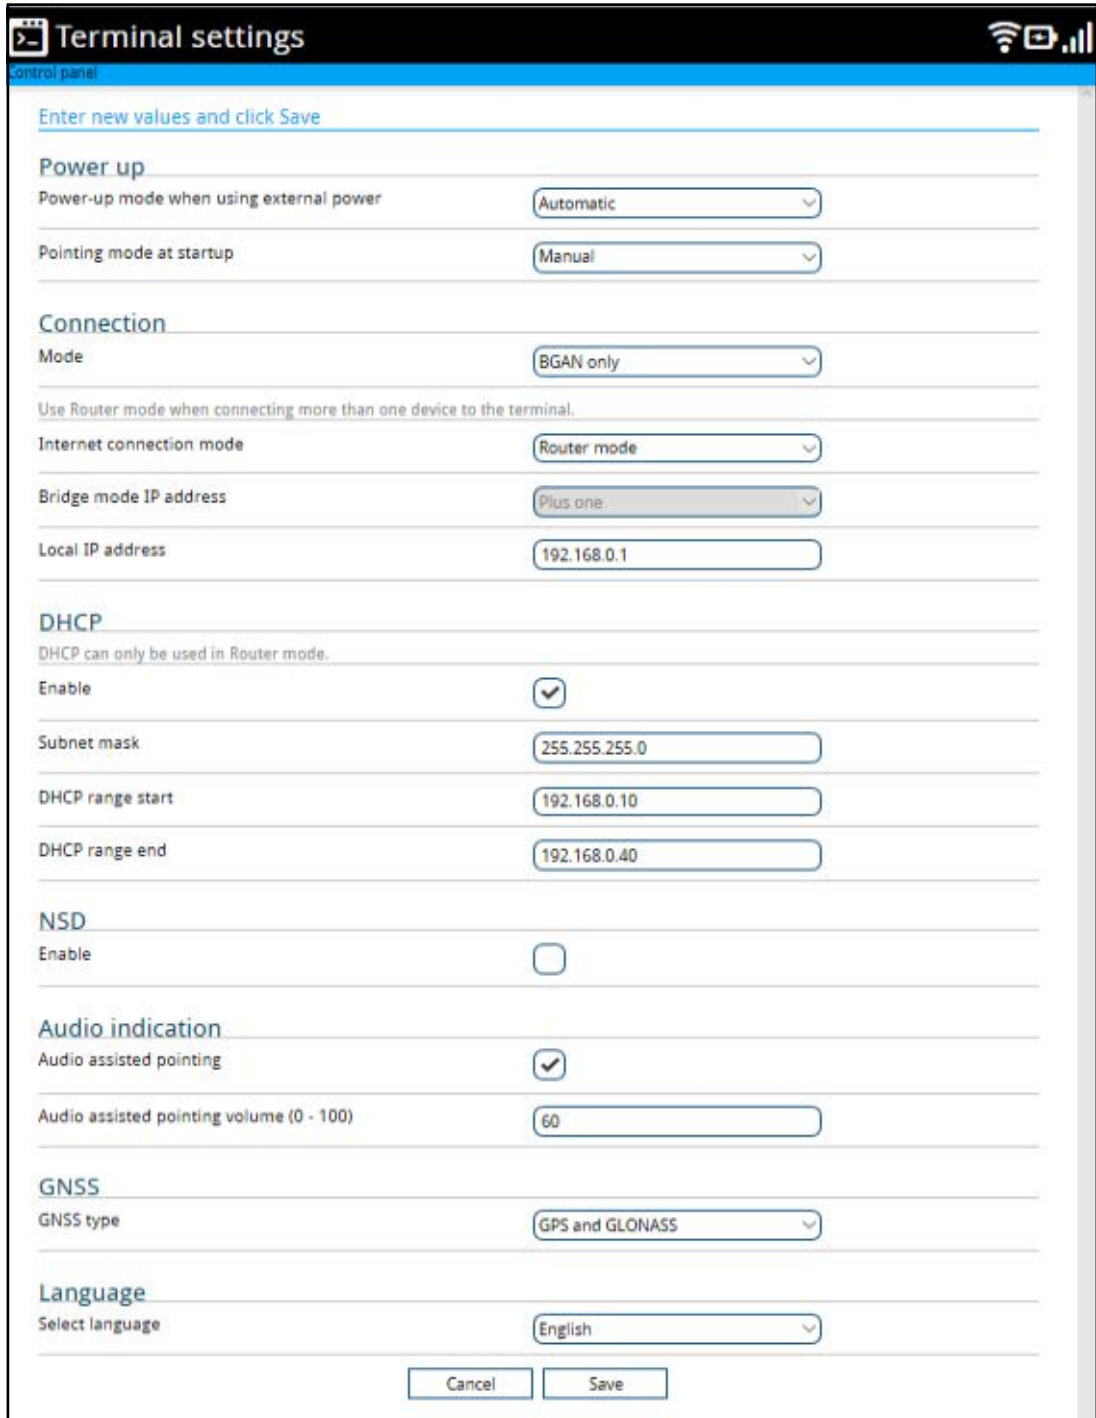

**Terminal settings**

Control panel

Enter new values and click Save

**Power up**

Power-up mode when using external power

Pointing mode at startup

**Connection**

Mode

Use Router mode when connecting more than one device to the terminal.

Internet connection mode

Bridge mode IP address

Local IP address

**DHCP**

DHCP can only be used in Router mode.

Enable

Subnet mask

DHCP range start

DHCP range end

**NSD**

Enable

**Audio indication**

Audio assisted pointing

Audio assisted pointing volume (0 - 100)

**GNSS**

GNSS type

**Language**

Select language

### 4.14.1 Power-up mode with external power

You can set the terminal to automatically power up when external power is applied.

1. In the **Terminal settings** page, locate **Power up**.
2. Under **Power-up mode when using external power**, select **Automatic** or **Manual**.
  - Automatic means the terminal powers up automatically when external power is applied.
  - Manual means you must use the power switch to power the terminal.
3. Click **Save**.

### 4.14.2 Pointing at start-up

You can set up the EXPLORER 510 to automatically register on the BGAN network at start-up. This is useful e.g. for semi-fixed or fixed installation, where the EXPLORER 510 is not moved around between start-ups. See *Semi-fixed installation* on page 2-16.

1. In the **Terminal settings** page, locate **Power up**.
2. Under **Pointing mode at start-up**, select **Automatic** or **Manual**.
  - If the EXPLORER 510 is moved around between each power up, select **Manual** from the drop-down list. With this setting, the terminal will go through the pointing procedure every time the terminal is powered.
  - If the EXPLORER 510 antenna is placed in a fixed position and the signal strength is sufficient, select **Automatic** to make the EXPLORER 510 automatically register on the satellite network when the terminal is powered.
3. Click **Save**.

### 4.14.3 To set up the connection mode

#### Mode (select network)

The EXPLORER 510 can use a cellular network as an alternative to the BGAN network. For details, see *Optional: To set up cellular network for data* on page 4-48.

To set up which network you want to use when starting up the EXPLORER 510, do as follows:


1. In the **Terminal settings** page, locate **Connection**.
2. At **Mode**, select from the drop-down list which mode you want the EXPLORER 510 to start up in. You have the following options:
  - **BGAN only** (default): The EXPLORER 510 uses BGAN only. You cannot use a cellular connection.
  - **Cellular modem if available at power-up**: The EXPLORER 510 uses cellular network if it is available at startup (that is if the EXPLORER Cellular Modem is inserted and the cellular network is found)
  - **Cellular modem only**: The EXPLORER 510 only uses the cellular network, not BGAN. If an EXPLORER Cellular Modem is not connected, or if the cellular network does not work for some reason, you cannot access any network.
  - **User selection**: Every time the EXPLORER 510 starts up you must select which network you want to use. You cannot access any network until you have made the selection.

## Internet and LAN connection modes

In the web interface you can set up the Internet connection mode and the IP addressing between the EXPLORER 510 and devices connected to the EXPLORER 510. The EXPLORER 510 has a built-in DHCP server which can be used to dynamically assign IP addresses to devices connected to the EXPLORER 510.

The drawing below shows examples of the IP addressing in router mode (default setup) and Bridge mode.

**Note** Bridge mode is not supported for connections to cellular network.

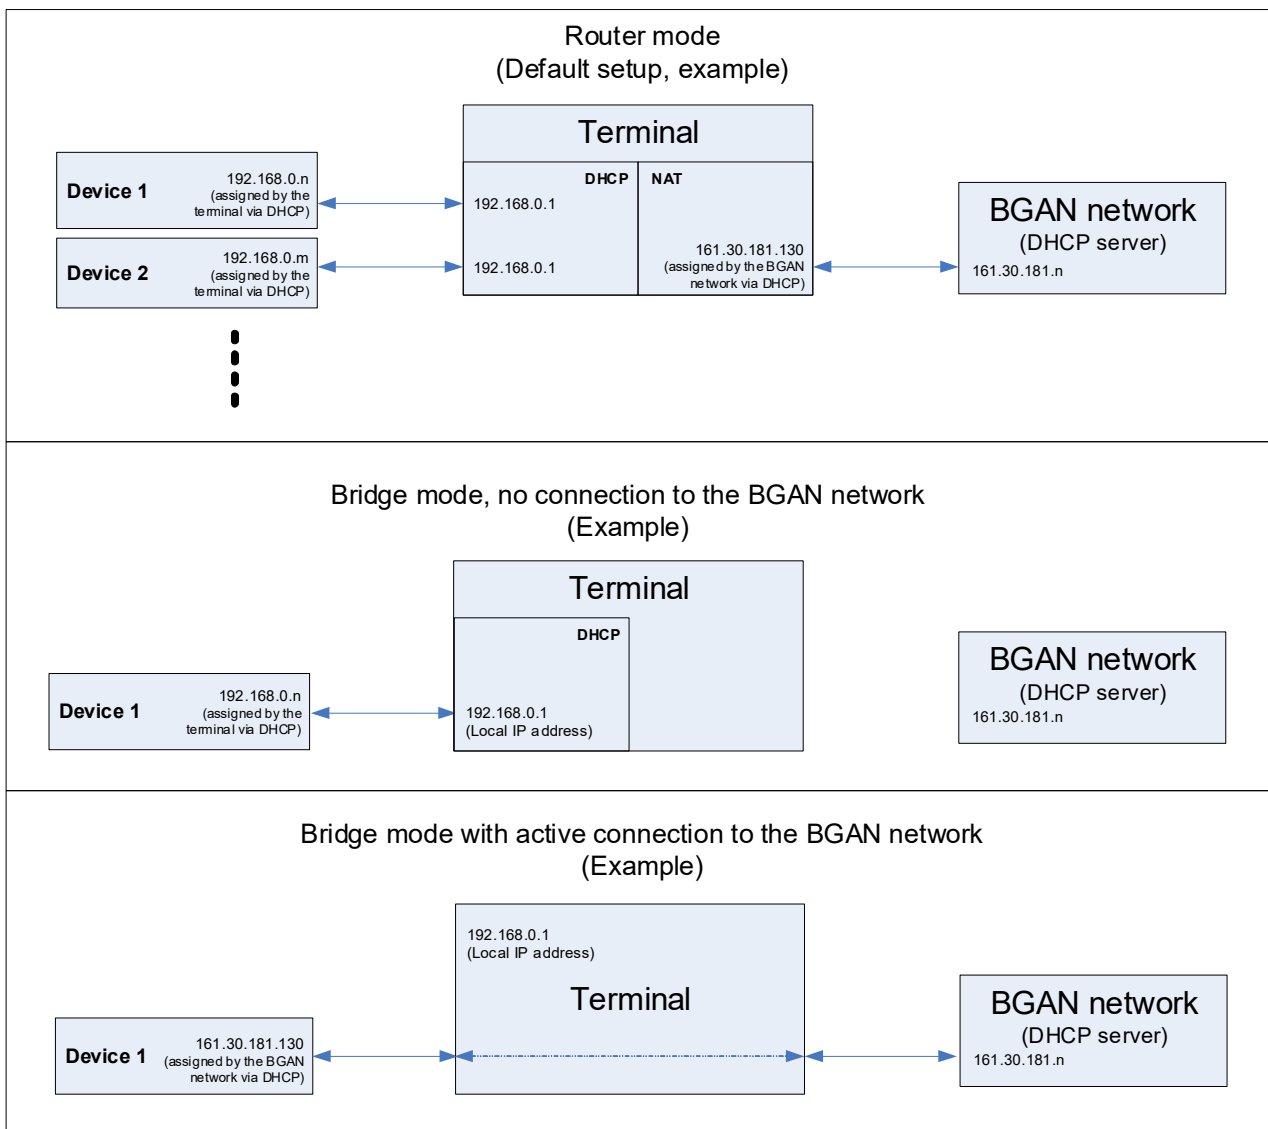

To set up the Internet connection mode of the EXPLORER 510, do as follows:

1. From the **Terminal settings** page, locate **Connection**.
2. At **Internet connection mode**, select **Bridge mode** or **Router mode**. Router mode is the default setting and is recommended for most purposes.
  - Select **Router mode** if one or more computers are connected and the EXPLORER 510 should act as a router. When Router mode is selected, the EXPLORER 510 uses the built-in NAT module for making the necessary address translations.
  - Select **Bridge mode** if only one computer is connected, and the EXPLORER 510 should act as a modem, or more than one computer is connected using an external router.

**Note**

Do **not** connect more than one computer in Bridge mode, unless you have an external router.

3. If you selected **Bridge mode**, select under **Bridge mode IP address** how the terminal's IP address should be assigned.
  - **Dynamic** example: If the IP address assigned by the DHCP server to the locally connected equipment is 10.30.27.130, the terminal will get the IP address 10.40.27.130. (in most cases it will be 10 added to the second octet of the assigned IP address).
  - **Plus one** example: If the IP address assigned by the DHCP server to the locally connected equipment is 161.30.181.130, the terminal will get the IP address 161.30.181.131 (the assigned IP address plus one).
4. Under **Local IP address**, type in a new IP address if you want to change the Local IP address of the terminal. This is the address used to access the web interface. The default IP address is **192.168.0.1**.

**Important**

A number of IP addresses are reserved for internal use. Do not assign any of the IP addresses listed in *List of reserved IP subnets* on page 5-18.

5. Under **DHCP**, select **Enable** (recommended for most purposes).
  - If you select **Enable**, the terminal assigns dynamic IP addresses to devices connected to the terminal.
  - If you **disable DHCP** you need to set up a static IP address in the connected device.
6. If you want to change the **Subnet mask** for the local network of the terminal, type in the new network mask. The default network mask is **255.255.255.0**.
7. Under **DHCP range start** and **DHCP range end**, type in the range of IP addresses that should be assigned to locally connected equipment.
8. Click **Save**.

#### 4.14.4 To enable or disable Network Service Device (NSD)

If you have an Inmarsat GX system together with your EXPLORER 510 and you want to use the EXPLORER 510 as backup when the GX service is not available, you can acquire a Network Service Device from Inmarsat. The NSD will use a PPPoE connection to allow your system to use the BGAN service when your system is out of GX spot beam coverage. To enable NSD, do as follows:

1. In the **Terminal settings** page, locate the **NSD** section.
2. Select **Enable** if you want to use an NSD with your EXPLORER 510.

For information on PPPoE, see *To change the APN for PPPoE* on page 4-35.

#### 4.14.5 To enable or disable the pointing sound

The EXPLORER 510 can make a sound to guide you through the pointing procedure (default enabled). To enable or disable the pointing sound, do as follows:

1. In the **Terminal settings** page, locate the **Audio indication** section.
2. Select **Audio assisted pointing** if you want to use a pointing sound to assist your pointing process.
3. At **Audio assisted pointing volume (0 - 100)** type the volume level you want for the pointing sound.
4. Click **Save**.

#### 4.14.6 To select the type of navigation system (GNSS)

To select which navigation system to use with your EXPLORER 510, do as follows:

1. In the **Terminal settings** page, locate the **GNSS** section (Global Navigation Satellite System).
2. Select **GPS**, **GLONASS**, **GPS and GLONASS** or **BeiDou**.<sup>1</sup>
3. Click **Save**.

**Note**

It may take some minutes for the EXPLORER 510 to change the navigation system.

#### 4.14.7 To select the language

The default language of the web interface is **English**. You can change the language to **French**, **German**, **Russian**, **Spanish**, **Chinese**, **Japanese** or **Portuguese**.

To change the language, do as follows:

1. In the **Terminal settings** page, locate the **Language** section.
2. Select a language from the list and click **Save**.

---

1. Older versions of the EXPLORER 510 only support GPS or GLONASS.

## 4.15 To set up your data connection packages



**Note** You must be logged in as administrator in order to change, delete or create connection packages.

There are different types of connection packages for different purposes:

- **Shared connection**, see *To create a shared connection package* on page 4-31.  
This is a shared data connection package. For the predefined Standard connection package, ACA is disabled, but can be enabled. For new connection packages, ACA is disabled and cannot be enabled for shared connections.
- **Dedicated connection**, see *To set up dedicated connections* on page 4-32.  
This is a connection dedicated specifically to each unit connected to the EXPLORER 510.

### 4.15.1 To change a connection package

You access the connection packages from the Dashboard.

- To access the Dashboard click  at the bottom of the page.
- To change a connection package, click  in the right side of the tile with the connection package.

If you want to	Do as follows
Change the name of the connection package	Click <b>Properties</b> , type in the new name and click <b>Save</b> . The new name is shown on the tile on the startup page.
Delete a connection package	Click <b>Delete package</b> <sup>1</sup> Note: You cannot delete <b>Standard data</b> .


1. If you accidentally delete a connection package, you can either create a new manually or restore factory settings. Note that all changes to the configuration will be lost if you restore factory settings.

### 4.15.2 To change the APN for a connection package

By default a connection package is set to use no IP Header compression and to use the APN (Access Point Name) from the SIM card. This is suitable for most applications.

**Note** It is recommended to leave **IP Header compression** disabled. This means that the data packets are transmitted more reliably with less data loss. However, you can select IP Header compression with the risk of less stability.

If you want to use a different APN, do as follows:

1. Click  in the right side of the tile with the connection package that you want to change.
2. Select **Parameters**.
3. Next to **APN**, select the source of the APN.
  - **SIM default** (default and recommended setting): The APN is taken from the SIM card.
  - **Network assigned**: The APN is assigned from the network.
  - **User defined**: APNs are provided from the Airtime Provider. Type in the APN next to **User defined name**.
4. If required, type in the **User name** and **Password** provided from the Airtime Provider.
5. Click **Save**.

### 4.15.3 Automatic Context Activation (ACA)


With ACA enabled, the terminal automatically establishes a data connection when it is registered on the satellite network.

**Note**

Different types of connection packages have different setup for ACA:

- For the predefined Standard (shared) connection package, ACA is disabled by default but can be enabled.
- For a new shared connection package, ACA is disabled and cannot be enabled.
- For a dedicated DHCP connection, ACA is enabled by default and cannot be disabled.
- For a dedicated static IP connection, ACA can be enabled or disabled.

To set up automatic activation of your data connection, do as follows:

1. Click  in the right side of the tile with the connection package that you want to change.
2. Select **Parameters**.
3. Select **Automatic Context Activation (ACA)**.
  - When you select **Automatic Context Activation (ACA)** and connect to the LAN or WLAN interface, the data connection is automatically established as soon as the EXPLORER 510 and its BGAN connection are ready.

**Note**


You are charged for the data transferred. You may want to disable automatic updates in your LAN or WLAN device to avoid unnecessary charges.

- When you **disable** automatic activation (default), you can control the data connection manually from the startup page.

#### 4.15.4 To create a shared connection package


Do as follows:

1. Click **New connection package**.

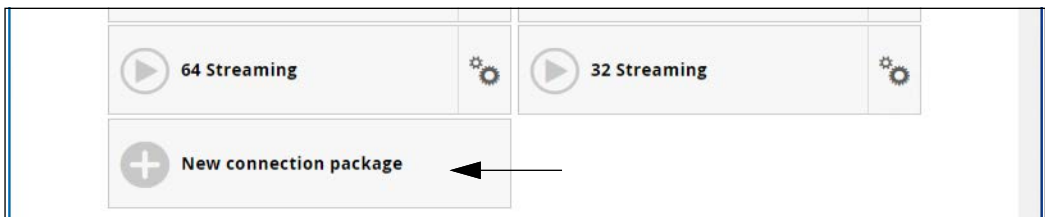

The **Properties** page opens.

2. Type a name for the new package.
3. Under **Type**, select **Shared connection**.  
For details on dedicated connections, see *To set up dedicated connections* on page 4-32.
4. Click **Save**.
5. Click **Click here to create connections**.

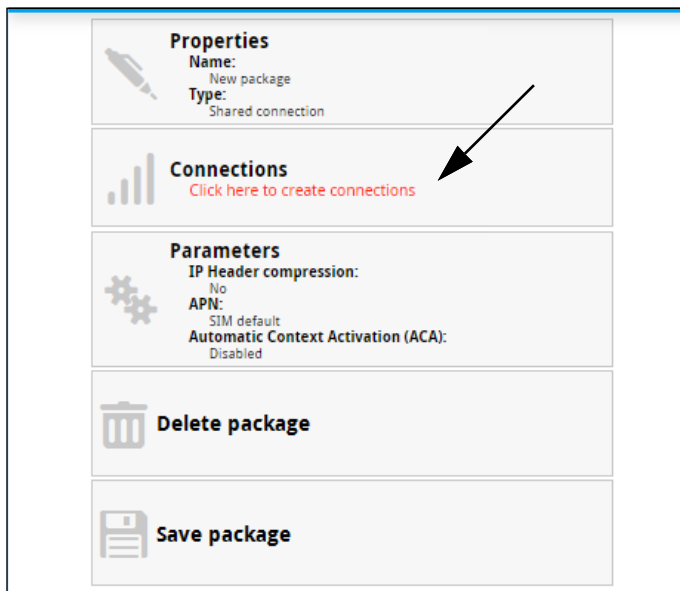


6. Click **Add connection**.
7. Select the connection type you want for your new connection package (Standard or one of the Streaming options).
8. Click **Save package**.


The new package should now appear as a new tile on the startup page.

## 4.15.5 To set up dedicated connections

You can set up dedicated connections for the EXPLORER 510.

**Note** The terminal must be in BGAN mode in order to use dedicated connections. Under **Terminal settings > Connection > Mode** select **BGAN only**.

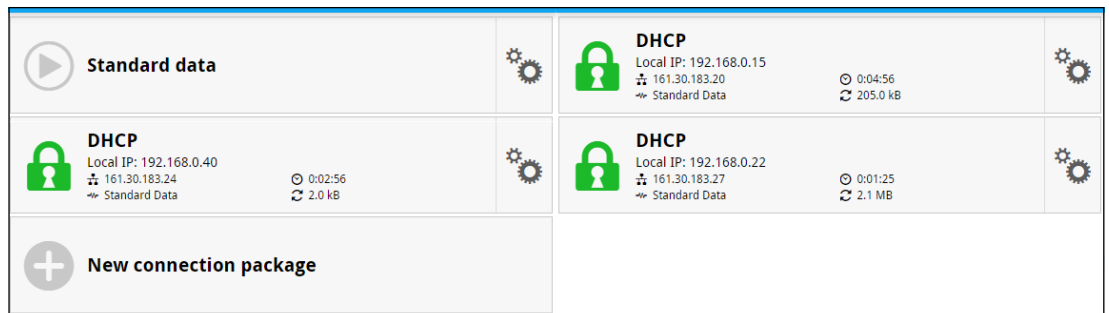

- From the **Dashboard**, click **New connection package** to create a new connection package, or click  in the right side of the tile with the connection package that you want to change and click **Properties**.
- Under **Type**, select one of the dedicated connection types.
  - Dedicated DHCP.** This is a dedicated connection using DHCP. With this type, any DHCP-enabled unit you connect to the EXPLORER 510 will get a new dedicated connection used only for that unit. When you disconnect the unit, the connection is removed after a few minutes. Each new connection gets its own tile on the Dashboard as long as it is running. In the example below, three units are connected using Dedicated DHCP. ACA is enabled for all Dedicated DHCP connections and cannot be disabled, unless you delete the connection package.



- Dedicated static IP.** This is a dedicated connection using a static IP address. Set up the connected unit to use a static IP address and type in this IP address under **Static IP address**.

Enter new values and click Save

Name	<input type="text" value="static"/>
Type	<input type="text" value="Dedicated static IP"/>
Static IP address	<input type="text" value="192.168.0.55"/>

 **Cancel**  **Save**

If Automatic Context Activation (ACA) is enabled, the connection is established automatically. Only the unit with the configured static IP address can use this connection.


**Note** You can only start and stop a dedicated static IP connection by enabling and disabling ACA under **Parameters** or using SMS commands, see *Remote access with SMS* on page 3-5.

- Click **Save**.

## 4.16 To set up tracking and location reporting

You can set up the EXPLORER 510 to report to a server at certain time intervals. To set up tracking, do as follows:

1. From the Control panel , select **Tracking and location reporting**.

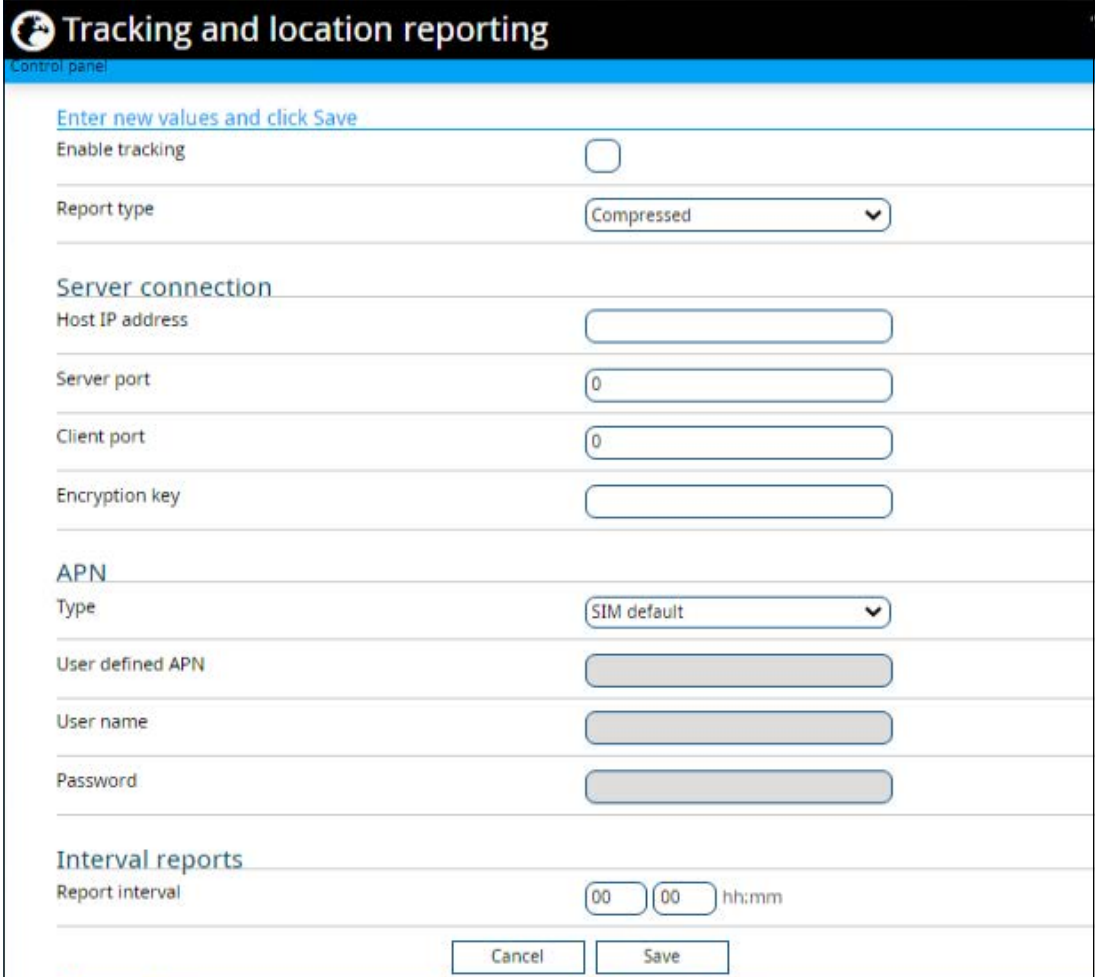

**Tracking and location reporting**  
Control panel

Enter new values and click Save

Enable tracking

Report type Compressed

**Server connection**

Host IP address

Server port

Client port

Encryption key

**APN**

Type SIM default

User defined APN

User name

Password

**Interval reports**


Report interval   hh:mm

2. To enable tracking of the EXPLORER 510, select **Enable tracking**.
3. Select the **Report type**.
  - **Compressed**. Only latitude and longitude are reported.
  - **Extended**. Apart from latitude and longitude, heading and altitude are also included.
  - **ECEF**. The same information as Extended, but position and speed data are 3D (ECEF coordinates).
4. Under **Server connection**, type in the following details:
  - **Host IP address**: The IP address of the server that the EXPLORER 510 will report to.
  - **Server port**: Port number on the server. Default number is 7474.
  - **Client port**: Port number on the EXPLORER 510. Default number is 7475.
  - **Encryption key**: A supplied 128 bit key which must match on both the client and server side.
5. Under **APN**, select the source of the APN.
  - **SIM default** (recommended): The APN is taken from the SIM card.
  - **Network assigned**: The APN is assigned from the network.
  - **User defined**: APNs are provided from the Airtime Provider. Type in the APN next to **User defined name**.
6. If required, type in the user name and password of the APN.

7. Type in the **Report interval** in hours (h) and minutes (m).

**Example:** If you type in 1 h 30 m, the EXPLORER 510 will send a report for every 1½ hour.

8. Click **Save**.

You can see the status of the tracking link in the status area of the web interface. If the status area is not shown, click  to see it.

**Note**

You can set up whether or not you want to allow the tracking server to control these settings. See *Remote control of tracking* on page 4-45.

## 4.17 Advanced LAN

### 4.17.1 Port forwarding


**Note**

Make the port forwarding configuration before starting the data session.

Port forwarding enables you to set up a server connected to the terminal while the terminal is in Router mode. Without port forwarding it would not be possible to contact the server from the Internet. We recommend using a static public IP address for the terminal in order to provide easy access to the terminal. To use the static IP address, it must be included in your subscription and you must set the APN source to SIM default. For details, see *To change the APN for a connection package* on page 4-29.

The following example shows how to allow Internet access to a mail server (smtp) connected to the terminal.


The mail server in this example has the IP address 192.168.0.100.

1. From the **Control panel** , select **Advanced LAN > Port forwarding**.
2. Select **Forward port** to add a new port forwarding.
3. Select **Active** to activate the port forwarding.
4. Type in the **Incoming port start** and the **Incoming port end**.  
This is the range of port numbers on the EXPLORER 510 for which incoming traffic to the EXPLORER 510 will be forwarded.
5. Type in the **Destination IP address**, which in this example is the IP address of the mail server: 192.168.0.100.  
This is the IP address to which the incoming traffic is forwarded.
6. Type in the **Destination port start** and the **Destination port end**.  
This is the range of port numbers, in this example on the mail server, to which the incoming traffic will be forwarded.
7. Click **Save**.

When you have activated a data connection, you can now access the mail server from the Internet, using the external IP address of the terminal. You can see the external IP address in the tile with the data connection you have started. For information on how to activate your data connection, see *To start and stop data connections* on page 4-8.

## 4.17.2 Static routing

When you have an external gateway connected to your terminal, the terminal is not automatically able to “see” the network on the other side of the gateway. However, you can set up your terminal to communicate with a device on the other side of a gateway, by using Static routing. To set up a new device for static routing, do as follows:

1. From the **Control panel** , select **Advanced LAN > Static routing**.
  2. Click **Add route**.
  3. Enter the values for your device.
    - **Destination:** The IP address you want to route to.
    - **Subnet mask:** The subnet mask you want to route to.
    - **Gateway:** The gateway, e.g. the address of a wireless access point or router to which the destination device is connected.
  4. Click **Save**.
- The values for the new entry are now in the list. This means that the terminal can communicate with the destination IP address on the other side of the gateway.


## 4.17.3 To change the APN for PPPoE

### What is PPPoE

By using PPPoE, users can virtually “dial” from one machine to another over an Ethernet network, establish a point to point connection between them and then securely transport data packets over the connection.

On the equipment connected to the EXPLORER 510 you must enter a few settings for your PPPoE connection. For example you need to set up which service to use (e.g. 64 kbps Streaming) and possibly a user name and password. For details, refer to the documentation for your connected equipment.

On the EXPLORER 510 you must set up the APN to use before you can establish a PPPoE connection.

1. From the **Control panel** , select **Advanced LAN > PPPoE APN**.
2. Select the **APN** to use for PPPoE. You have the following options:
  - **SIM default.** The APN is taken from the SIM card. This is the recommended option, unless you have special requirements.
  - **Network assigned.** The APN is assigned from the network.
  - **User defined.** Type in the APN at **User defined name**. APNs are provided from the Airtime Provider.
3. Click **Save**.

## 4.18 Advanced settings

### 4.18.1 Passwords

The EXPLORER 510 web interface can be password protected at two levels: A user password and an administrator password. You are always prompted for a password when you access the web interface.

**Default settings** are:

- administrator level: User id: **administrator**, Password: **admin**
- user level: **No user level access**. Must first be defined by the administrator; until then you can only access the terminal web interface as administrator.

You can change the passwords when you are logged in as administrator.


**Important** | If you have logged in with the default administrator password you are immediately prompted to change the password.

#### First time use

The first time you access the EXPLORER 510 web interface (and after reset to factory defaults) you must log in as administrator with **user id: administrator** and **password: admin**.

#### To log in as administrator

The Advanced settings require an administrator password. If you are already logged in as user, do as follows to log in as administrator:

1. From the Control panel , select **Advanced**.  
You are now prompted to log in as administrator.
2. Enter the Administrator password.  
If you have forgotten the administrator password, you can reset the password. For details, see *To reset the administrator password* on page 4-23. The old user id and password will apply until you have finished the reset procedure.
3. Click **Login**.

#### To change the user password

If you want to enable non-administrator users to use the terminal web interface without getting access to administrator settings, you must first set up a user password.

If no user password is set up, you can only access the web interface using the administrator password.

To change the user password, do as follows:

1. Log in as **administrator**.
2. Under **Advanced**, select **Passwords > Change user password**.
3. Type in the **user id**. (default: **user**).
4. Type in the **New password** and retype it on the next line.

**Note** | The password must be min. 8 characters long and consist of lowercase and uppercase letters, numbers and special characters.

5. Click **Save**.  
At the next user login the new password is required.

## To change the administrator password

To change the administrator password, do as follows:

1. Log in as administrator.
2. Under **Advanced**, select **Passwords > Change administrator password**.
3. Type in the **Old password**.
4. Type in the **New password** and retype it on the next line.

**Note**

The password must be min. 8 characters long and consist of lowercase and uppercase letters, numbers and special characters.

5. Click **Save**.  
At the next administrator login the new password is required.

## To log out as administrator

If you have not entered anything for 30 minutes under Advanced, you are logged out automatically. To log out manually, click **Logout administrator** in the **Advanced** page or click [log out] next to administrator in the **Terminal status** field.

### 4.18.2 To set up user permissions

You can allow or deny users access to certain functions and make these pages read-only. This is useful if you want to protect the system against unintended changes. Study this screen thoroughly and decide to which areas of the system you want to give non-administrator users access. To set up the user permissions, do as follows:

1. Under **Advanced**, select **User permissions**.
2. Under **Allow users to:**, select the settings you want to **allow** users to access.
3. Click **Save**.

The settings without a check mark can only be viewed but not changed by the non-administrator user.

### 4.18.3 To restore factory settings

To restore the factory settings of the EXPLORER 510, do as follows:

1. Under **Advanced**, select **Factory reset**.

**Important**

All configuration will be lost and the EXPLORER 510 will return to the default configuration.

2. Click **OK**.  
The terminal will now restart and start up with the factory settings.

## 4.18.4 SIM PIN for BGAN

### To enable or disable the use of a SIM PIN

To enable or disable the use of a PIN to access the BGAN network, do as follows:

1. Under **Advanced**, select **SIM**.
2. Select **Enable/disable SIM PIN**.
3. Under **Enable/Disable PIN** select or clear the box next to **Require PIN on startup**.
  - If you clear the box, you can access and use the terminal without entering a PIN
  - If you select the box, you must enter a PIN on startup before you can make calls or data sessions
4. If you selected Require PIN on startup, type in the PIN next to **Enter current PIN**.
5. Click **Save**.  
The new PIN settings will take effect at next power on.

### To change the SIM PIN

To change the PIN used to access the BGAN network, do as follows:

1. Under **Advanced**, select **SIM**.
2. Select **Change SIM PIN**.
3. Under **Change PIN** type in the **Current PIN**.
4. Type in the **New PIN** and retype it on the next line.
5. Click **Save**. The new PIN settings will take effect at next power on.

### SIM lock

The SIM lock feature can be used by suppliers to lock your SIM card to a specific provider or distribution partner. For further information, contact your supplier.

## 4.18.5 SIM PIN for cellular network (optional)

**Note**

The SIM settings for cellular network are only available when the EXPLORER Cellular Modem is inserted.

### To enable or disable the use of a cellular SIM PIN

To enable or disable the use of a PIN to access the cellular network, do as follows:

1. Under **Advanced**, select **EXPLORER Cellular Modem**.
2. Select **Enable/disable SIM PIN**.
3. Under **Enable/Disable PIN** select or clear the box next to **Require PIN on startup**.
  - If you clear the box, you can access and use the terminal without entering a PIN
  - If you select the box, you must enter a PIN on startup before you can make calls or data sessions
4. If you selected Require PIN on startup, type in the PIN next to **Enter current PIN**.
5. Click **Save**.  
The new PIN settings will take effect at next power on.

### To change the cellular SIM PIN

To change the PIN used to access the cellular network, do as follows:

1. Under **Advanced**, select **EXPLORER Cellular Modem**.
2. Select **Change SIM PIN**.
3. Under **Change PIN** type in the **Current PIN**.
4. Type in the **New PIN** and retype it on the next line.
5. Click **Save**. The new PIN settings will take effect at next power on.

## 4.18.6 To save or load a configuration

If you need to reuse a configuration in another terminal of the same type and software version, you can save your current configuration to a file, which can then be loaded into the other terminal.

**Note**

Configuration files can only be exchanged between terminals with the same software version!

### To save a configuration to a file

To save the current configuration of your terminal to a file on your computer, do as follows:

1. In the **Advanced** page, click **Load/save configuration**.
2. Click **Save configuration**. The configuration file is saved in the EXPLORER 510.
3. Click **Download configuration...**  
The configuration is downloaded from the EXPLORER 510 to the downloads section of your computer.

### To load a configuration from a file

To load a configuration from a file into your EXPLORER 510, do as follows:

1. In the **Advanced** page, click **Load/save configuration**.
2. Click **Load configuration**.

3. Browse to the configuration file and click **Open...**  
The configuration is now loaded into your EXPLORER 510. When the configuration is loaded successfully, the EXPLORER 510 restarts with the new configuration.

### 4.18.7 Connection watchdog (Link monitoring)

If you are **not** using the Terminal watchdog function (see *Terminal watchdog* on page 4-41), you can monitor the external IP connection of the EXPLORER 510 system using the Connection watchdog. With this feature activated, the terminal will send out ping commands (ICMP Echo Requests) to up to three servers of your choice.

#### Function of Connection watchdog

With the connection watchdog activated, the terminal will send out ping commands to up to three servers of your choice. When a data session is started, the terminal will start sending ping commands to the Primary IP address the number of times specified. If no response is received, it will send the same number of ping commands to the Secondary and then the Tertiary IP address, if available. If no response is received from any of the IP addresses, the terminal will first try to reconnect. If it fails again the terminal will eventually restart.

**Note** Ping commands are sent on all active data connections. For the Connection watchdog to work, the data connection must be (re)started after enabling the Connection Watchdog. If ACA is enabled, the data connection is restarted automatically. See *Automatic Context Activation (ACA)* on page 4-30.

#### To set up the Connection watchdog

To set up the Connection watchdog, do as follows:

1. Under **Advanced**, select **Connection watchdog**.
2. Select **Enable Connection watchdog**.
3. At **Ping interval (minutes)** select the Interval in minutes between the ping commands.
4. Select the **Number of retries** before the terminal restarts.
5. Type in the Primary and optionally the Secondary and Tertiary IP address.  
This is the IP address of the server(s) to which the terminal will send ping commands.

**Note** Use a server that is reliable and that responds to ICMP Echo Requests.

6. Click **Save**.

## 4.18.8 Terminal watchdog

The Terminal watchdog continuously monitors the operational status of the terminal and allows you to perform the following actions at regular intervals (set by the user):

- Start a data connection (PDP context)
- Verify your data connection (ping - similar to Connection watchdog)

The terminal continuously monitors:

- The time (monitors that UTC time is received from GPS at startup)

**Note** | The EXPLORER 510 operates with UTC time, local time is not available.

- CS-attach (the status of the circuit-switched connection)

If any of the actions fail, the terminal restarts.

### Set up Terminal watchdog

To set up the Terminal watchdog, do as follows:

1. Under **Advanced**, select **Terminal watchdog**.

2. Select **Enable watchdog**.
3. Select the **Watchdog interval**.  
The interval can be from one hour up to 21 days.
4. Type in the **Primary** and optionally the **Secondary** and **Tertiary IP address**.  
This is the IP address(es) of the server(s) to which the terminal will send ping commands. The terminal will start sending ping commands to the Primary IP address. If there is no response after 10 attempts, the terminal will send up to 10 ping commands to the

Secondary and then the Tertiary IP address, if available. If no response is received from any of the IP addresses, the terminal will eventually restart.

**Note** | If no IP addresses are entered, pinging is skipped but the other actions still apply.

5. Enter the **APN** (and user name and password if required) to use for the data connection.
6. Select **Enable position SMS** and enter the phone number, if you want the terminal to send SMSes with the position of the terminal to a phone number. The SMSes will be sent with the Watchdog interval from step 3.
7. Select **Enable loopback SMS** and enter the phone number of the terminal, if you want the terminal to send SMSes to itself in order to check the SMS function. The SMSes will be sent with the Watchdog interval from step 3.
8. Click **Save**.

**Note** | When the Terminal watchdog is enabled, you must reboot the terminal before the Watchdog settings are activated.

**Next run time:** This field at the bottom of the page shows what time the Terminal watchdog will run next (UTC time).

## 4.18.9 Data limits

You can set a limit for the use of BGAN data services with the EXPLORER 510 system.

If you have entered the BGAN call charges in the menu **Call charges**, the system automatically calculates and displays the maximum charges for your BGAN data sessions.

**Note** | Thrane & Thrane A/S does not take responsibility for the correctness of the estimated charges. This calculation is only a rough estimate of the charge, based on the tariff entered by the user. Also, the airtime provider may have different methods of calculating the charge.

Once the entered limit is reached, the connection is automatically stopped. This is recorded in the data log. To continue using the data service you must start a new connection by clicking on the desired connection on the startup page.

**Note** | If you have enabled automatic activation of the Standard data connection and you set a data limit for the Standard data connection, automatic activation is disabled.

To set data limits, do as follows:

1. Under **Advanced**, select **Data limits**.
2. Select the type of connection you want to limit.
3. Type in the amount of data or time allowed and select the appropriate units.
4. Select **Enable**.
5. Click **Save** to save the settings.

## 4.18.10 Call charges

**Note**

Thrane & Thrane A/S does not take responsibility for the correctness of the estimated charges. This calculation is only a rough estimate of the charge, based on the tariff entered by the user. Also, the Airtime Provider may have different methods of measuring the airtime used.

If you know the tariff for your subscribed BGAN services, you can enter these tariffs in the web interface and automatically calculate the estimated charges for your BGAN calls and data sessions. To enter the call tariffs, do as follows:

1. Under **Advanced**, select **Call Charges**.
2. Select the currency from the **Displayed currency** drop-down list.
3. Enter the tariff for each of the BGAN services.
4. Click **Save**.

The entered tariffs are used for estimating the charges for calls and data sessions over the BGAN network. For further information, see *Call log* on page 4-13.

## 4.18.11 Prepare the terminal for remote management

You can set up the terminal so that it can be controlled from a remote location.

To set up the terminal for remote management, select **Advanced > Remote management** from the **Control panel**.

**Remote management**  
Control panel > Advanced

Enter new values and click Save

**Remote access with IP**

Enable access to web application

Incoming port for web application

Enable access to AT commands

Incoming port for AT commands

Trusted IP addresses

Enable ping response

**Remote access with SMS**

Enable remote SMS commands

Password

Trust all phone numbers

Trusted phone numbers

## Prepare the terminal for remote access with IP

**Note**

The settings for Remote access with IP are **not** relevant if you are using the SMS ATCO command **\_IREMWEB** to get access to the web interface from a remote location, or you only need remote access by SMS commands.

For details on SMS commands, see the next section and *Remote access with SMS* on page 3-5. For details on how to use the **\_IREMWEB** command, see *To use AT commands to get remote access to the web interface* on page 3-6.

1. From the **Remote management** page, locate the section **Remote access with IP**.
2. Select **Enable access to web application** and/or **Enable access to AT commands**.
3. Type in the **Incoming port** numbers to use for the web server and for AT commands. The default port numbers are:
  - web server: 80
  - AT commands: 5454

**Note**

If you type another port number, the port number must be available at your service provider.

4. Under **Trusted IP addresses**, click **Add IP address** and type in the IP address of the device you want to give access to the terminal.
5. To add more IP addresses, click **Add IP address** again.
6. Select **Enable ping response** if you want to enable the terminal to respond to ping commands.

**Note**

To be able to access the terminal you must have an active data connection.

After preparing the terminal and activating the connection you can access the terminal from one of the trusted IP addresses, using the incoming port defined in the Incoming port field.

For information on how to access the terminal, see *To get remote access from a trusted IP address (preconfigured)* on page 3-7.

If Static IP is included in your airtime subscription, we recommend using this static public IP address for the terminal in order to provide easy access to the terminal. To use the static IP address, it must be included in your airtime subscription and you must set the APN source to SIM default. For details, see *To change the APN for a connection package* on page 4-29.

## Prepare the terminal for remote access with SMS

**Note** The terminal must be logged on to the BGAN satellite services to receive and accept an SMS.

1. From the **Remote management** page, locate the section **Remote access with SMS**.
2. Select whether you want to **Enable remote SMS commands**.
3. Enter the password for remote SMS. It can be 5 to 15 characters long. The characters 0-9, a-z and A-Z are allowed. **The password is mandatory**. This password must be entered every time you send an SMS command. Default password is **remote**.  
See *Remote access with SMS* on page 3-5.
4. Select **Trust all phone numbers** or, at **Trusted phone numbers**, enter at least one trusted mobile number from which the terminal accepts an SMS. Use the wild card \* to accept a range of trusted numbers.

Entered mobile number with wild card	Mobile numbers accepted
+453955880*	+4539558800 to +4539558809
+45395588*	+4539558800 to +4539558899

**Important** If you select **Trust all phone numbers** you should take security measures such as changing the SMS remote password in order to avoid unintended use.

5. To add more phone numbers, click **Add phone number** again.
6. Click **Save**.

For information on how to send SMS commands, see *Remote access with SMS* on page 3-5.

### 4.18.12 Remote control of tracking

When you are using the tracking function of the EXPLORER 510, you can set up the terminal so that the tracking server can access the EXPLORER 510 e.g. to start or stop tracking or to change reporting intervals.

To allow the tracking server to control the tracking settings, do as follows:


1. Under **Advanced**, select **Tracking settings**.
2. Select **Allow remote control of tracking**.
3. Click **Save**.

The EXPLORER terminal will now accept commands from the specified tracking server, for example to change reporting intervals or start/stop reporting.

### 4.18.13 Help desk

Under Help desk you can enter the contact information you want for your EXPLORER 510. The Help desk contact information is empty by default. You must provide the contact information, e.g. the phone number for your Airtime Provider. Do as follows:

1. In the **Advanced** page, select **Help desk**.
2. Type in the contact information you want.
3. select **Save**.

The Help desk information is now available from the About page (  (Control panel) > **Support > About**).

### 4.18.14 Reset button

You can change the function of the Reset button. Do as follows:

1. From the **Advanced** page, select **Reset button**.
2. Select the behavior you want for the Reset button.
  - **Enabled:** Short push: Reset WLAN settings, Long push: Reset to factory default.
  - **Long press disabled:** A push on the Reset button will only reset the WLAN settings, regardless of how long you push the button.
  - **Disabled:** The Reset button will not have any function, except when you push and hold it while the terminal is starting up (Safe mode, see *Restore the settings of the EXPLORER 510* on page 5-5).
3. Click **Save**.

### 4.18.15 Security

To enable the use of a Cobham Satcom IP Handset

**Note**

This setting applies to the EXPLORER IP+ Handset as well as to the Thrane IP Handset.

1. From the **Advanced** page select **Security**.

The screenshot shows the 'Security' settings page. At the top, there is a header with a lock icon and the word 'Security'. Below it, the breadcrumb 'Control panel > Advanced' is visible. A blue bar contains the text 'Enter new values and click Save'. The settings are grouped into sections: 'Thrane IP Handset support' with a sub-note 'Support BGAN profile and menu in Thrane IP Handsets (requires reboot)' and an unchecked checkbox; 'AT commands' with 'Allow on WLAN interface' checked and 'Require password' unchecked; 'HTTPS' with a sub-note 'Changing HTTPS settings will automatically restart the web server' and 'Redirect HTTP to HTTPS' unchecked; and 'Use uploaded TLS/SSL certificate' with an unchecked checkbox and an 'Upload certificate' button. At the bottom, there are 'Cancel' and 'Save' buttons.

2. Locate the field **Thrane IP Handset support**.
3. If you want the terminal to support BGAN profile and menu in Cobham Satcom IP Handsets, select **Support BGAN profile and menu in Thrane IP Handsets**. This means that, in addition to making calls with the IP handset over the BGAN network, you can use the handset display and keypad to:
  - Enter PIN/PUK for the terminal.
  - View pending alarms.
  - View event log.
  - View current satellite status and signal strength.
  - Start/stop connection packages.

For details, see the user manual for the EXPLORER IP+ Handset or the Thrane IP Handset.

## To allow or block the use of AT commands on WLAN interface

AT commands are low-level commands used to control modems, in this case the EXPLORER 510. They are typically used during service and maintenance or when troubleshooting the terminal.

1. Under **Advanced > Security**, locate the field **AT commands**.
2. If you want to enable the use of AT commands, select **Allow on WLAN interface** (default not allowed).
3. If you want users to enter a password to be able to use AT commands on the WLAN interface, select **Require password**. This means that users must enter a password using the `_ICLCK` command before they can send AT commands on the WLAN interface. By default, no password is required in order to send AT commands on the WLAN interface.

### Important

Before you select this option, make sure you know the administrator password of the EXPLORER 510! The default password for first time use is **admin**.

4. Click **Save**.

## HTTPS settings

The EXPLORER 510 internal web server supports HTTPS, which includes encryption of the exchanged web traffic when accessing the EXPLORER 510 web interface.

By default, the system uses a self-signed certificate, but it also allows you to upload your own certificate signed by a trusted Certificate Authority.

### Note

If you redirect traffic to HTTPS, you must have a matching certificate in your smartphone to be able to connect to the EXPLORER 510 with the EXPLORER Connect app.

Do as follows:

1. Under **Advanced > Security**, locate the field **HTTPS**.
2. Select **Redirect HTTP to HTTPS** if you want the EXPLORER 510 to automatically redirect your HTTP traffic to HTTPS.
3. Select **Use uploaded TLS/SSL certificate** and click **Upload certificate** if you want to upload your own generated SSL certificate for the system to use. Please note that the uploaded certificate file (.pem file format) must include the RSA private key used to generate the certificate:
 

```
-----BEGIN CERTIFICATE-----
...
... <your certificate here> ...
...
-----END CERTIFICATE-----
-----BEGIN RSA PRIVATE KEY-----
...
... <your key here> ...
...
-----END RSA PRIVATE KEY-----
```
4. Click **Save**.

## 4.19 Optional: To set up cellular network for data

The EXPLORER 510 is a BGAN terminal by default. However, if you are within coverage of a cellular network, you may want to acquire an EXPLORER Cellular Modem as an alternative to the BGAN network. Note that you need a separate SIM card for the cellular network, the EXPLORER 510 SIM card can only be used for the BGAN network.

**Note** The EXPLORER 510 does not provide automatic switch-over between BGAN and cellular network, so you have to select the network you want to use.

To enable the EXPLORER 510 to use the cellular network, do as follows:


1. Acquire an EXPLORER Cellular Modem from Cobham Satcom.
2. Connect your computer to the EXPLORER 510 using the WLAN interface.
3. Access the web interface.

**Note** The USB interface must be enabled. See *USB interface setup* on page 4-16.


4. Under **Control panel > Terminal settings**, select one of the following at **Mode**:
  - **Cellular modem if available at power-up**
  - **Cellular modem only**, or
  - **User selection**.


For details on Cellular/BGAN network selection, see *Mode (select network)* on page 4-25.


5. When the modem is connected to the USB interface, the Dashboard of the web interface shows a new tile with the cellular connection. The “M” on the tile for the cellular modem indicates that it is a cellular modem and not a BGAN connection.

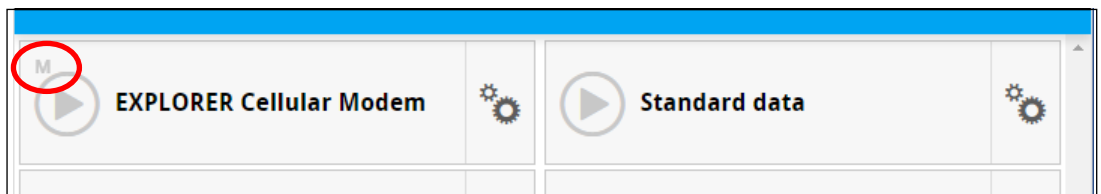


**Note** If you have selected **Cellular modem if available at power-up**, you have to restart the terminal before the cellular connection can be activated.

6. If you have selected **User selection** in step 4 above, you must first select the cellular network. Click the tile with the cellular modem, or click the signal strength icon  in the top right corner of the web interface. Then select EXPLORER Cellular Modem and click **OK**.

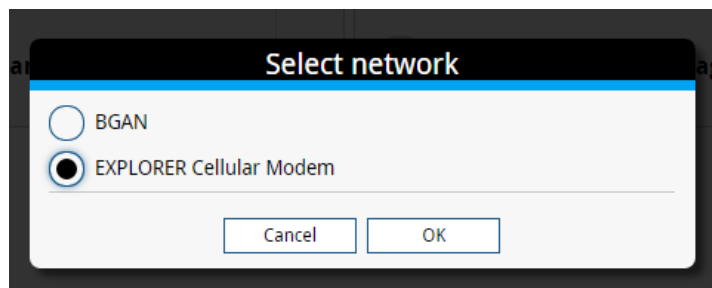

7. If required, select  on the tile to set or change the name or the APN of your cellular connection. For details, see the next section.

When the connection is established, an “M” on the signal bar in the top right corner indicates that it is a cellular (Modem) connection, and the tile shows details about the connection.

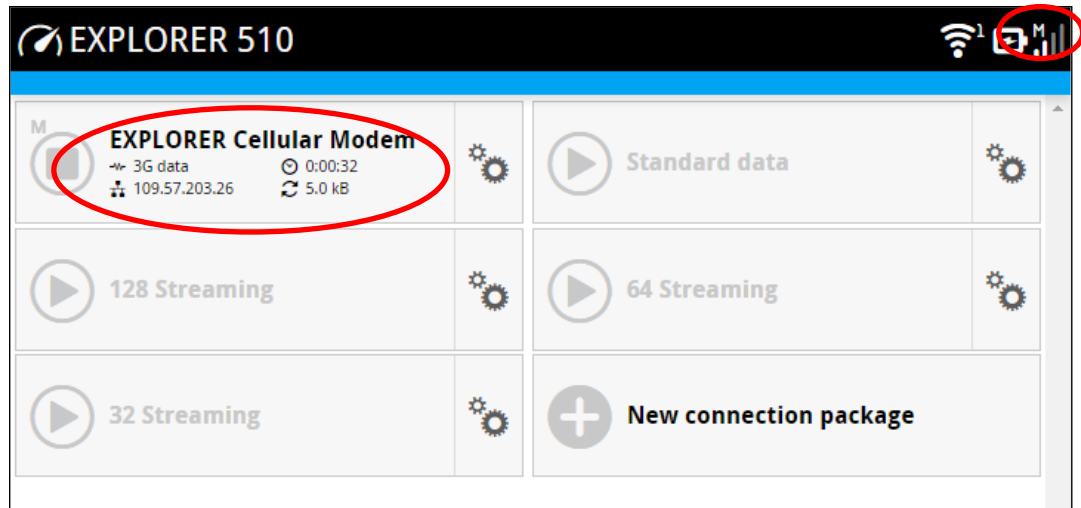

The data connection is automatically established when set up correctly, so you cannot start and stop the cellular connection from the tile as you can with the BGAN connections.


**Note** You may have to enter a PIN before you can use the cellular network, see *To enter the SIM PIN in the web interface* on page 4-7.

You can now access the Internet through the cellular network from a device connected to the EXPLORER 510. Note that you cannot use the BGAN network as long as EXPLORER Cellular Modem is selected.

**Note** You cannot make calls nor send SMS messages on the cellular network through the EXPLORER 510. Only data connection is possible over the cellular network. You can still send and receive SMS messages using the BGAN mobile number of the terminal (if the terminal is pointed and connected to the CS domain in the BGAN network).

#### 4.19.1 To change the name or the APN for your cellular connection

Do as follows:

1. Select  on the tile with the cellular connection.
2. Type in the new name for your connection.
3. Type in the name of the APN you are going to use for your cellular connection.
4. Click **Save**.

## Maintenance and troubleshooting

### 5.1 Support

#### 5.1.1 Contact information

Should your Cobham Satcom product fail, contact your dealer or installer, or the nearest Cobham Satcom partner. You will find the partner details on [www.cobhamsatcom.com/where-to-buy](http://www.cobhamsatcom.com/where-to-buy). You can also access the partner portal at [partnerportal.cobhamsatcom.com](http://partnerportal.cobhamsatcom.com), which may help you solve the problem. Your dealer, installer or Cobham Satcom partner will assist you whether the need is user training, technical support, arranging on-site repair or sending the product for repair. Your dealer, installer or Cobham Satcom partner will also take care of any warranty issue.

#### 5.1.2 To repack for shipment

Should you need to send the product for repair, please read the below information before packing the product.

The shipping carton has been carefully designed to protect the EXPLORER 510 and its accessories during shipment. This carton and its associated packing material should be used when repacking for shipment. Attach a tag indicating the type of service required, return address, part number and full serial number. Mark the carton FRAGILE to ensure careful handling.

**Note** | Correct shipment is the customer's own responsibility.

If the original shipping carton is not available, the following general instructions should be used for repacking with commercially available material.

1. Wrap the defective unit in heavy paper or plastic. Attach a tag indicating the type of service required, return address, part number and full serial number.
2. Use a strong shipping container, e.g. a double walled carton.
3. Protect the front- and rear panel with cardboard and insert a layer of shock-absorbing material between all surfaces of the equipment and the sides of the container.
4. Seal the shipping container securely.
5. Mark the shipping container FRAGILE to ensure careful handling.


Failure to do so may invalidate the warranty.

## 5.2 Software update

**Important** | Connect DC power to the terminal before starting the software update.

### 5.2.1 To update software with the web interface

To update the software in the EXPLORER 510, do as follows:

1. Download the new software<sup>1</sup> or acquire the software from Cobham Satcom and save it to your computer.
2. Connect your computer to the EXPLORER 510.
3. Open the web interface in your browser and enter the Control panel .
4. Click **Support > Update software**.
5. Click **Update software...**
6. Browse to the new software version and click **Open**. The file has the extension “.tiff”.
7. The EXPLORER 510 now restarts and completes the software update.

**Note** | The update procedure takes a couple of minutes.

You can check the software version under **Control panel > Support > About**.

If, for some reason, you cannot upload software using the web interface, you can also use the USB interface. For details, see *To update software with USB* on page 5-3.

### 5.2.2 To update software from a remote location

You can initiate a remote software upgrade with an AT command, either from the command interface or encapsulated in an SMS (ATCO command).

**\_IGETFW** tells the terminal to get software from an FTP server and either upgrade the terminal software or download the software file to the terminal for later upgrade.

**\_IUPDFW** tells the terminal to upgrade its software to the downloaded file.

For syntax and parameters, see *ATCO commands* on page B-9.

Do as follows:

1. Download the new software<sup>1</sup> or acquire the software from Cobham Satcom and place it on your FTP server.
2. To access the EXPLORER 510, use one of the following:
  - a computer connected to the Internet, see *To get remote access from a trusted IP address (preconfigured)* on page 3-7, or
  - equipment capable of sending and receiving SMS messages, see *Remote access with SMS* on page 3-5.

Note that you need a password for both access methods. For AT commands, use the **AT\_ICLCK** command with the admin password, for SMS, use the remote SMS password.

3. Use the command **\_IGETFW** to initiate the software download (and maybe upgrade) from the specified FTP server. If you are using the default APN this can be left out.

**Example: AT\_IGETFW=1, "ftp.myftpserver.com", "ftp-username", "ftp-password"**

1. You can download the software from the Cobham Satcom Partner Portal at [partnerportal.cobhamsatcom.com](http://partnerportal.cobhamsatcom.com). Search for EXPLORER 510, select **Downloads** and locate the EXPLORER 510 software.

In this example, the terminal will get the software from the FTP server named **ftp.myftpserver.com** via the default APN and download and then upgrade the software in the terminal.

4. The terminal prepares for software update, connects to the specified FTP server and downloads the software image.  
If you have selected **Deferred update** (`_IGETFW=0`), you have to use the command `_IUPDFW` followed by the software file name when you want the terminal to upgrade the software.
5. If you have selected **Immediate update** (`_IGETFW=1`), the terminal updates the system, reboots, installs the update and verifies the online connection.
6. When the software upgrade is successfully completed you get an AT or SMS command response with the message **Complete**.

**Example:** `_IUPDFW: 0, Complete`

### 5.2.3 To update software with USB

If the web interface is not available, you may also use the USB interface to update the software from a USB memory stick.

#### To prepare the USB stick

Do as follows:

1. Download the EXPLORER 510 software to your computer<sup>1</sup>.
2. Insert the USB memory stick into your computer and copy the EXPLORER 510 software image file to the drive.
3. Rename the file name to "tt3711a.tiif".
4. Remove the USB memory stick from the computer.

#### To upload the software to the EXPLORER 510

##### Note

The USB interface must be enabled in the EXPLORER 510 (default enabled). See *USB interface setup* on page 4-16 for details on how to enable the USB interface.

1. Insert the USB memory stick with the new software into the EXPLORER 510 USB connector.  
The EXPLORER 510 reads the software image from the USB memory stick and starts the software update process. The EXPLORER 510 restarts and completes the software update. The Status LED blinks blue to indicate that the software update process is ongoing.
2. Wait for the status LED to become green to indicate the software update process is completed.
3. Remove the USB memory stick.

---

1. You can download the software from the Cobham Satcom Partner Portal at [partnerportal.cobhamsatcom.com](http://partnerportal.cobhamsatcom.com). Search for EXPLORER 510, select **Downloads** and locate the EXPLORER 510 software.

## 5.2.4 Recovery software update

If the EXPLORER 510 becomes inoperative, a recovery software update may bring it back into an operational state.

**Important** | The recovery software update will reset your EXPLORER 510 configuration to factory default!

To make a recovery software update, do as follows:

1. Prepare the USB stick as described in *To prepare the USB stick* on page 5-3.
2. While powering on the EXPLORER 510, push and hold the Reset button until the Status LED is blinking rapidly blue. See *Restore the settings of the EXPLORER 510* on page 5-5.
3. Insert the USB memory stick with the new software into the EXPLORER 510 USB connector on the front.  
The EXPLORER 510 reads the software image from the USB memory stick and starts the software update process (LED blinking slowly blue).
4. Wait for the status LED to become steady green to indicate the software update process is completed.
5. Remove the USB memory stick.
6. Switch the EXPLORER 510 off and on again.

## 5.3 Restore the settings of the EXPLORER 510

The EXPLORER 510 has a Reset button that has three functions: To restore all settings to factory settings, to restore WLAN settings only and to put the EXPLORER 510 into safe mode for recovery software upload.

**Note**

You can set up in the web interface which functions should apply to the Reset button. See *Reset button* on page 4-46.

Action	Function
Push and hold the Reset button for 2-10 seconds	WLAN settings are restored to default. The WLAN LED lights yellow. Default WLAN settings: <ul style="list-style-type: none"> <li>• Broadcast SSID: <b>EXPLORER510</b></li> <li>• Encryption standard: <b>WPA2-AES</b></li> <li>• Encryption key: <b>serial number</b> of the EXPLORER 510</li> <li>• Region: <b>Other</b>, i.e. the most restrictive setting</li> </ul>
Push and hold the Reset button for > 10 seconds	The EXPLORER 510 restores factory settings and restarts the system. All changes to the configuration are lost.
While the EXPLORER 510 is booting, push and hold the Reset button	The EXPLORER 510 enters safe mode. The Status LED is blinking rapidly blue. In safe mode the EXPLORER 510 is ready for a recovery software upload (see <i>Recovery software update</i> on page 5-4).

The Reset button is located inside the small hole next to the SIM slot.



Reset button

Do as follows:

1. Loosen the two screws holding the SIM cover.
2. Lift the cover.
3. Use a pointed device to push the Reset button.
4. Close the cover and tighten the two screws carefully.  
This is important in order to maintain the IP grade of the EXPLORER 510.

## 5.4 Maintenance

### 5.4.1 Normal use of the battery

It is recommended not to partially charge/discharge the battery several times in a row. Partial charging/discharging affects the accuracy of the capacity measurement.

Never leave the EXPLORER 510 fully discharged for a longer period of time. If the EXPLORER 510 is not to be used for a shorter period of time (1 month), charge the battery to minimum 20 to 30%. If the EXPLORER 510 is stored for more than a month, charge the battery to 50%. For battery specifications, see *Battery specifications (internal battery)* on page A-2.

### 5.4.2 To recharge the battery

To recharge the battery, connect external power to the DC input of the EXPLORER 510. For details on how to apply external power, see *External power* on page 2-15.

### 5.4.3 Accurate display of the battery capacity

To ensure accurate display of the battery capacity, you can run a learning cycle at first time use. The learning cycle must be performed between 20°C and 30°C.

Do as follows:

1. Fully charge the battery.
2. Remove external power and fully discharge the battery:  
Use the EXPLORER 510 and/or leave it on until it turns off automatically. This way the EXPLORER 510 learns the complete capacity of the battery. Note that it may take several hours to discharge the battery if it is not in use.
3. Recharge the battery.

### 5.4.4 Disposal of the EXPLORER 510

Old electrical and electronic equipment marked with this symbol can contain substances hazardous to human beings and the environment. Never dispose these items together with unsorted municipal waste (household waste).



In order to protect the environment and ensure the correct recycling of old equipment as well as the re-utilization of individual components, use either public collection or private collection by the local distributor of old electrical and electronic equipment marked with this symbol.

Contact the local distributor for information about what type of return system to use.

## 5.5 Troubleshooting

### 5.5.1 Troubleshooting guide

Problem	Possible cause	Remedy
The EXPLORER 510 cannot be switched on, or does not stay on when powered by the battery.	The battery needs recharging.	Recharge the battery. Check the battery indicator in the web interface.
The EXPLORER 510 cannot be switched off.	The Power button was not held long enough.	When you switch off the EXPLORER 510, hold the power button until the light indicator flashes rapidly yellow.  In rare cases, it may take up to 10 seconds to switch off the EXPLORER 510.
Charging error	The temperature is below 0°C or above 40°C.	Only charge the battery when the temperature is within the range 0°C to 40°C.
	The charging voltage is lower than the specified minimum voltage.	Wait until charging begins (the Status indicator flashes yellow).  If the battery is completely discharged, and it has been out of use for a long time, the charging process may take a long time to start. If charging does not begin within 2-3 hours, contact your local distributor.
The EXPLORER 510 is not operational.	Software error	Restart the terminal.  If the problem persists, you can make a recovery software upload as described in <i>Recovery software update</i> on page 5-4.  <b>Note:</b> This will reset the configuration of your terminal to factory default!
The web interface shows <b>Insert SIM</b> .	The SIM card is not present.	Insert the SIM card in the SIM slot according to the instructions in the section <i>To insert the SIM card</i> on page 2-2.
	The SIM card is not inserted properly.	Remove the SIM card and re-insert it according to the instructions in the section <i>To insert the SIM card</i> on page 2-2.

Problem	Possible cause	Remedy
<p>The web interface shows <b>No position fix.</b></p>	<p>The EXPLORER 510 is unable to register on the network, because the GNSS position is unknown.</p>	<p>Make sure the view to the GNSS satellites is not blocked.</p> <p>To obtain position fix, the EXPLORER 510 should be placed flat on an even surface pointing straight upwards, with a clear view to as much of the sky as possible. When the EXPLORER 510 has obtained position fix, you can point the antenna towards the BGAN satellite.</p> <p>You can see position status in the status section in the web interface.</p>
<p>The web interface shows <b>Emergency calls only.</b></p>	<p>The BGAN network is only available for emergency calls.</p> <p>The reason may be one of the following:</p> <ol style="list-style-type: none"> <li>1) Your Airtime subscription has expired.</li> <li>2) You are using the wrong SIM card.</li> <li>3) No SIM card is inserted.</li> <li>4) You have canceled the PIN</li> </ol>	<ol style="list-style-type: none"> <li>1) Check your subscription with the Airtime Provider.</li> <li>2) Check that your SIM card is valid for communication on the BGAN network.</li> <li>3) Insert the SIM card</li> <li>4) Enter the PIN</li> </ol>
<p>The web interface shows <b>Not registered.</b></p>	<p>The EXPLORER 510 cannot register on the BGAN network.</p>	<p>Check that your SIM card is valid for communication on the BGAN network.</p> <p>Check your subscription with the Airtime Provider.</p>
<p>The web interface shows <b>External control.</b></p>	<p>The EXPLORER 510 is currently controlled by an external application, e.g. LaunchPad or an AT command interface.</p>	<p>If you want to use the built-in web interface, stop the external application and restart the EXPLORER 510. Then open your browser and access the web interface.</p>

Problem	Possible cause	Remedy
The EXPLORER 510 cannot obtain its position using GNSS.	<p>There is no GNSS signal, or the signal is weak.</p> <p>If the EXPLORER 510 has not been used recently within the same location, it can take up to 10 minutes to obtain the position.</p>	<p>Check the position status in the web interface.</p> <p>To help the EXPLORER 510 obtain position fix, it should be placed flat on an even surface pointing straight upwards, with a clear view to as much of the sky as possible.</p> <p>When the EXPLORER 510 has obtained position fix, you can point the antenna towards the BGAN satellite.</p>
No signal or weak signal from the BGAN satellite.	The view to the satellite is blocked.	Make sure the EXPLORER 510 has a clear view to the satellite. Be aware that window glass may reduce the signal level.
	The antenna is pointed in the wrong direction.	<p>Check that the antenna is pointed according to the position data.</p> <p>Adjust the position to the highest possible signal strength.</p>
Connection to the Internet cannot be established.	The signal strength is too low.	<p>Check that the antenna is pointed according to the position data.</p> <p>Adjust the position to the highest signal strength you can obtain.</p> <p>As a rule of thumb, you should have a signal strength of 45 dBHz or more to be able to make a call or data session.</p>
The web interface cannot be accessed.	The browser is configured to use a proxy server.	For Microsoft Internet Explorer, select <b>Tools &gt; Internet Options &gt; Connections &gt; LAN Settings</b> and uncheck <b>Use a proxy server for your LAN</b> .
	You have entered a wrong IP address.	Check the IP address and re-enter it. The default IP address is <b>192.168.0.1</b>
A LAN connection cannot be established.	The cables are not properly connected.	<p>Connect the cables.</p> <p>Note that you must use the USB to LAN Converter Cable from Cobham Satcom.</p>
	The cable type(s) or connector type(s) are not correct.	Note that you must use the USB to LAN Converter Cable from Cobham Satcom.

Problem	Possible cause	Remedy
<p>A WLAN connection cannot be established.</p>	<p>The WLAN interface is disabled in the EXPLORER 510</p>	<p>Enable the interface by accessing the web interface and selecting <b>Control panel &gt; WLAN &gt; Enable.</b></p>
	<p>Your computer or smartphone is placed too far away from the EXPLORER 510.</p>	<p>Bring the computer closer to the EXPLORER 510. Note that the specified maximum distance is only valid under ideal conditions.</p>
<p>Cellular network: The web interface shows <b>PUK required for cellular modem</b></p>	<p>3 wrong PIN codes have been entered and the EXPLORER Cellular Modem now requires a PUK code to unlock the SIM. However, the PUK code cannot be entered using the EXPLORER 510.</p>	<p>Remove the EXPLORER cellular modem and insert it into another device (e.g. your computer). Then enter the PUK code from this other device. When the SIM is unlocked you can put it back into the EXPLORER 510.</p>

## 5.5.2 Status signaling

### Means of signaling

The EXPLORER 510 system provides two methods for signaling the status of the system.

- **Light indicators** next to the SIM slot
- **Messages** shown in the web interface.

### Light indicators

The EXPLORER 510 has two light indicators showing status and WLAN.








### Status indicator

**Note** Errors (red constant) and Warnings (yellow constant) override other indications.


Indicator pattern		Meaning
●	Green flashing rapidly	Starting up
●	Green flashing slowly	Power on (ready)
●	Green constant	Power on with DC input
●	Yellow flashing slowly	Battery charging
●	Yellow flashing rapidly	Closing down
●	Yellow constant	Warning (user recoverable)
●	Red constant	Error. See the web interface.
●	Blue flashing slowly Blue flashing rapidly	Uploading software to the terminal Safe mode - see <i>Restore the settings of the EXPLORER 510</i> on page 5-5.
○	Off	Power off

## WLAN indicator

Indicator pattern		Meaning
	Green flashing	Rx/Tx traffic
	Green flashing slowly	In use - has WLAN registration(s)
	Green constant	Ready - customized configuration
	Yellow constant	Ready - factory default configuration
	Off	Not active – power off / starting up / closing down

## Event messages and status messages

In the web interface of the EXPLORER 510 you can see status messages and alerts that are currently active.

When a warning or error event is active, the web interface shows a warning symbol . Select it to see a list of currently active alerts.

### 5.5.3 List of messages

The following list explains some of the messages that may show in the web interface of the EXPLORER 510.

Event ID (Hex)	Displayed text	Explanation	Remedy
1010	Temperature too low (critical)	Low ambient temperature is causing the performance of the terminal to be degraded or halted.	Move the terminal to a warmer location. For information on ambient temperature limits, see the Specifications appendix.
1020	Too low temperature warning	Low ambient temperature is causing the performance of the terminal to be degraded or halted.	Move the terminal to a warmer location. For information on ambient temperature limits, see the Specifications appendix.
1110	Temperature too high (critical)	<b>Terminal:</b> Critically high temperature is causing the terminal to shut down. <b>Antenna:</b> Critically high temperature is causing the antenna to stop transmission.	If possible, move the failing unit to a cooler location. For information on ambient temperature, see the Specifications appendix. Contact your distributor if the problem persists.
1120	Too high temperature warning	High ambient temperature is causing the performance of the system to be degraded or halted. The bit rate is reduced.	Move the terminal to a cooler location. For information on ambient temperature limits, see the Specifications appendix.

Event ID (Hex)	Displayed text	Explanation	Remedy
1200	Battery level low	The battery level is low.	Charge the battery. See <i>To recharge the battery</i> on page 5-6.
1400	Satellite signal lost	The system no longer receives a signal from the satellite.	Make sure the antenna has a clear view to the satellite.
1600	SIM blocked	The SIM card is not accepted by the network, e.g. because you have entered too many wrong PINs and PUKs. Only emergency calls are allowed.	Enter the PIN and wait for network approval. If the problem persists, contact your airtime Provider.
1700	Registration for voice failed	The system has not yet been allowed to register for voice services (Circuit Switched).	If the problem persists, contact your airtime provider.
1800	Registration for data failed	The system has not yet been allowed to register for data services (Packet Switched).	If the problem persists, contact your airtime provider.
2900	Network failed authentication	The system does not accept the network as a valid BGAN network.	Restart the system. If the problem persists, contact your distributor.
3900	Air link error	Error condition in DSP which modulates and demodulates BGAN signal.	Reboot the terminal. Contact your distributor if the problem persists.
8049	Data rate reduction due to high temperature	The bit rate of the data channel is reduced because the temperature is too high.	Move the terminal to a cooler location.
8056	SIM rejected	The type of USIM card inserted in the terminal is not correct for your terminal.	Make sure you have the correct type of USIM card. For example, an USIM card for a land mobile system will not work for a maritime system and vice versa.
80AA	A low LTE blocker level is detected - this might affect terminal performance	A cellular network signal has been detected. It may impact the performance of the terminal	If possible, move the terminal to another location with lower LTE blocker level.
80AB	A high LTE blocker level is detected - this will affect terminal performance	High cellular network interference detected, high risk of impairing terminal performance	If possible, move the terminal to another location with lower LTE blocker level.

Event ID (Hex)	Displayed text	Explanation	Remedy
80AD	The terminal has re-registered due to a high LTE blocker level	The terminal has re-registered to the network in attempt to regain functionality after an interfering cellular network signal.	The event is cleared after 5 minutes, but the terminal has limited the frequencies used. To restore original behavior, reboot the terminal.
9220	Antenna temperature above critical limit	Antenna temperature too high, might affect performance.	If possible, move the antenna to a cooler location.
10117	PIN for cellular modem required	The SIM card for your cellular connection requires a PIN code	You can enter the SIM PIN for the cellular modem from the web interface.
10118	PUK for cellular modem required	The SIM card for your cellular connection requires a PUK code, because too many wrong PINs were entered.	Enter the PUK for the cellular SIM card in the web interface.
1011B	Cellular modem SIM card error	There is an error with the SIM card in the cellular modem	Check that you have inserted the correct SIM card, and that it is inserted properly.
1011C	Cellular modem error	There is an error with the cellular modem. The text in the web interface will normally show more details on the type of error, e.g. unknown APN.	Check that the APN for the cellular connection is set up correctly. You can set up the APN in the web interface: In the Dashboard click in the right side of the tile with the Cellular Modem.
1011D	Cellular modem not supported	The connected cellular modem is not supported by the terminal.	Connect a cellular modem that is supported.
10203	USB power limited to 0.5A due to high temperature	The current is limited to 0.5 A in the USB interface, even if it is set to 1.0 A in the web interface, because the temperature is too high.	If 0.5 A is not enough for the device connected to the USB interface, move the terminal to a cooler location.
10204	Standard data speed limited due to high temperature	The bit rate of the data channel is reduced because the temperature is too high. All Streaming contexts are closed.	Move the terminal to a cooler location.
10205	Closing all connections due to high temperature	All data connections, background and streaming are closed.	Move the terminal to a cooler location.


Event ID (Hex)	Displayed text	Explanation	Remedy
10206	Closing terminal due to high temperature	Terminal has reached a critically high temperature, and will reboot by itself.	Move the terminal to a cooler location.
10300	Updating software...	Software update has begun.	Wait for the software update to complete.
10301	Do not remove DC power from terminal during software update	Software update is ongoing and the battery is low. Do not remove DC power from the terminal while software update is ongoing.	If DC power is not connected, connect it as soon as possible and leave it connected until software update is completed.
10302	Preparing for software update	Initial preparations for software upload are started.	Wait until preparations are over, either the terminal is rebooted or an error is shown.
10303	Error opening software file	The file requested to use for the update procedure cannot be opened or found.	Make sure the update file is correct and the file exists. Use the command <b>_IUPDFW?</b> to show the correct file name before updating.
10304	Battery level too low for software update	The battery level is too low to perform software update.	Charge the battery (connect to DC power) before updating the software.
10305	Software downgrade prevented. Use a newer software version.	Not possible to perform a software downgrade, use a newer version.	Use a newer version of software for the update, or contact your distributor.
10306	File does not support this product	The file used for software update does not support this product.	Use the correct tiif file
10307	File is corrupt. Download the file again.	The file used for software update appears to be corrupt and the content cannot be validated.	Download the file again
10308	Software update failed. Try running the update again.	Software upload failed to initialize, can be a sporadic issue.	Try running the update again. If the problem persists, contact your distributor.
10309	Software update failed. Update to the latest software version.	The software has been rolled back to the previous version prior to starting the software upload. The new image was not validated correctly.	Try running the update again, if the problem persists, contact your distributor.

Event ID (Hex)	Displayed text	Explanation	Remedy
1030A	Software failed. Update to the latest software version from Safe Mode.	Not all subunits have been properly verified with the new image.	Attempt software update procedure again, alternatively from Safe Mode if the problem persists.
1030C	Software update is already started	Another software update cycle is currently running.	Wait until the current software upload has finished.
1030D	Software version is already installed	The software image you are trying to install is already active on the terminal.	Update with a different image as it is prohibited (and nonsensical) to start a sw update process with the same image.
1030E	Software update forced roll-back	Software update failed and the terminal forced a roll-back to the previous version.	Check that you have the correct file for software update and try again. If the problem persists, contact your distributor.
11001	Calibration error	Invalid calibration values found.	Contact your distributor.
11002	Battery level low	The battery level is low	Charge the battery. See <i>To recharge the battery</i> on page 5-6.
11003	Temperature too low for charging	The temperature is lower than the minimum charge temperature.	Only charge the battery when the temperature is within the specified range. See <i>Charge temperature</i> on page A-2.
11004	Temperature too high for charging	The temperature is higher than the maximum charge temperature.	Only charge the battery when the temperature is within the specified range. See <i>Charge temperature</i> on page A-2.
38404	WLAN control	WLAN failed to start up normally.	Restart the terminal. Contact your distributor if the problem persists.

## 5.6 Log files

### 5.6.1 To create a diagnostics report

The diagnostic report contains relevant information for troubleshooting. When contacting your distributor for support, please enclose this file. To generate a diagnostic report, do as follows:

1. Select **Settings > Terminal access** from the **EXPLORER Connect** app, or access the web interface.
2. Select  (Control panel) at the bottom of the page.
3. Select **Support**.
4. From the **Support** page, select **Diagnostics report**.
5. Select **Generate report**.


**Note** | It may take a few minutes to generate the report.

6. Select **Download report**.
7. Choose a location for the file and save it.

### 5.6.2 Call log and data log

The log holds detailed information on each call or data session to and from the EXPLORER 510, including date and time, phone numbers, duration, amount of data transferred etc.

Date and time is UTC time, received from the satellite.

To see the log in the web interface, select  (Control panel) > **Logs**. See *To use the logs* on page 4-13.

### 5.6.3 Event log

The Event log shows events that occurred in the past and are no longer active. It includes events of informational character describing normal phases of operation for the terminal, and also alerts that have appeared in the Alerts list.

To view the event log in the web interface, select **Event log** from the **Support** page.

## 5.7 List of reserved IP subnets

Some IP subnets are reserved for internal use in the terminal. If any of these addresses are assigned to external equipment connected to the terminal, the terminal and connected equipment will not be able to communicate.

1. The following local IP subnets are **reserved for internal use** in the terminal and cannot be assigned to connected equipment:

**192.168.1.x** and **192.168.2.x** -where x can be any number from 0 to 255.

The netmask for these subnets is 255.255.255.0.

2. **Do not use 0 nor 255** at the last (rightmost) position in the IP address for connected equipment.
3. Furthermore the following local IP addresses are **reserved** and cannot be assigned to connected equipment:

**192.168.50.1**

**192.168.51.1**

**192.168.52.1**

**192.168.53.1**

**192.168.54.1**

**192.168.55.1**

**192.168.56.1**

**192.168.57.1**

**192.168.58.1**

**192.168.59.1**

**192.168.60.1**

**192.168.61.1**

**192.168.61.2**

**192.168.61.3**

**192.168.61.4**

**192.168.61.5**

**192.168.61.6**

**192.168.61.7**

**192.168.61.8**

**192.168.61.9**

**192.168.61.10**

**192.168.61.11**

# Technical specifications

## A.1 General specifications

Item	Specification
Type	EXPLORER 510, BGAN Class 2 terminal
Max. IP data rate, Rx/Tx <sup>1</sup>	464 kbps/464 kbps (simultaneously)
Streaming data	32, 64, and 128 kbps
Voice	Standard voice 4 kbps Premium voice 3.1 kHz audio, 64 kbps
Physical dimensions	202 x 202 x 51.8 mm 8.0 x 8.0 x 2.0 inches
Weight	1.4 kg / 3.1 lbs (incl. battery)
Operating temperature	
Powered by external DC (fully charged battery)	-25 to 55°C
DC operated and charging the battery	0 to 45°C (10 to 45°C in Japan)
Powered from battery (discharging)	-20 to 55°C
Storage temperature	9 months at -20 to 20°C 3 months at -20 to 45°C 1 month at -20 to 60°C
Water & Dust	IP66
Supported web browsers (Others may be supported, these have been tested.)	Safari 5.1.7 and above Internet Explorer 9.0 and above Google Chrome 23 and above Mozilla Firefox 16 and above
Approvals	CE, FCC, IC Inmarsat Class 2 Approval

1. Performance depends on a wide range of factors and actual usage.

## A.2 Battery specifications (internal battery)

Item	Specification
Battery type	Lithium Ion, rechargeable
Nominal voltage	7.3 Volt
Nominal capacity	5700 mAh
Time between recharging	
Stand-by	24 h (0 to 55°C/ 32 to 131°F)
Tx time, max	2 h 25 m @ 128 kbps (25°C / 77°F)
Rx time, max	4 h 40 m @ 128 kbps (25°C / 77°F)
Charge time without precharging	Less than 4 hours
Charge time including precharging (battery completely discharged)	12 to 24 hours
Charge temperature	0 to 45°C, / 32 to 113°F (Japan: 10 to 45°C / 50 to 113°F)
Min. charge cycles	300 (typically up to 500)

## A.3 Interfaces specifications

### A.3.1 Power input

Item	Specification
DC input range	10.5 to 32 VDC
Power consumption	
Standby / transmit	2.8 W / 19 W (typical)
During charging	38 W (max.)
Connector type	2.5 mm EIAJ RC-5320-IV

### A.3.2 WLAN access point

Item	Specification
Standard	IEEE 802.11 b/g
Antenna	Built-in
Frequencies	2.4 GHz ISM band

### A.3.3 USB (Host) interface

#### Connector pin-out

Pin	Function
1	VBUS
2	D-
3	D+
4	GND

#### Specifications

Item	Specification
Version	USB v2.0 Host
Connector type	Type A
Charge current available	0.5 A or 1.0 A, user selectable
Max. cable length	5 m / 16.4 ft

## A.4 Built-in BGAN antenna




Item	Specification
Type	Directional patch array, manually adjustable
Polarization	RHCP, Right-hand circular polarization for both tx and rx
Frequencies	
Inmarsat I-4 and I-6	
Transmit	1626.5 MHz - 1660.5 MHz
Receive	1525 MHz - 1559 MHz
Inmarsat Alphasat (I-4 F4)	Extended L-band (XL) <sup>1</sup> :
Transmit	1626.5 MHz - 1660.5 MHz and 1668 MHz - 1675 MHz
Receive	1518 MHz - 1559 MHz
GNSS	GPS, GLONASS, Beidou
EIRP	Nominal: 15.1 dBW $\pm$ 1dB, Class 2
Gain	11 dBi

1. Only available within Alphasat coverage (I-4 F4). See *Satellite coverage* on page A-7.



## A.5 AC/DC adapter

Item	Specification
AC input range	100 to 240 VAC, 47 to 63 Hz, 50 W
DC output	19 VDC

## A.6 Outline drawing

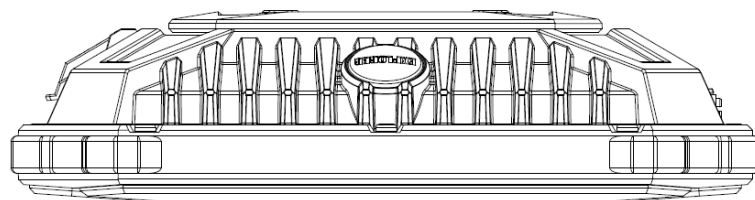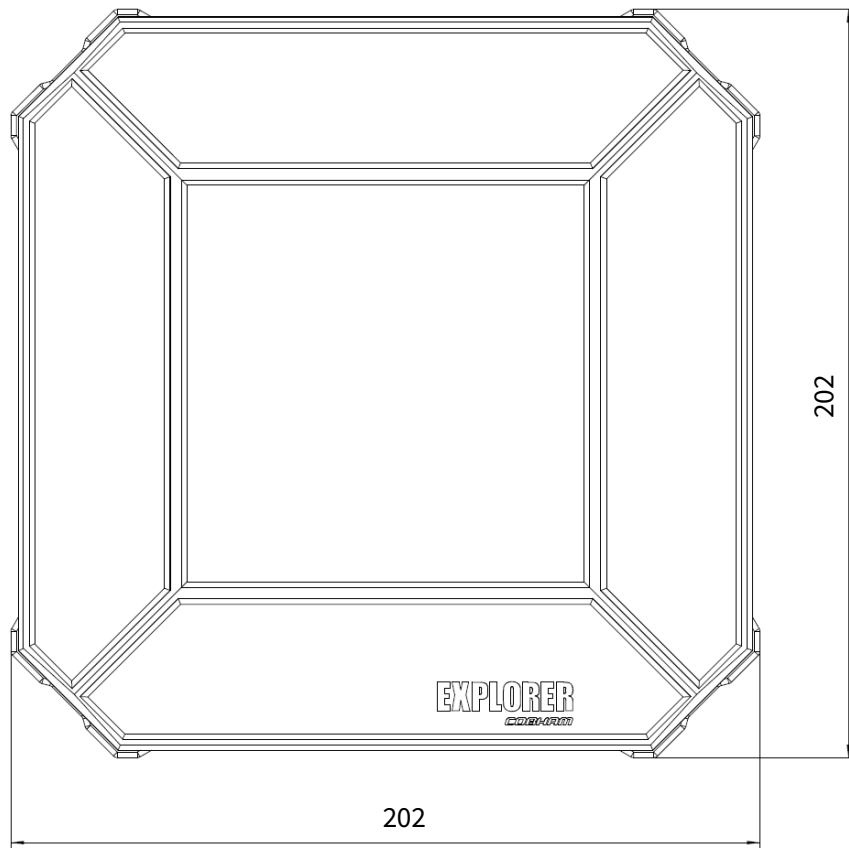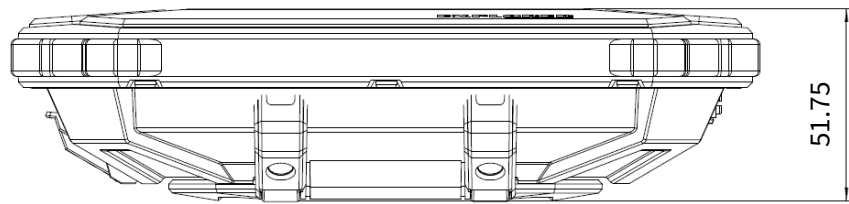


Dimensions are in millimeter

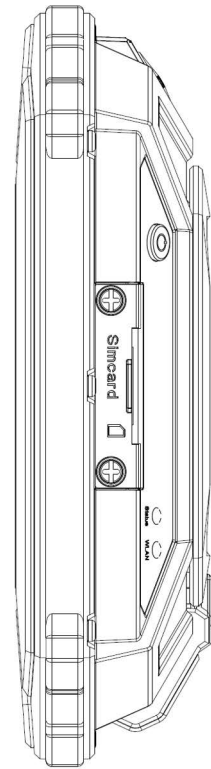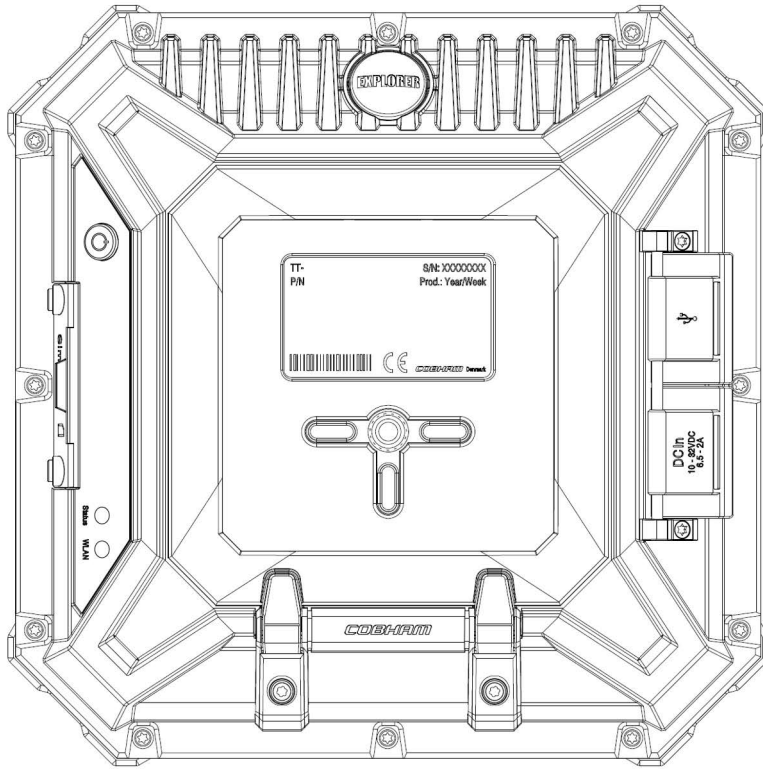

## A.7 Satellite coverage

The EXPLORER 510 uses the Inmarsat I-4 and I-6 satellites for satellite communication. The drawing below shows the coverage areas for these satellites.

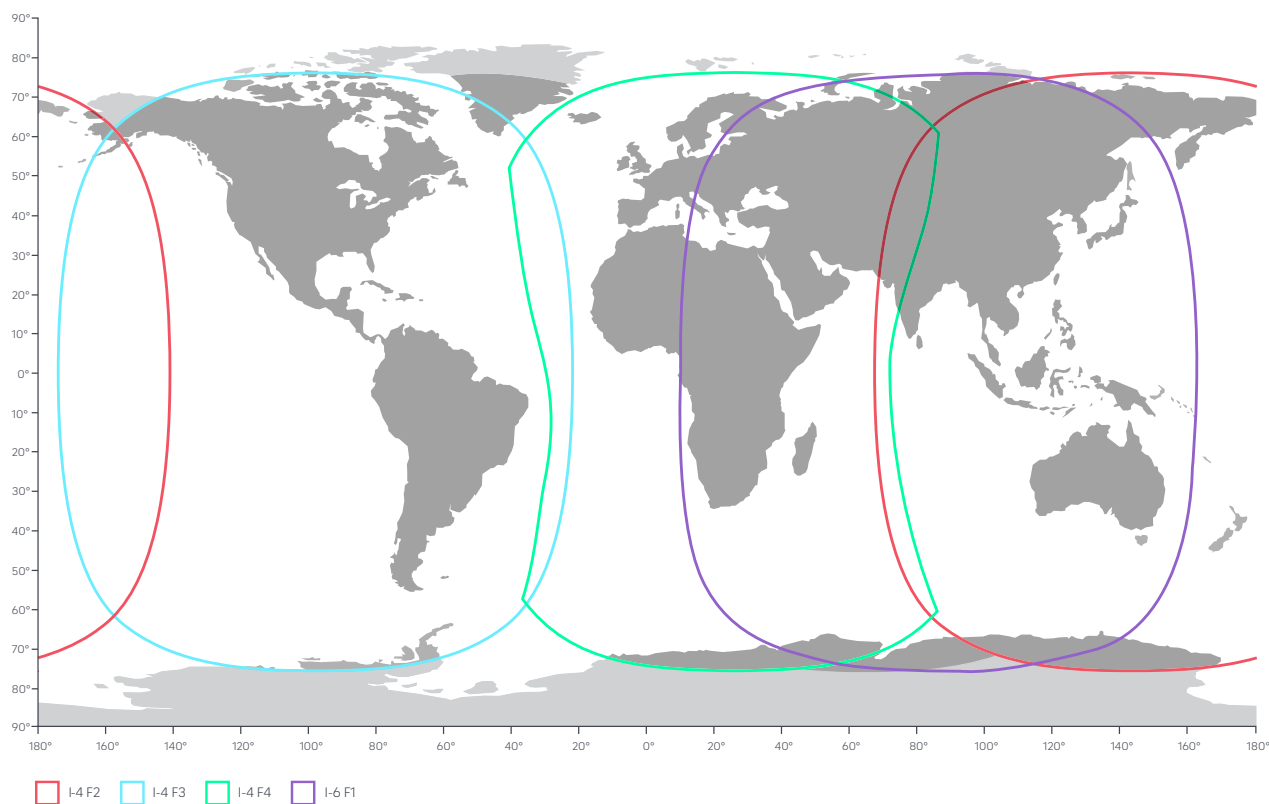

This map is for general information purposes only and no guarantee is given of accuracy or fitness for a particular use. Coverage is subject to change at any time.

## Command reference

This appendix lists the function, syntax and parameters for commands used with the EXPLORER 510. You can send commands to the EXPLORER 510 either with an SMS or via AT shell. SMS is very useful for remote operation, because you only need the terminal's mobile number to access the terminal. This appendix has the following sections:

- *Overview of M2M AT and SMS commands*
- *SMS remote commands*
- *AT commands*

## B.1 Overview of M2M AT and SMS commands

Function	Command	Interface		
		AT shell	ATCO SMS	SMS
Lock and unlock AT shell	_ICLCK	X		
Control MAC address locking	_IMACLOC	X		
Configuration of MAC address list	_IMACLOCAD	X		
Control remote SMS commands	_ISMSRMT	X		
Reset passwords	_ICPWD	X	X	
Control remote access to web interface	_IREMWEB	X	X	
Download and update SW	_IGETFW	X	X	
Install new SW	_IUPDFW	X	X	
Send file from terminal to FTP server	_ISENDFILE	X	X	
Get file from FTP server to terminal	_IGETFILE	X	X	
Update configuration file	_IUPDCFG	X	X	
Get input voltage of the EXPLORER 510	_ITDCIV	X	X	
Administrator password control	ADPWRST			X
Activate PDP context	ACTIVATE			X
Deactivate PDP context	DEACTIVATE			X
Delete SMS messages	CLEAR			X
Get terminal information	GETINFO			X
Restart the terminal	RESTART			X
Configuration of Connection watchdog function	WATCHDOG			X
Configuration of Terminal watchdog function	ADVWATCHDOG			X
Configuration of WAN mode	WANMODE			X

## B.2 SMS remote commands

This section describes syntax and parameters for the SMS commands. For examples of use, see *Remote access with SMS* on page 3-5

### B.2.1 Syntax conventions

Syntax definitions use the following conventions:

- <parm> indicates that a parameter (without < and >) can be filled in by the user.
- { <opt1> | <opt2> | ... | NA } indicates that one of various options must be chosen by the user. Use **NA** when no value is defined.
- Keywords and parameters are separated by the space (ASCII 32) character.
- The command name and all keywords must be in upper case; most user-provided parameters are case sensitive but may be either case.
- **TE** means Terminal Equipment - the equipment connected locally to the EXPLORER 510.

### B.2.2 SMS remote command summary

#### Commands

The table below summarizes the available SMS remote commands. The password comes just after the last parameter (except for the ATCO command, see below). For examples, see *Remote access with SMS* on page 3-5.

Command	Parameters	Password
ACTIVATE	<qos> <PC/TE type> <apn> <user> <pwd>	<rsms_pwd>
ADPWRST	1 <imei>	<rsms_pwd>
ADVWATCHDOG	<get/set> <wdog_enable> <wakeup> <interval> <ping1> <ping2> <ping3> <apn_type> <apn> <user> <pwd> <pos_response> <sms_number>	<rsms_pwd>
CLEAR	<category> SMS	<rsms_pwd>
DEACTIVATE	<qos> <PC/TE type>	<rsms_pwd>
GETINFO	<info_mode> <dataset>	<rsms_pwd>
RESTART	<reset_type> BGAN	<rsms_pwd>
WATCHDOG	<wdog_op> <ping1> <ping2> <ping3> <ping_always> <ping_interval> <wdog_enable>	<rsms_pwd>
WANMODE	<cmd_op> {<wanmode>}	<rsms_pwd>
<b>SMS command for sending AT commands</b>		
ATCO	<resp_mode> <rsms_pwd> <at_cmd>	

## Parameters

The table below summarizes the available parameters for the SMS remote commands.

Parameter	Values	Meaning
<apn_type>	SIM default Network assigned User defined NA	Read the APN from the SIM card. Use the APN assigned by the network. Specify another APN to use. Placeholder when no value is specified. The existing setting applies.
<apn>	<APN> NA CLR	APN name, e.g. <b>bgan.inmarsat.com</b> . Placeholder when no APN is specified. Note that any previously entered APN is maintained. No APN is used.
<at_cmd>	<at_cmd>	AT command, without prefix AT. For supported AT commands, see <i>ATCO commands</i> on page B-9.
<category>	1 2 3 4	Delete only Read SMS messages. Delete Read and Sent. Delete All except Unread. Delete All SMS messages.
<cmd_op>	1 2	Get WANMODE setting. Set WANMODE configuration.
<dataset>	GPS USAGE ALL	GPS position. Cumulative call time and data usage. GPS position plus call time and data usage.
<get_set>	1 2	Get parameters. Set parameters.
<imei>	<14 digits>	IMEI of the EXPLORER 510, without dashes or check digit.
<info_mode>	1 2	For GPS query: position data only. For other queries: use verbose mode (with titles). For GPS query: position data plus SMS usage. For other queries: use terse mode (no titles).
<interval>	<integer> NA	The number of hours between the Terminal watchdog sessions (1-504). Placeholder when no value is specified. The existing setting applies.
<PC/TE type>	DHCP STATIC AWO <name> <IP addr> ANY	All TEs known via DHCP. All TEs known via Terminal settings. Always On, deactivate all PDP contexts including those established with ACA. Name of specific TE, as known by DHCP server. IP Address of specific TE (or Global IP for DEACTIVATE). Any/all TEs attached (DEACTIVATE: all except PDP context established with ACA).

Parameter	Values	Meaning
<ping_always>	0 1 NA	Send ping only if no traffic. Always send ping, regardless of data traffic. Placeholder when no value is specified. Note that the existing setting applies.
<ping_interval>	<integer> NA	Interval between pings (minutes). Placeholder when no value is specified. Note that the existing setting applies.
<ping[1/2/3]>	<IP addr>  NA	Three ping destination IP addresses. <b>Note:</b> You must fill in all three places. <b>0.0.0.0</b> means any previously entered IP address in this position is deleted. Placeholder when no IP address is specified. Note that any previously entered IP address is maintained.
<pos_response>	0 1 NA	Send an sms response <sup>1</sup> . Do not send an sms response <sup>a</sup> . Placeholder when no value is specified.
<pwd>	<APN password> NA CLR	Password associated with APN username.  Placeholder when no APN password is specified. Note that any previously entered password is maintained. Password is not used.
<qos>	1	Standard/background data (currently the only qos available for M2M).
<reset_type>	1	Normal delay restart.
<resp_mode>	0 1 2 3	None – send no responses to AT commands. Immediate - immediate responses, but not unsolicited. Final – suppress immediate if OK, plus unsolicited. All – send both immediate and unsolicited responses.
<rsms_pwd>	<rsms_pwd>	Remote SMS password. The password must be 5 to 15 characters long and cannot contain spaces. Accepted characters are: A through Z (uppercase characters), a through z (lowercase characters) and 0 through 9 (numeric characters).
<sms_number>	<sms_number> NA	The phone number to be used for sms response. Placeholder when no value is specified.
<user>	<APN user name> NA CLR	User name associated with APN.  Placeholder when no APN user name is specified. Note that any previously entered user name is maintained. User name is not used.
<wakeup>	0 1 NA	Set to NA. This parameter must be present, but is ignored because the EXPLORER 510 does not support wake up functions.

1. Position SMS response is only for future use, and should be set to NA

Parameter	Values	Meaning
<wanmode>	0	Cellular modem if available at power-up.
	1	User selection.
	2	BGAN only.
	3	Cellular modem only.
	4	Not valid for EXPLORER 510.
	5	Not valid for EXPLORER 510.
	6	Not valid for EXPLORER 510.
	7	Not valid for EXPLORER 510.
<wdog_enable>	0	Disabled.
	1	Enabled.
	NA	Placeholder when no value is specified. The existing setting applies. Used if you want to change one of the other parameters without changing the enabled/disabled setting.
<wdog_op>	1	Get watchdog configuration.
	2	Set watchdog parameters.

## B.2.3 SMS reject responses

Reject Response SMS	Possible Cause
ACT/DEACT PARM PROBLEM	The <IP addr> provided for an ACTIVATE or DEACTIVATE command is incorrect (for ACTIVATE, it must be in same subnet as the EXPLORER 510 IP and not be the EXPLORER 510 IP; for DEACTIVATE, it must exist as a local or global IP address in the existing PDP table).
ATCO ERROR	Unable to send AT command to ATC handler.
COMMAND NOT SUPPORTED	Attempt to use an SMS command not supported by the EXPLORER 510.
ERROR: TERMINAL BUSY	An ACTIVATE or DEACTIVATE command is in progress.
INVALID RESTART REQUEST	Attempt to perform restart before EXPLORER 510 has been running for at least 15 minutes.
INVALID WANMODE REQUEST	The requested WAN mode is not supported by the EXPLORER 510, or invalid parameters are used.
INVALID WATCHDOG PING ADDRESS	Entered Ping address is out of range (0.0.0.0 – 255.255.255.254).
INVALID WATCHDOG PING FREQUENCY	Requested Ping Frequency is less than the minimum (5 minutes).
INVALID WATCHDOG REQUEST	"Ping required" or "wdog enabled" fields incorrect in remote SMS message, or watchdog request other than "get" attempted.
WRONG CONNECTION TYPE(NO DHCP TE)	No DHCP TEs connected to the Remote Unit.
WRONG CONNECTION TYPE(NO STATIC TE)	No Static TEs added in Terminal settings.
WRONG CONNECTION TYPE(NO TEs)	No TEs are connected to the Remote Unit.
WRONG PASSWORD	Authentication Failure.
WRONG QOS	Invalid QoS Requested (only a QoS of 1 is valid).

## B.3 AT commands

The following most used AT commands are explained in this manual. Other AT commands not mentioned here may still be supported.

### Note

AT commands related to data connections are only applicable to the BGAN connection, not to the optional cellular connection.

- *M2M related AT commands*
- *AT commands for message (SMS) configuration*
- *Context management AT commands*

### B.3.1 Syntax conventions

Syntax definitions use the following conventions:

- <parm> indicates that a parameter (without < and >) can be filled in by the user.
- { <opt1> | <opt2> | ... } indicates that one of various options must be chosen by the user.
- [<options>] indicates that <options> may or may not be included in the command.
- Keywords and parameters are separated by commas.  
Note: If parameters in the middle are left out, the commas must still be there as placeholders, e.g. <parm1>, , , <parm4> - In this case parm 2 and parm 3 are left out, but <parm4> is used. If the last parameters are left out, the commas are not needed, e.g. <parm1>, <parm2>
- The command name and all keywords must be in upper case; most user-provided parameters are case sensitive but may be either case.
- **TE** means Terminal Equipment - the equipment connected locally to the EXPLORER 510.

## B.3.2 M2M related AT commands

**Note** | The EXPLORER 510 does not support BGAN M2M SIM cards nor over-the-air software upgrade from the Inmarsat FUP server.

The following tables summarize some of the most used AT commands for M2M operation. Parameters are explained in *Parameters for ATCO commands* on page B-9 and *Parameters for other M2M related AT commands* on page B-12.

### ATCO commands

The table below summarizes the ATCO commands, i.e. AT commands that can be used in the SMS command **ATCO**.

**Note** | You can only use SMS commands over the BGAN network, not with a cellular connection.

Command	Parameters
_IATCROBST <sup>1</sup>	<enable>
_ICPWD	<type>,<old passwd>,<new passwd>
_IGETFILE	<ftp dir>,<filename>,<local dir>,<ftp server>,<ftp uname>,<ftp passwd>[,<apn>[,<apn uname>[,<apn passwd>]]]
_IGETFW	<mode>[,<ftp server>[,<ftp uname>[,<ftp passwd>[,<apn>[,<apn uname>[,<apn passwd>]]]]]
_IREMWEB	<enable>,<ip_addr_lo>[,<ip_addr_hi>[,<apn>[,<apn uname>,<apn passwd>]]]
_ISENDFILE	<local dir>,<filename>,<ftp dir>,<ftp server>,<ftp uname>,<ftp passwd>[,<apn>[,<apn uname>[,<apn passwd>]]]
_IUPDCFG	<filename>
_IUPDFW	<filename>

1. Robustness for 3GPP LTE signals, not ATC

### Parameters for ATCO commands

Parameter	Values	Meaning
<apn passwd>	<apn passwd>	Password for the APN.
<apn uname>	<apn uname>	User name for the APN.
<apn>	<apn>	APN name.
<enable>	0 1	Disable. Enable.
<filename>	<filename>	The name of the file to use, including extension.
<ftp dir>	<ftp dir>	The name of the directory on the ftp server to use for getting or saving a file.
<ftp passwd>	<ftp passwd>	Password for the ftp server.

Parameter	Values	Meaning
<ftp server>	<ftp server>	Host name or IP address of the ftp server.
<ftp uname>	<ftp uname>	User name for the ftp server.
<ip_addr_hi>	<ip_addr_hi>	The upper IP address of a range of allowed IP addresses. This parameter is optional; if omitted, only the specified single IP address <ip_addr_lo> may access the EXPLORER 510.
<ip_addr_lo>	<ip_addr_lo>	IP address of the HTTP client that should be allowed remote access to the EXPLORER 510, or the lowest address in a range of IP addresses, if a range of addresses is allowed.
<local dir>	<local dir>	The name of the local directory in the EXPLORER 510 to use for getting or saving a file.
<mode>	0 1	Deferred activation. Immediate activation.
<new passwd>	<new passwd>	The new password to be used after this command. The password must be 5 to 15 characters long and cannot contain spaces. Avoid special characters. Accepted characters: A through Z (uppercase characters), a through z (lowercase characters) and 0 through 9 (numeric characters).
<old passwd>	<old passwd>	The old password that is already in the system.
<type>	AD RS	The type of password is administrator password. The type of password is remote SMS password.

## ATCO response codes

The following response codes apply to the AT commands supported by SMS.

Code	Text	Explanation
<b>General codes</b>		
0	Complete	Operation completed successfully.
1	Unexpected software error	Software error.
2	Local file open error	_IGETFILE: could not open local file after download. _ISENDFILE: could not open local file. _IUPDFCFG: Loading configuration failed. Incompatible file format.
3	Directory not found	Could not find specified directory on local file system.
4	File not found	Could not find specified file name on local file system.
5	Error renaming file	Could not restore after failed upgrade.
<b>Context Management codes</b>		
13	Context activation error	Context activation failed. Could be problem with PS attach, SIM subscription, APN, network or connectivity.
<b>FTP Management codes</b>		
20	FTP hookup fail	Connection to FTP server failed. Problem could be server unreachable or specified IP address or server name invalid, or connectivity failure.
21	FTP login fail	FTP user name or password incorrect.
23	FTP 'cwd' fail	Could not change to working directory on FTP server.
24	FTP data connection fail	Could not establish an FTP data connection with the server.
26	FTP xfer command fail	Could not initiate data transfer on an established connection. May be caused if filename not found.
29	FTP socket fail	Error while reading or writing FTP data socket.
31	FTP xfer timed out	FTP client timed out waiting for socket ready (read or write), e.g. due to loss of connectivity during transfer.
<b>_IGETFW command codes</b>		
40	File in use, cannot download	The file to be downloaded is the same as the image currently in use.
41	Starting immediate upgrade...	Normal success. File downloaded successfully, now starting immediate update.
<b>_IUPDFW command codes</b>		
50	New firmware file not found	Could not find specified filename.

Code	Text	Explanation
51	New firmware file corrupt	New firmware file corrupt.
52	New firmware file failure	The new firmware failed to run or failed to acquire the network and the unit fell back to the old release.
54	Upgrade status file error	Previous update has not finished yet.
<b>_IREMWEB command codes</b>		
81	Global IP: <ip_addr>	Remote connection to web interface is set up successfully. Indicates global IP address assigned to the EXPLORER 510's own PDP context, to which an HTTP connection may be made.

## Other M2M related AT commands

Command	Parameters
_ICLCK	<type>,<enable>,<passwd>
_IMACLOC	<enable>,<interface>[,<interface>]
_IMACLOCAD	<action>,<interface>,<MAC Address>[,<MAC Address>] <sup>1</sup>
_ISMSRMT	<enable>
_ITDCIV	No parameters <sup>2</sup>

1. Up to 10 MAC addresses may be specified.
2. Type **\_ITDCIV?** to get the input voltage (in mV) of the EXPLORER 510

## Parameters for other M2M related AT commands

The table below summarizes the available parameters for the AT commands for M2M operation.

Parameter	Values	Meaning
<action>	0 1	Delete. Add.
<enable>	0 1	Disable. Enable.
<interface>	0	0 means Ethernet interface. This is the only option.
<MAC Address>	<MAC Address>	MAC address(es) for MAC locking. Up to 10 MAC addresses are permitted.
<passwd>	<passwd>	The existing administrator password.

### B.3.3 AT commands for message (SMS) configuration

The following AT commands are used for configuration of SMS.

**Note**

For details on parameters for the message configuration commands, see the 3GPP standard ETSI TS 127 005 V4.2.1.

Command	Parameters	Function
+CMGD	<index>	Delete Message.
+CMGF	<mode>	Message Format.
+CMGL	<stat>	List Messages.
+CMGR	<index>	Read Messages.
+CMGS	<da/mr>[,<toda/scts>]	Send Message.
+CNMI	[<mode>[,<mt>[,<bm>[,<ds>]]]]	New Message Indications to TE.
+CPMS	<mem1>[,<mem2>[,<mem3>]]	Preferred Message Storage.
+CSCA	<sca>[,<tosca>]	Service Center Address.
+CSMP	[<fo>[,<vp>[,<pid>[,<dcs>]]]]	Set Text Mode Parameters.
+CSMS	<service>	Select Message Service.

## B.3.4 Context management AT commands

The table below summarizes some of the most used AT commands for context management. Parameters are explained in the table in the next section. For details, refer to the 3GPP standard TS 27.007.

**Note**

The context management AT commands can only be used over a BGAN connection and will not work on a cellular connection.

Command	Parameters
+CGACT	[<state>[,<cid>[,<cid>[,...]]]
+CGDCONT	[<cid>[,IP[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp>[,<apn_undef>[,<apn_passwd>]]]]]]]]]
+CGDSCONT	[<cid>[,<p_cid>[,<d_comp>[,<h_comp>]]]
+CGEQMIN	[<cid>[,<Traffic class>[,<Maximum bitrate UL>[,<Maximum bitrate DL>[,<Guaranteed bitrate UL>[,<Guaranteed bitrate DL>[,<Delivery order>[,<Maximum SDU size>[,<SDU error ratio>[,<Residual bit error ratio>[,<Delivery of erroneous SDUs>[,<Transfer delay>[,<Traffic handling priority>]]]]]]]]]]]]]]]]]]]]]
+CGEQREQ	[<cid>[,<Traffic class>[,<Maximum bitrate UL>[,<Maximum bitrate DL>[,<Guaranteed bitrate UL>[,<Guaranteed bitrate DL>[,<Delivery order>[,<Maximum SDU size>[,<SDU error ratio>[,<Residual bit error ratio>[,<Delivery of erroneous SDUs>[,<Transfer delay>[,<Traffic handling priority>]]]]]]]]]]]]]]]]]]]]]
+CGPADDR	[<cid>[,<cid>[,...]]]
+CGTFT	[<cid>[,<packet filter identifier>[,<evaluation precedence index>[,<source address and subnet mask>[,<protocol number (ipv4) / next header (ipv6)>[,<destination port range>[,<source port range>[,<ipsec security parameter index (spi)>[,<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>[,<flow label (ipv6)>]]]]]]]]]]]]]]]]]]]]]

## Parameters for context management AT commands

The table below summarizes the main parameters for the AT commands for context management. For details, refer to the 3GPP standard TS 27.007.

Parameter	Values	Meaning
<apn_passwd>	<apn_passwd>	Password for the APN.
<apn_undef>	<apn_undef>	User name for the APN.
<apn>	<apn>	APN name.
<cid>	<cid>	The Context Identifier (1 – 11) for the PDP context. If no cid is entered, the command applies to all defined PDP contexts.
<d_comp>	0	Data compression off (default if value is omitted).
<destination port range>	<destination port range>	Destination port range in the form <b>From.To</b> . To indicate only one port, type in the same port number under From and To.  <b>Example:</b> 65333.65338 indicates port numbers from 65333 to 65338, both included.

Parameter	Values	Meaning
<evaluation precedence index>	<evaluation precedence index>	The evaluation precedence index defines the order in which the traffic flow filters are applied to packets. 0 is first, then 1, 2 etc.
<Guaranteed bitrate DL>	<Guaranteed bitrate DL> 0	The guaranteed bit rate down link (32, 64, 128).  If the parameter is set to '0' the subscribed value will be requested.
<Guaranteed bitrate UL>	<Guaranteed bitrate UL> 0	The guaranteed bit rate up link (32, 64, 128).  If the parameter is set to '0' the subscribed value will be requested.
<h_comp>	0 1	Header compression off (default if value is omitted). Header compression on (manufacturer preferred compression).
<Max bitrate DL>	<Max bitrate DL> 0	The maximum bit rate down link (32, 64, 128). If the parameter is set to '0' the subscribed value will be requested.
<Max bitrate UL>	<Max bitrate UL> 0	The maximum bit rate up link (32, 64, 128). If the parameter is set to '0' the subscribed value will be requested.
<p_cid>	<p_cid>	The primary context to which the secondary context is related.
<packet filter identifier>	<packet filter identifier>	The packet filter identifier (1 – 8).
<PDP_addr>	<PDP_addr>	Omit this parameter - note that the comma must still be there if other parameters come after this one.
<protocol number>	<protocol number>	This number is uniquely assigned for the protocol being used. TCP is set to 6, and UDP is set to 17. The protocol number determines which protocol is used by the traffic flow filter (0-255).
<source address and subnet mask>	<source address and subnet mask>	This is an IPv4 IP address and subnet mask (0.0.0.0.0.0.0.0 to 255.255.255.255.255.255.255.255). The first four numbers are the IP address and the last four numbers are the subnet mask.
<source port range>	<source port range>	Source port range in the form <b>From.To</b> . See <destination port range> for example.
<state>	0 1	Deactivate. Activate.
<Traffic Class>	1 3	Streaming (not available for M2M subscription). Standard data (Background).
<Transfer delay>	0 500 4000	0 ms, error correction is determined by the network. 500 ms, error correction is disabled. 4000 ms, error correction is applied.

## Conformity

### C.1 CE

The EXPLORER 510 is CE certified as stated in the simplified “EU Declaration of Conformity”, enclosed in electronic copy at the end of this appendix.

The WLAN interface is CE certified through the manufacturer of the WLAN card.

**Use of WLAN:**

The WLAN interface requires that the user enters the current country of operation. See *WLAN interface setup* on page 4-15.

### C.2 IC

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

### C.3 FCC

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**NOTICE:**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTICE:**

Changes or modifications made to this equipment not expressly approved by Cobham Satcom may void the FCC authorization to operate this equipment.

## C.4 Japanese Radio Law and Japanese Telecommunications Business Law Compliance.

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法)

This device should not be modified (otherwise the granted designation number will become invalid)

# EU Declaration of Conformity

Hereby **Thrane & Thrane A/S trading as Cobham Satcom** declares that the following equipment complies with the specifications of:

**RED directive 2014/53/EU** concerning Radio Equipment

## Equipment included in this declaration

<b>Model</b>	<b>Description</b>	<b>Part no.</b>
TT-3711A	EXPLORER 510 Terminal	403711A

The full text of the EU declaration of conformity is available at the following internet address:

<https://partnerportal.cobhamsatcom.com/eshop/downloads>

RED

Document no.: 99-157452-E

## A

**APN** Access Point Name. The Access Point Name is used by the terminal operator to establish the connection to the required destination network.

## B

**BGAN** Broadband Global Area Network. A satellite network based on geostationary satellites, delivering broadband data and telephony to virtually any part of the earth, with full UMTS (3G) compatibility. BGAN enables users to access e-mail, corporate networks and the Internet, transfer files and make telephone calls.

## C

**CE** Conformité Européenne. This term signifies that a CE certified product conforms to European health, environmental, and safety regulations. In short, it makes the product legal to be sold in the European Union.

**CS** Circuit Switched. Circuit-switched networks require dedicated point-to-point connections during calls.

## D

**DHCP** Dynamic Host Configuration Protocol. A protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network.

## F

**FCC** Federal Communications Commission. An independent agency of the United States government, created by Congressional statute to regulate interstate communications by radio, television, wire, satellite, and cable in all 50 states, the District of Columbia and U.S. territories. The FCC works towards six goals in the areas of broadband, competition, the spectrum, the media, public safety and homeland security.

## G

**GMPCS** Global Mobile Personal Communications Services

**GNSS** Global Navigation Satellite System. A navigation satellite system using the GPS, GLONASS, Galileo or Beidou system.

## H

**HTTP** HyperText Transfer Protocol. HTTP is the underlying protocol used by the World Wide Web. This protocol defines how messages are formatted and transmitted, and what actions Web servers and browsers should take in response to various commands.

**HTTPS** Hypertext Transfer Protocol Secure (HTTPS) is an extension of the Hypertext Transfer Protocol (HTTP). It is used for secure communication over a computer network, and is widely used on the Internet.

## I

**IC** Industry Canada (French: Industrie Canada) is the department of the Government of Canada with a mandate of fostering a growing, competitive, knowledge-based Canadian

economy.

ICMP	Internet Control Message Protocol. An Internet protocol mostly used for diagnostics.
IMSI	International Mobile Subscriber Identity. A number used to identify the user of a cellular network. It is a unique identification associated with all cellular networks.
IMSO	International Maritime Satellite Organisation. An intergovernmental body established to ensure that Inmarsat continues to meet its public service obligations, including obligations relating to the GMDSS.
IP	Ingress Protection. An international classification system for the sealing effectiveness of enclosures of electrical equipment against the intrusion into the equipment of foreign bodies (i.e. tools, dust, fingers) and moisture. This classification system uses the letters "IP"
<b>L</b>	
LAN	Local Area Network. A computer network covering a small physical area, like a home, office, school or airport. In contrast to wide-area networks (WANs), they usually have higher data-transfer rates, smaller geographic area, and lack of a need for leased telecommunication lines.
LED	Light Emitting Diode
<b>M</b>	
M2M	Machine-to-machine. Direct communication between unmanned devices using any communications channel, including wired and wireless.
<b>N</b>	
NAT	Network Address Translation. An Internet standard that enables a local-area network to use one set of IP addresses for internal traffic and a second set of addresses for external traffic. A NAT module makes all necessary address translations.
NSD	Network Service Device. An Inmarsat device for routing network traffic between GX and BGAN services
<b>O</b>	
OS	Operating System
<b>P</b>	
PBX	Private Branch Exchange, telephone exchange that serves a particular business or office.
PIN	Personal Identification Number. A code number used to provide access to a system that has restricted access.
PPPoE	Point-to-Point Protocol over Ethernet. A network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. By using PPPoE, users can virtually "dial" from one machine to another over an Ethernet network, establish a point to point connection between them and then securely transport data packets over the connection.
<b>R</b>	
RF	Radio Frequency. Electromagnetic wave frequencies between about 3 kHz and about 300 GHz including the frequencies used for communications signals (radio, television, cell-phone and satellite transmissions) or radar signals.

**S**

- SIM** Subscriber Identity Module. The SIM provides secure storing of the key identifying a mobile phone service subscriber but also subscription information, preferences and storage of text messages.
- SIP** Session Initiation Protocol. An application-layer control (signaling) protocol for creating, modifying, and terminating sessions with one or more participants. Used e.g. for Internet telephony.
- SSL** Secure Sockets Layer. The standard technology for keeping an Internet connection secure and safeguarding any sensitive data that is being sent between two systems.

**T**

- TE** Terminal Equipment - the equipment connected locally to the terminal.
- TLS** Transport Layer Security. An updated, more secure, version of SSL.

**U**

- USB** Universal Serial Bus. A specification to establish communication between devices and a host controller (usually personal computers). USB is intended to replace many varieties of serial and parallel ports. USB can connect computer peripherals such as mice, keyboards, digital cameras, printers, personal media players, flash drives, and external hard drives.
- UTC** Coordinated Universal Time. The International Atomic Time (TAI) with leap seconds added at irregular intervals to compensate for the Earth's slowing rotation. Leap seconds are used to allow UTC to closely track UT1, which is mean solar time at the Royal Observatory, Greenwich.

**V**

- VPN** Virtual Private Network. A network that is constructed by using public wires to connect nodes. You can create networks using the Internet for transporting data, using security mechanisms so that only authorized users can access the network.

**W**

- WAN** Wide Area Network. A telecommunications network or computer network that extends over a large geographical distance. In this manual, WAN is the external network via BGAN or cellular connection.
- WLAN** Wireless LAN. A wireless computer network that links two or more devices using a wireless distribution method (often spread-spectrum or OFDM radio) within a limited area such as a home, school, computer laboratory, or office building.

**A**

- ACDC adapter specifications A-4
- access
  - remote 3-5
- access to settings
  - limit in web interface 4-37
- access using AT commands 3-5
- admin password
  - change 4-37
  - log in 4-36
  - log out 4-37
  - reset 4-23
- advanced settings 4-36
- alerts
  - view in web interface 3-11, 4-21
- Alphasat
  - frequencies A-4
- antenna
  - connector A-7
  - short description 1-4
- APN
  - set up for BGAN 4-29
- AT commands
  - access with IP 3-5
  - list of B-1
  - remote access with IP 3-8
- audio assisted pointing 2-9
- automatic activation 4-30
- automatic shut down
  - connection 4-42

**B**

- backup configuration 4-39
- battery
  - capacity display accuracy 5-6
  - charge 5-6
  - short description 1-4
  - specifications A-2
- BGAN network
  - startup mode 4-25
- BGAN profile 4-46
- bridge mode 4-27

**C**

- call charges
  - estimating in web interface 4-43
- call log 4-13

**calls**

- make 3-9
- missed, received, outgoing 4-13
- total usage 4-13

**CE compliance C-1**

- cellular network
  - overview 2-8
  - set up 4-48
  - startup mode 4-25

**charge**

- EXPLORER 510 battery 5-6
- smartphone or tablet 3-11

**command reference B-1**

- configuration
  - copy 4-39
  - save or load 4-39
  - USB 4-16
  - WLAN 4-15

**conformity C-1****connected devices**

- manage 4-17

**connection**

- automatic shut down 4-42

**connection watchdog 4-40****connections**

- dedicated 4-32

**connectors**

- antenna A-7
- DC input A-2
- USB Host A-3

**Control panel 4-12****D****data**

- limits, set 4-42
- log 4-13
- Standard, definition 3-2
- Streaming definition 3-2
- total usage 4-13

**data connections**

- dedicated 4-32
- start and stop in web interface 4-8

**DC input**

- connector A-2
- dedicated connections 4-32
- default IP address 2-7, 4-3
- delivery contents 2-1

**devices**

- manage 4-17

diagnostics report  
 create 4-21, 5-17  
 disposal 5-6

## E

Event log 4-21  
 extended L-band  
 frequencies A-4

## F

factory settings  
 restore 4-37  
 FCC compliance C-1  
 fixed position for terminal 2-16  
 forward port 4-34  
 frequencies  
 extended L-band A-4  
 I-4 A-4

## G

GNSS  
 select system 4-28  
 troubleshooting 5-9

## H

HTTP, redirect to HTTPS 4-47

## I

I-4  
 frequencies A-4  
 IC compliance C-1  
 included items 2-1  
 indicator, Status LED 5-11  
 indicator, WLAN 5-12  
 initial inspection 2-1  
 insert SIM card 2-2  
 Internet connection mode  
 setting 4-27  
 IP address  
 for web interface 2-7, 4-3  
 local, setting up 4-27  
 IP connection  
 monitoring 4-40  
 items included 2-1

## L

LAN  
 automatic activation of 4-30  
 connect an IP handset 2-13  
 language  
 change in web interface 4-28  
 LED on front panel 5-11

light indicator 5-11  
 limit  
 allowed kB 4-42  
 allowed time 4-42  
 data 4-42  
 limiting user access 4-37  
 link monitoring 4-40  
 load configuration 4-39  
 log  
 of calls 4-13  
 of data connections 4-13  
 of events 4-21  
 log in as administrator 4-36  
 log out as administrator 4-37

## M

MAC address  
 connected devices 4-17  
 manage connected devices 4-17  
 maximum for data 4-42  
 monitoring the external IP connection 4-40  
 monitoring the terminal 4-41

## N

navigation in web interface 4-5  
 network  
 cellular or BGAN 2-8  
 select startup mode 4-25

## P

password  
 change 4-36  
 log in 4-36  
 log out 4-37  
 reset 4-23  
 permissions  
 setting for users 4-37  
 phone call 3-9  
 PIN  
 changing for BGAN 4-38  
 changing for cellular network 4-39  
 enabling or disabling for BGAN 4-38  
 enabling or disabling for cellular network 4-39  
 enter in web interface 4-7  
 ping command from the terminal 4-40  
 point the antenna again 2-10  
 pointing  
 audio assisted 2-9  
 pointing process  
 restarting 2-10  
 port forwarding 4-34  
 position  
 troubleshooting 5-9

Power connector A-2  
 power supply  
   AC/DC adapter A-4

## R

recovery  
   software 5-4  
 remote management  
   access using AT commands 3-8  
   access using web interface 3-6  
   activation with SMS 3-5  
   preparation 3-7  
   set up in web interface 4-43  
 remove SIM card 2-2  
 repoint the antenna 2-10  
 report  
   diagnostics 4-21, 5-17  
 Reset button  
   change function 4-46  
 restore factory settings 4-37  
 rights for users  
   in web interface 4-37  
 router mode 4-27

## S

safety summary 1-ii  
 save configuration 4-39  
 semi-fixed installation 2-16  
 settings  
   in web interface 4-12  
   limit access 4-37  
   restore 4-37  
 SIM card  
   insert 2-2  
   remove 2-2  
   short description 1-4  
 smartphone  
   charge via USB 3-11  
 SMS  
   activate data connection 3-5  
 SMS commands B-3  
   list of B-1  
   parameters summary B-4, B-14  
   summary B-3  
 software  
   recovery 5-4  
   update with USB 5-3  
   update with web interface 4-22, 5-2  
 sound during pointing 2-9  
 Standard data  
   definition 3-2  
 Status  
   view in web interface 4-10

Streaming data  
   definition 3-2

## T

tablet  
   charge via USB 3-11  
 Terminal watchdog  
   setup in web interface 4-41  
 Thrane IP Handset  
   enable or disable 4-46  
 total usage 4-13  
 tracking the terminal 3-11  
   setup in web interface 4-33  
 Traffic control 4-17  
 troubleshooting 5-7  
 troubleshooting guide 5-7  
 typography used in this manual 1-v

## U

update software 4-22, 5-2  
   USB 5-3  
 usage  
   calls and data 4-13  
 USB  
   charge smartphone or tablet 3-11  
   configure 4-16  
   connector A-3  
   update software 5-3  
 user password  
   change 4-36  
 user permissions  
   setting up in web interface 4-37

## W

warning messages 3-11, 4-21  
 warranty 5-1  
 watchdog  
   connection 4-40  
   terminal 4-41  
 web interface  
   accessing 4-3  
   change language 4-28  
   definition 4-3  
   navigating 4-5  
 what's in the delivery 2-1  
 WLAN  
   automatic activation of 4-30  
   configure 4-15

