

A-PATCH-0026-V2

Packing Check List


Item	Description	Quantity
<i>For A-PATCH-0026-V2</i>		
1.	A-PATCH-0026-V2 Antenna	1
2.	M6 Bolt - SS	4
3.	M6 Star Washer – SS	4
<i>Universal 'L' Bracket Kit</i>		
4.	Bracket Universal L-Shaped DC Die Cast	1
5.	M6 x 90mm U-Bolt SS	2
6.	Econo bracket	2
7.	M6 Flat Washer SS	4
8.	M6 Nut SS	4
<i>Wall Mount Bracket Kit – A-BRKT-0011 (if ordered)</i>		
9.	Wall Mountl Bracket (Stainless Steel)	1
10.	6mm Easyfit Wallplugs	2
11.	Nylon Spacer	2
12.	Self Tapping Screws 6x9.5	2

Installation Instructions

Pole Mounting


1. Attach the L bracket to the antenna by means of the four M6 bolts and M6 flat washers provided. The figure below illustrates this for vertical polarisation.
2. Attach the assembly to a mast (diameter 32-50mm) using the Econo-bracket assembly as shown in the figure below
3. Use only one Econo-bracket and U- bolt mounted through different holes to achieve a desired tilt angle.

Pole Mounting

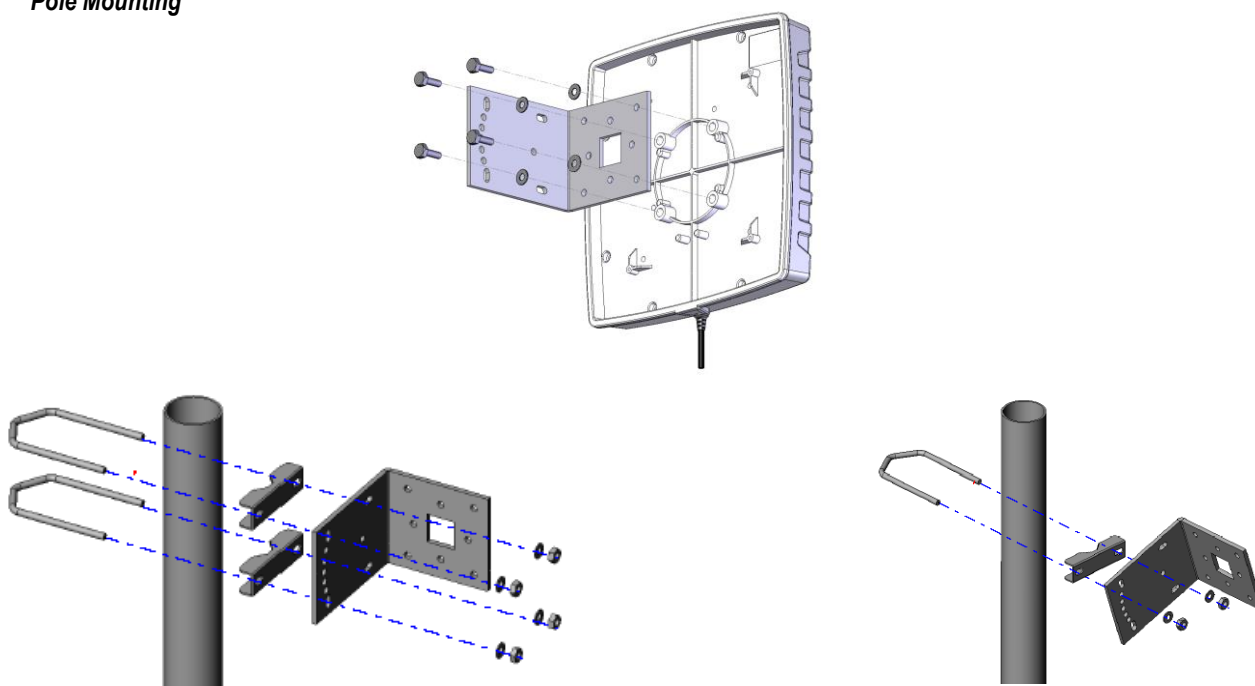


Wall Mounting

1. Leave a 3mm gap between the screw head and the boss when fastening the two bracket mounting screws to the antenna as shown below.
2. Use the bracket to mark the hole positions and drill the fischer plug holes into the wall.
3. Assemble the bracket kit and spacers as indicated and below and Hang the Antenna.

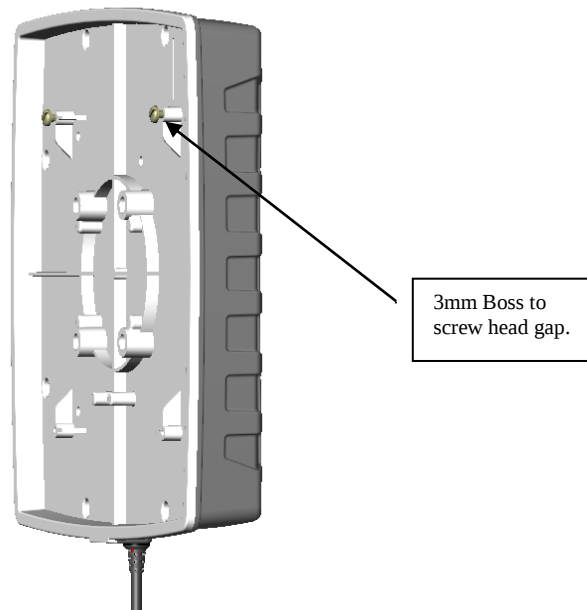

Screw Fastening Gap

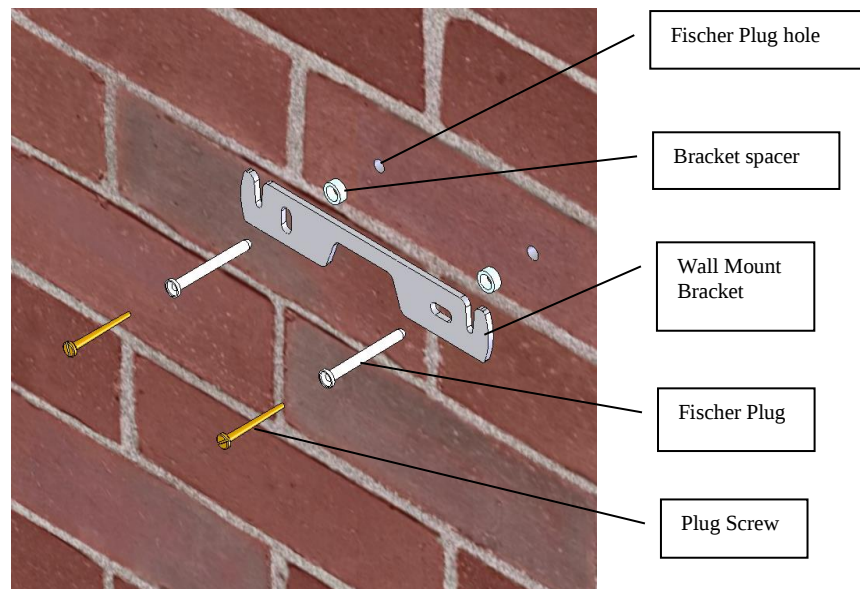

Wall Mount Preparation